

19 ± 5 N·m



N 9

7



Apply gear oil to
all moving parts
before installation.

37 ± 11 N·m

9 N

8

37 ± 11 N·m

6

5

4

19 ± 5 N·m

