

 Apply gear oil to all moving parts before installation.

