

- NOTE
- \*1: .ETACS-ECU  
.RADIO AND CD PLAYER  
.REAR COMBINATION LAMP (BACK-UP)  
.SPARE CONNECTOR (FOR AUDIO)
  - \*2: .4WD INDICATOR-ECU  
.A/C-ECU  
.COLUMN SWITCH  
.COLUMN SWITCH (STEERING WHEEL SENSOR)  
.ETACS-ECU  
.GATEWAY-ECU  
.HAZARD INDICATOR ASSEMBLY  
.SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID)  
.TRANSFER-ECU
  - \*3: .GATEWAY-ECU  
.SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID)
  - \*4: .A/C-ECU  
.AIR REFRESHER IONIZER SWITCH  
.ASC OFF SWITCH  
.COMBINATION METER  
.DRIVE MODE-SELECTOR  
.GLOVE BOX LAMP  
.HAZARD WARNING LAMP SWITCH  
.HEADLAMP MANUAL LEVELLING SWITCH  
.HEATER CONTROLLER ASSEMBLY  
.HILL DESCENT CONTROL SWITCH  
.OFF-ROAD MODE SELECTOR  
.RADIO AND CD PLAYER  
.REAR COOLER CONTROL PANEL  
.REAR DIFFERENTIAL LOCK SWITCH  
.REAR DISPLAY UNIT  
.REAR FAN SWITCH  
.SPOT LAMP  
.STEERING WHEEL REMOTE CONTROL SWITCH

