



- A/C-ECU
- BLIND SPOT WARNING SWITCH
- CLEARANCE WARNING CONTROL UNIT
- COLUMN SWITCH
- COLUMN SWITCH (STEERING WHEEL SENSOR)
- ELECTRIC PARKING BRAKE
- GATEWAY-ECU
- HAZARD INDICATOR ASSEMBLY
- SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID, SHIFT SWITCH)
- SONAR SWITCH
- TRANSFER-ECU

INPUT SIGNAL

- COLUMN SWITCH (TURN-SIGNAL LAMP SWITCH)
- HAZARD WARNING LAMP SWITCH