



NOTE - CONNECTOR NUMBERS ARE KEYED TO THE CONFIGURATION DIAGRAM (INSTRUMENT PANEL) AND EACH CIRCUIT DIAGRAM.
 - HEAVY LINES INDICATE THE PARTS CONNECTED TO THE PLATE (ONLY ON THIS PAGE TO IMPROVE LEGIBILITY).

