


- NOTE
- *1 : -ETACS-ECU
-RADIO AND CD PLAYER
-REAR COMBINATION LAMP (BACK-UP)
-SPARE CONNECTOR (FOR AUDIO)
 - *2 : -4WD INDICATOR-ECU
-A/C-ECU
-COLUMN SWITCH
-COLUMN SWITCH (STEERING WHEEL SENSOR)
-ETACS-ECU
-GATEWAY-ECU
-SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID)
-TRANSFER-ECU
 - *3 : -GATEWAY-ECU
-SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID)
 - *4 : -A/C-ECU
-ASC OFF SWITCH
-COMBINATION METER
-DRIVE MODE-SELECTOR
-GLOVE BOX LAMP
-HAZARD WARNING LAMP SWITCH
-HEADLAMP MANUAL LEVELLING SWITCH
-HEATER CONTROLLER ASSEMBLY
-HILL DESCENT CONTROL SWITCH
-OFF-ROAD MODE SELECTOR
-RADIO AND CD PLAYER
-REAR COOLER CONTROL PANEL
-REAR DIFFERENTIAL LOCK SWITCH
-REAR DISPLAY UNIT
-REAR FAN SWITCH
-STEERING WHEEL REMOTE CONTROL SWITCH

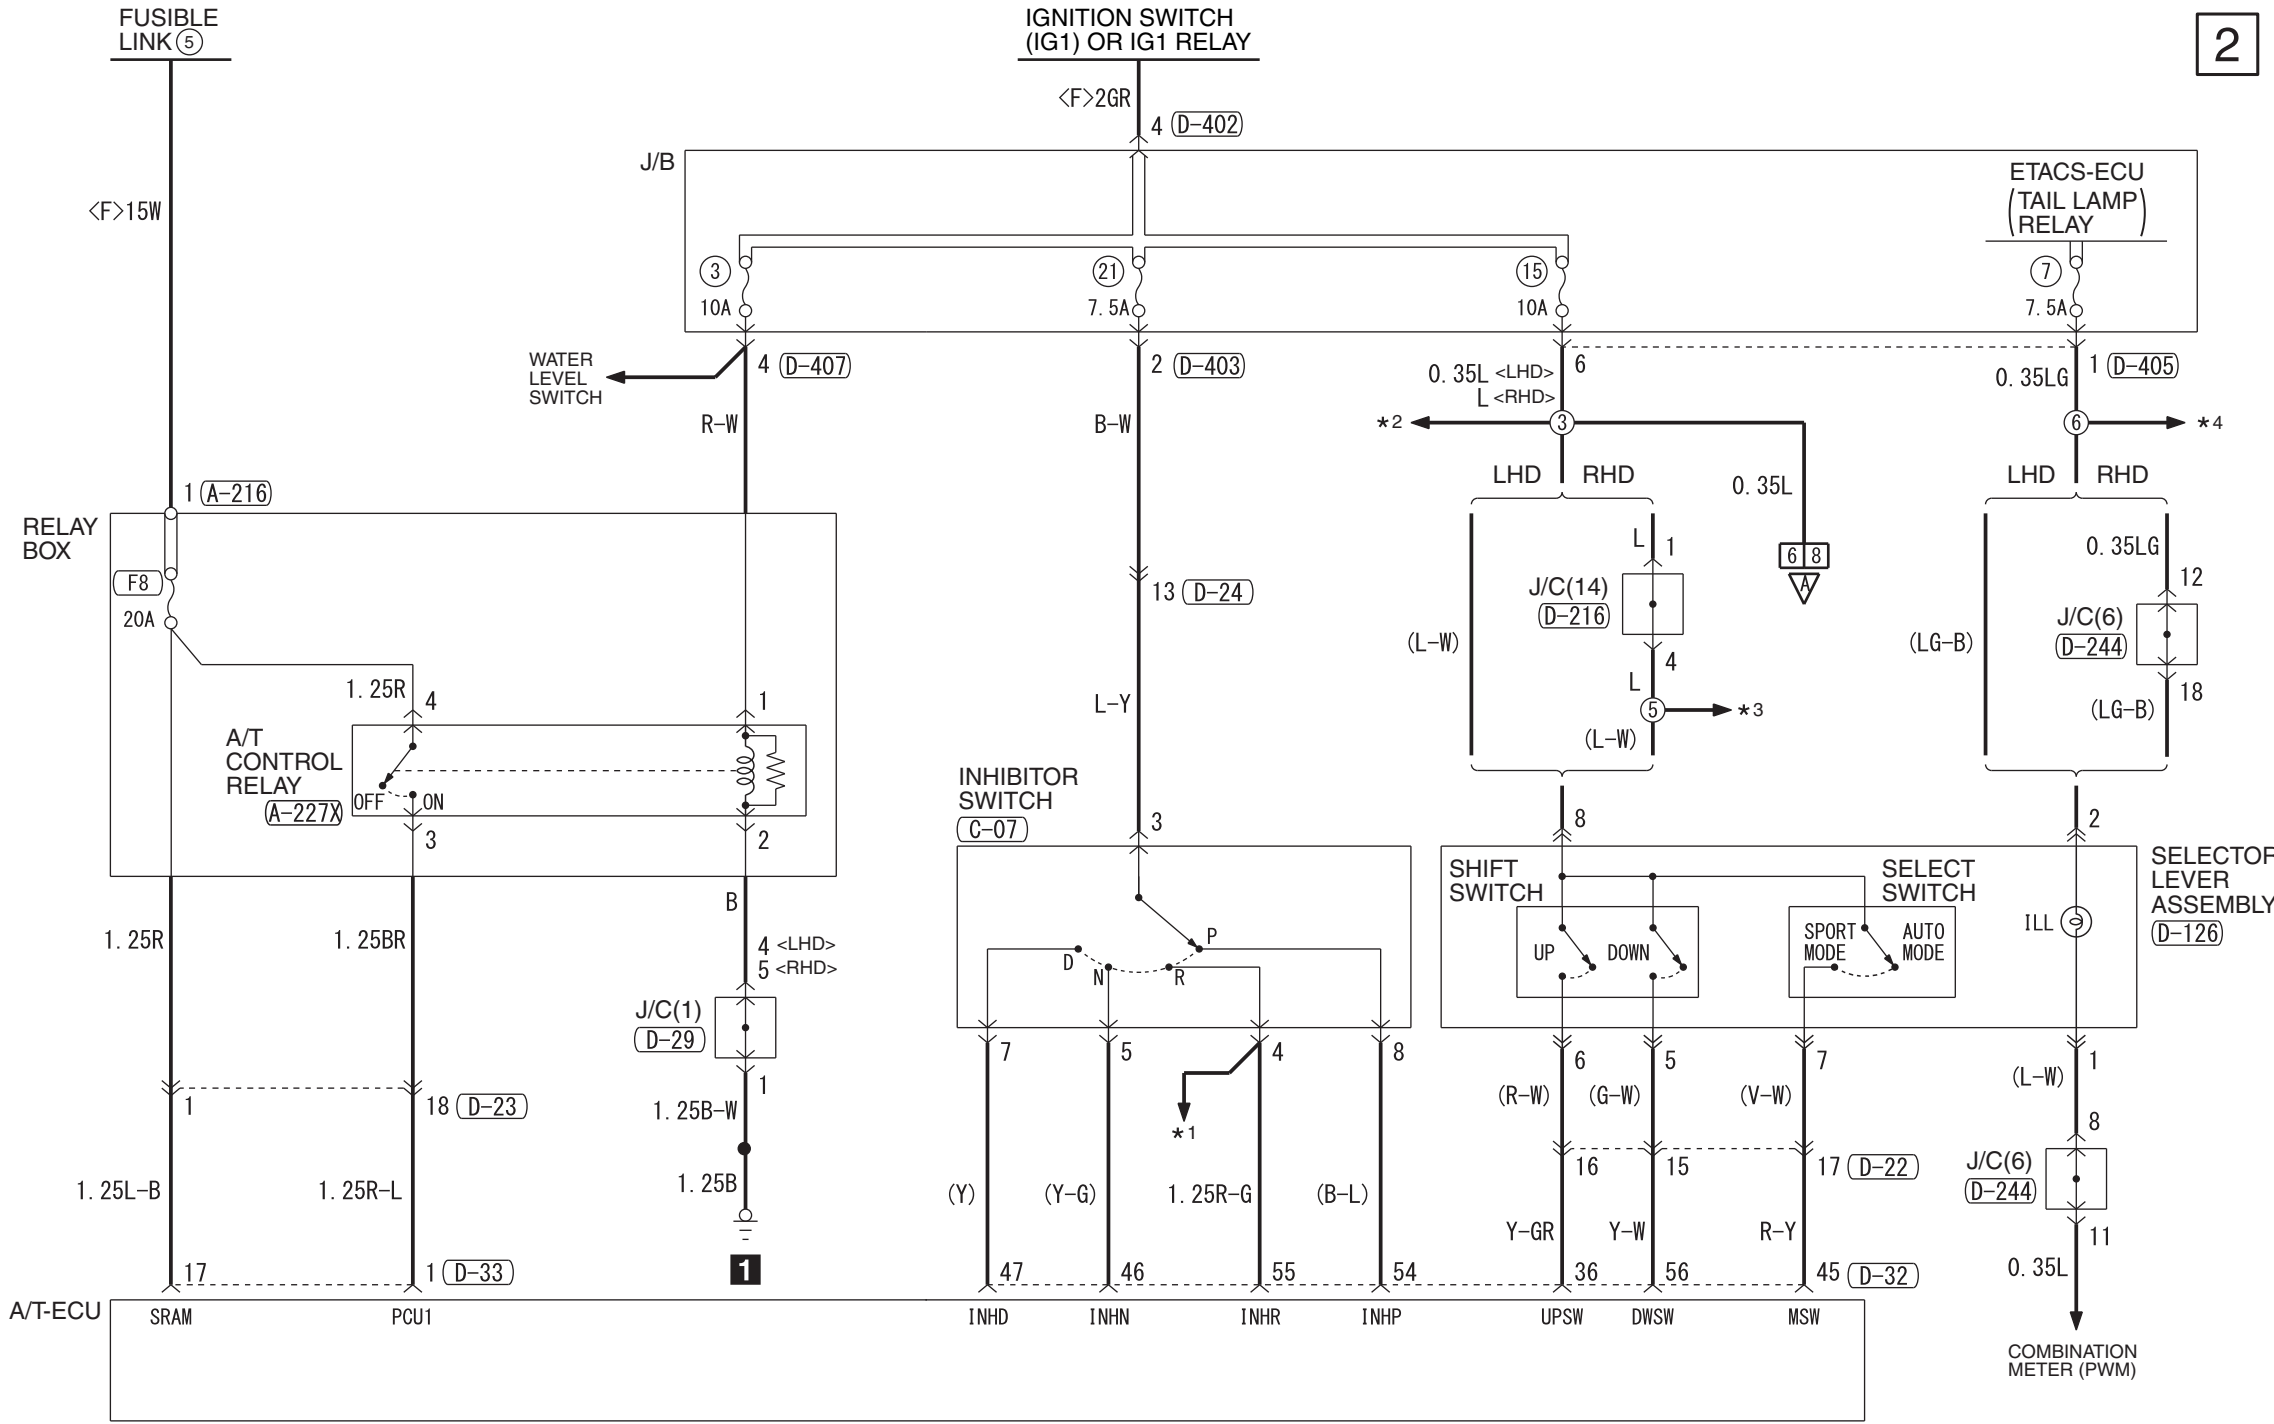

Wire colour code
 B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue BR : Brown
 O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver BE : Beige

(A-216) (A-227X) (C-07) (D-22) (D-23) (D-24) (D-29) (D-32) (D-33) (D-126) (D-216)
 (D-244) (D-402) (D-403) (D-405) (D-407)

1 2 3 4
 1 2 3 4 5 6 7 8 9 10
 11 12 13 14 15 16 17 18
 1 2 3 4 5 6 7 8 9
 10 11 12 13 14 15 16 17 18
 1 2 3 4 5 6 7 8 9 10 11 12 13 14
 15 16 17 18 19 20 21 22 23 24 25 26
 31 32 33 34 35 36
 37 38 39 40 41 42 43 44 45 46 47
 48 49 50 51 52 53 54 55 56
 1 2 3 4 5 6
 7 8 9 10 11 12 13 14 15 16
 17 18 19 20 21 22 23 24
 1 2 3 4
 5 6 7 8 9 10
 1 2 3 4
 5 6 7 8 9 10