

FUSIBLE LINK ②

10R

1 (D-409)

J/B ⑫

15A

13 (D-403)

W-B

16


DIAGNOSIS CONNECTOR (D-119)

4

5

8

A/T-ECU (D-21)

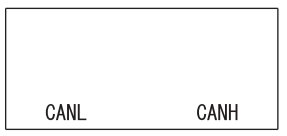

75 <T> (B-W) 13 <T> (R) 76 14 (D-22)

<T>0.35G <T>0.35BR 12 1

J/C (CAN2) (D-141)

18 <T>0.35L <T>0.35SB 7

J/C (CAN1) (D-111)


21 <T> (L-W) <T> (BR-W) 10 6

17 14 6

INPUT SIGNAL
ACCELERATOR PEDAL POSITION SENSOR



ENGINE-ECU (D-14)

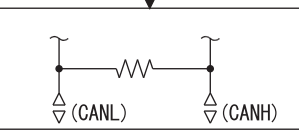

109 <T>0.35BR <T>0.35Y 108 11

22 21 10

J/C (CAN3) (A-217)


18 <T>0.35R <T>0.35G 19 (D-26)

<T>0.35P <T>0.35V 22 11

INPUT SIGNAL
FRONT WHEEL SPEED SENSOR
REAR WHEEL SPEED SENSOR



ASTC-ECU (A-32)

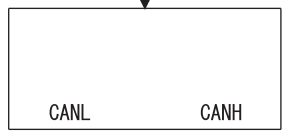

14 <T> (BR-W) <T> (L-W) 26

20 <T>0.35L <T>0.35GR 21 (D-07)

14 <T>0.35Y <T>0.35BE 3

TRANSFER-ECU



15 <T>0.35G <T>0.35SB 4

16 <T>0.35Y <T>0.35BE 5

15 (CANL) 14 (CANH)

J/B (FUSE ⑮)

1

0.35L

2 (IG+)

COMBINATION METER (D-215)

