


IGNITION SWITCH (IG1) OR IG1 RELAY



 





FRONT IMPACT SENSOR (LH) (A-16)

FRONT IMPACT SENSOR (RH) (A-25)

NOTE  
\*1 : CONNECTOR COUPLED: ON  
CONNECTOR UNCOUPLED: OFF

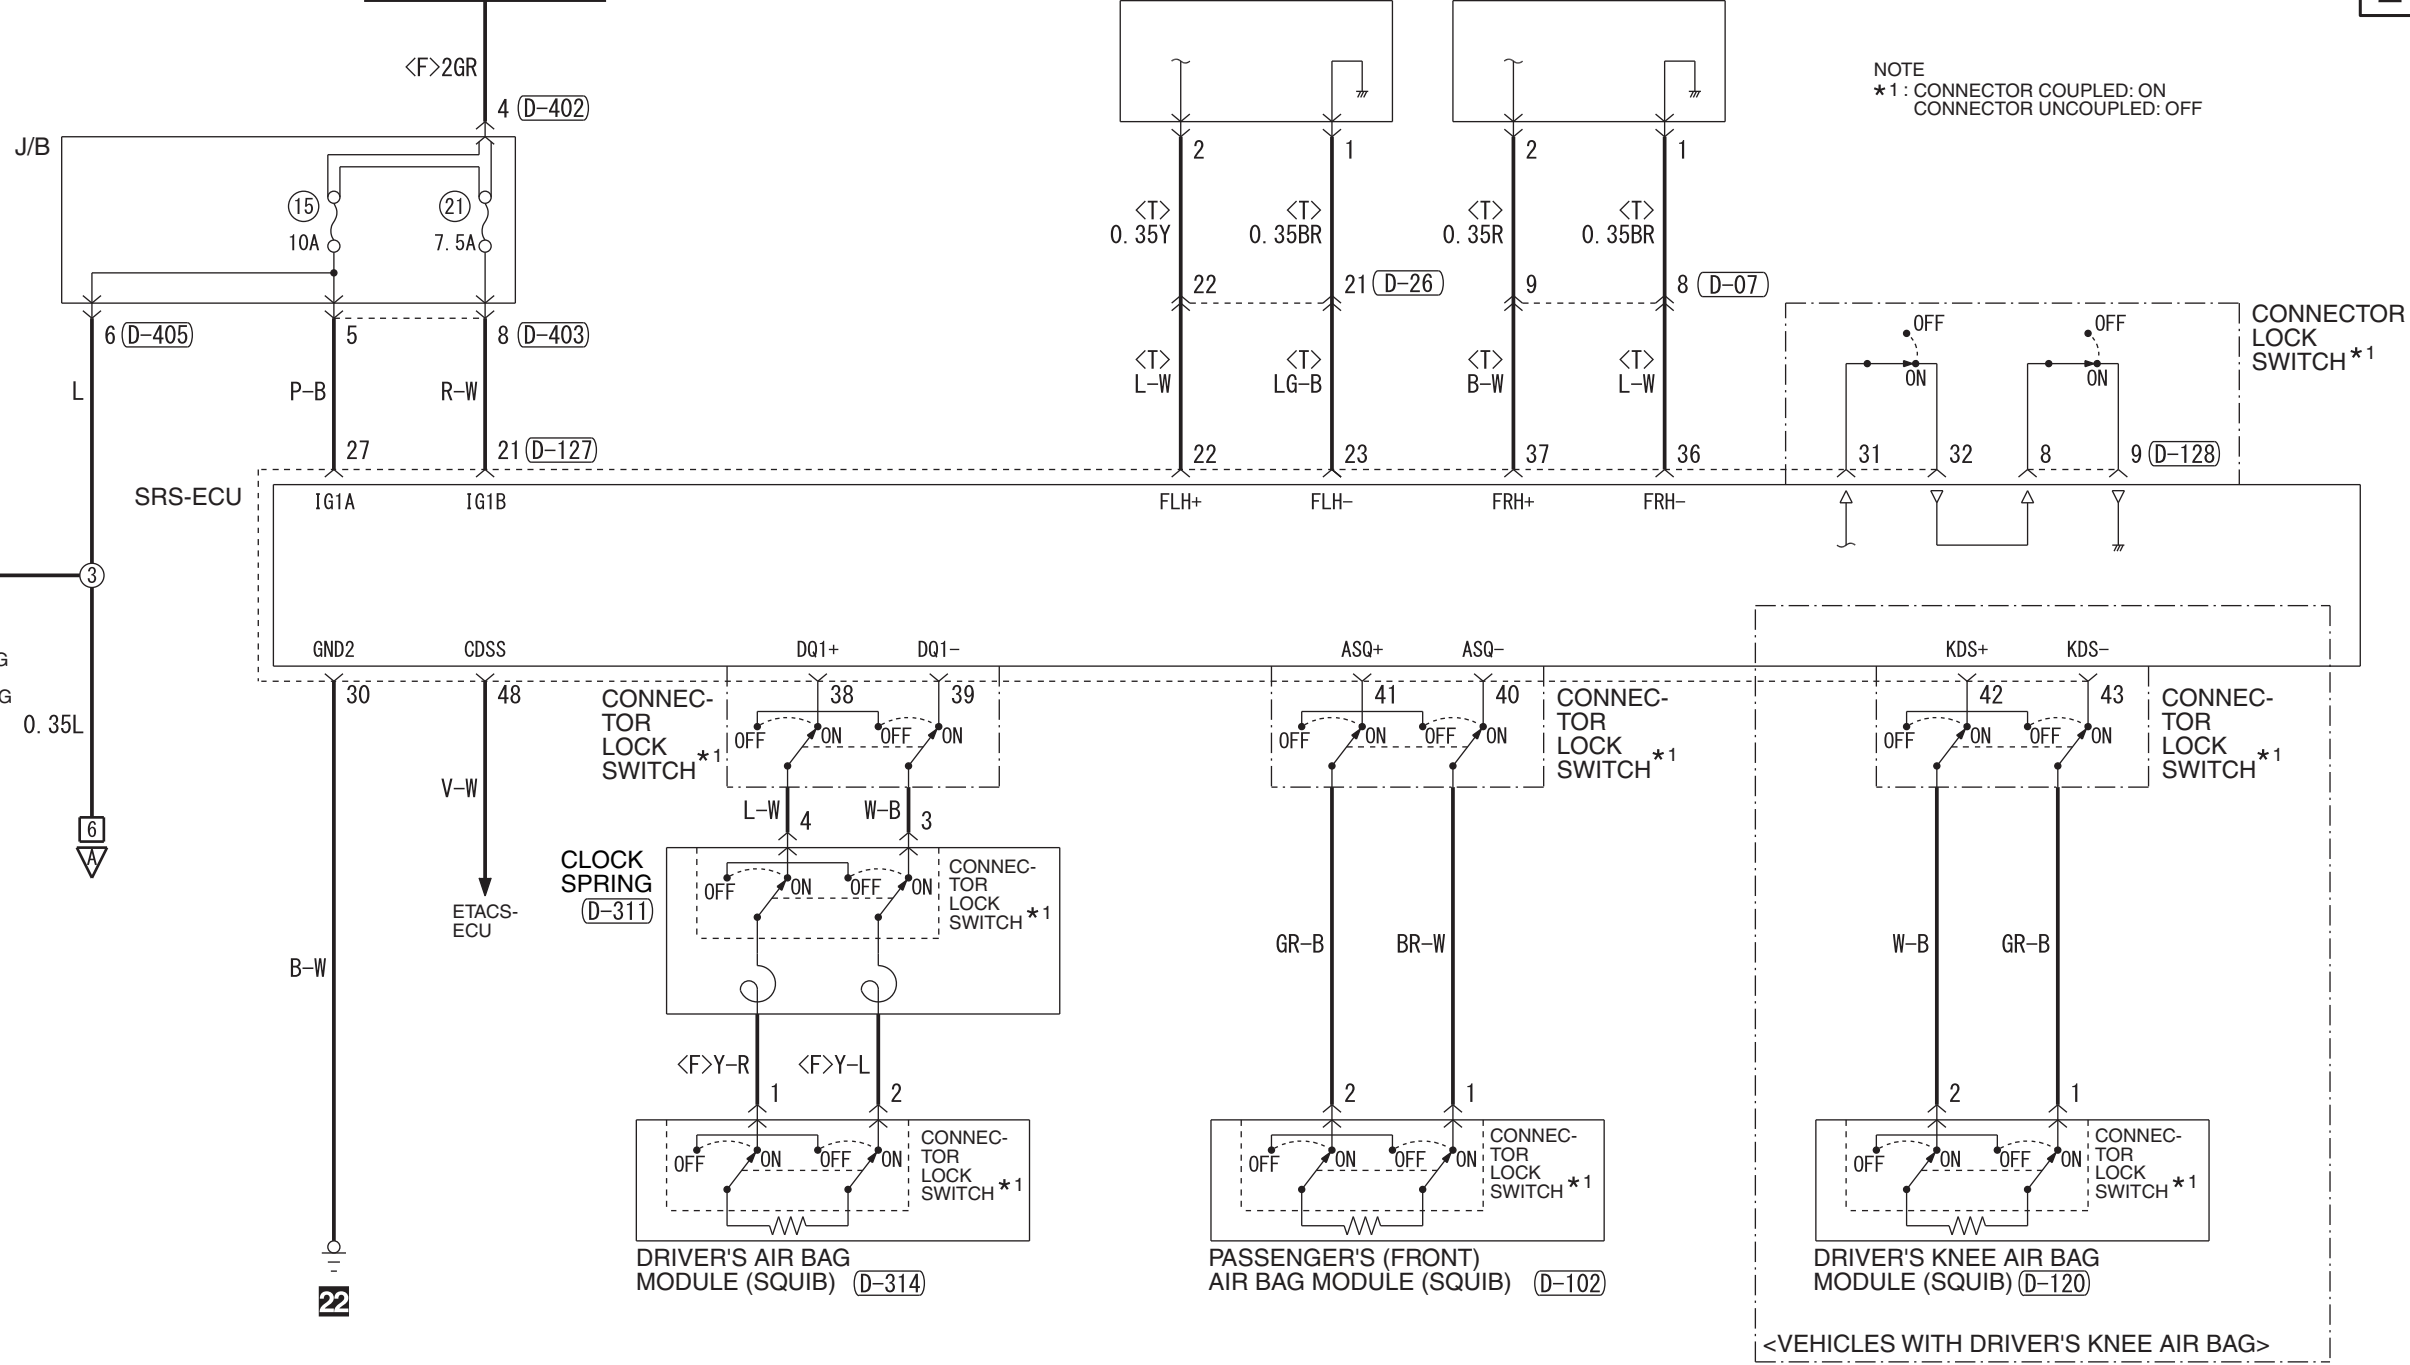

- .A/C-ECU
- .BLIND SPOT WARNING SWITCH
- .CLEARANCE WARNING CONTROL UNIT
- .COLUMN SWITCH
- .COLUMN SWITCH (STEERING WHEEL SENSOR)
- .ELECTRIC PARKING BRAKE
- .ETACS-ECU
- .GATEWAY-ECU
- .SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID, SHIFT SWITCH)
- .SONAR SWITCH
- .TRANSFER-ECU

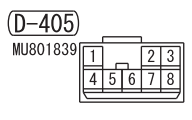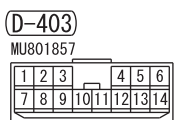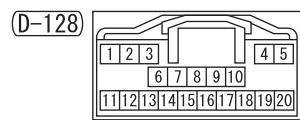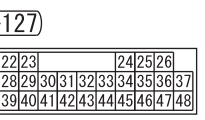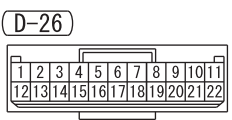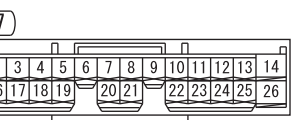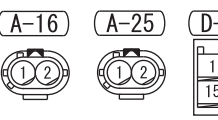

Wire colour code  
 B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue BR : Brown  
 O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver BE : Beige