



NOTE  
 \*: A/C-ECU  
 ·BLIND SPOT WARNING SWITCH  
 ·CLEARANCE WARNING CONTROL UNIT  
 ·COLUMN SWITCH  
 ·COLUMN SWITCH (STEERING WHEEL SENSOR)  
 ·COMBINATION METER  
 ·ELECTRIC PARKING BRAKE  
 ·GATEWAY-ECU  
 ·SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID, SHIFT SWITCH)  
 ·SONAR SWITCH  
 ·TRANSFER-ECU

FRONT DOOR LOCK ACTUATOR (RH) (G-10)

KEY REMINDER SWITCH (WHEN REMOVING KEY: ON) (D-306)

- A/C-ECU
- CAMERA-ECU
- CENTRE ROOM LAMP
- COLUMN SWITCH
- DOOR COURTESY LAMP
- ELECTRIC PARKING BRAKE SWITCH
- GATEWAY-ECU
- KEY REMINDER SWITCH (ILL)
- KOS&OSS-ECU
- LUGGAGE COMPARTMENT LAMP
- MULTIVISION DISPLAY
- RADIO AND CD PLAYER

