


IGNITION SWITCH (IG1) OR IG1 RELAY      FUSIBLE LINK (2)      RELAY BOX (FUSE (F22))

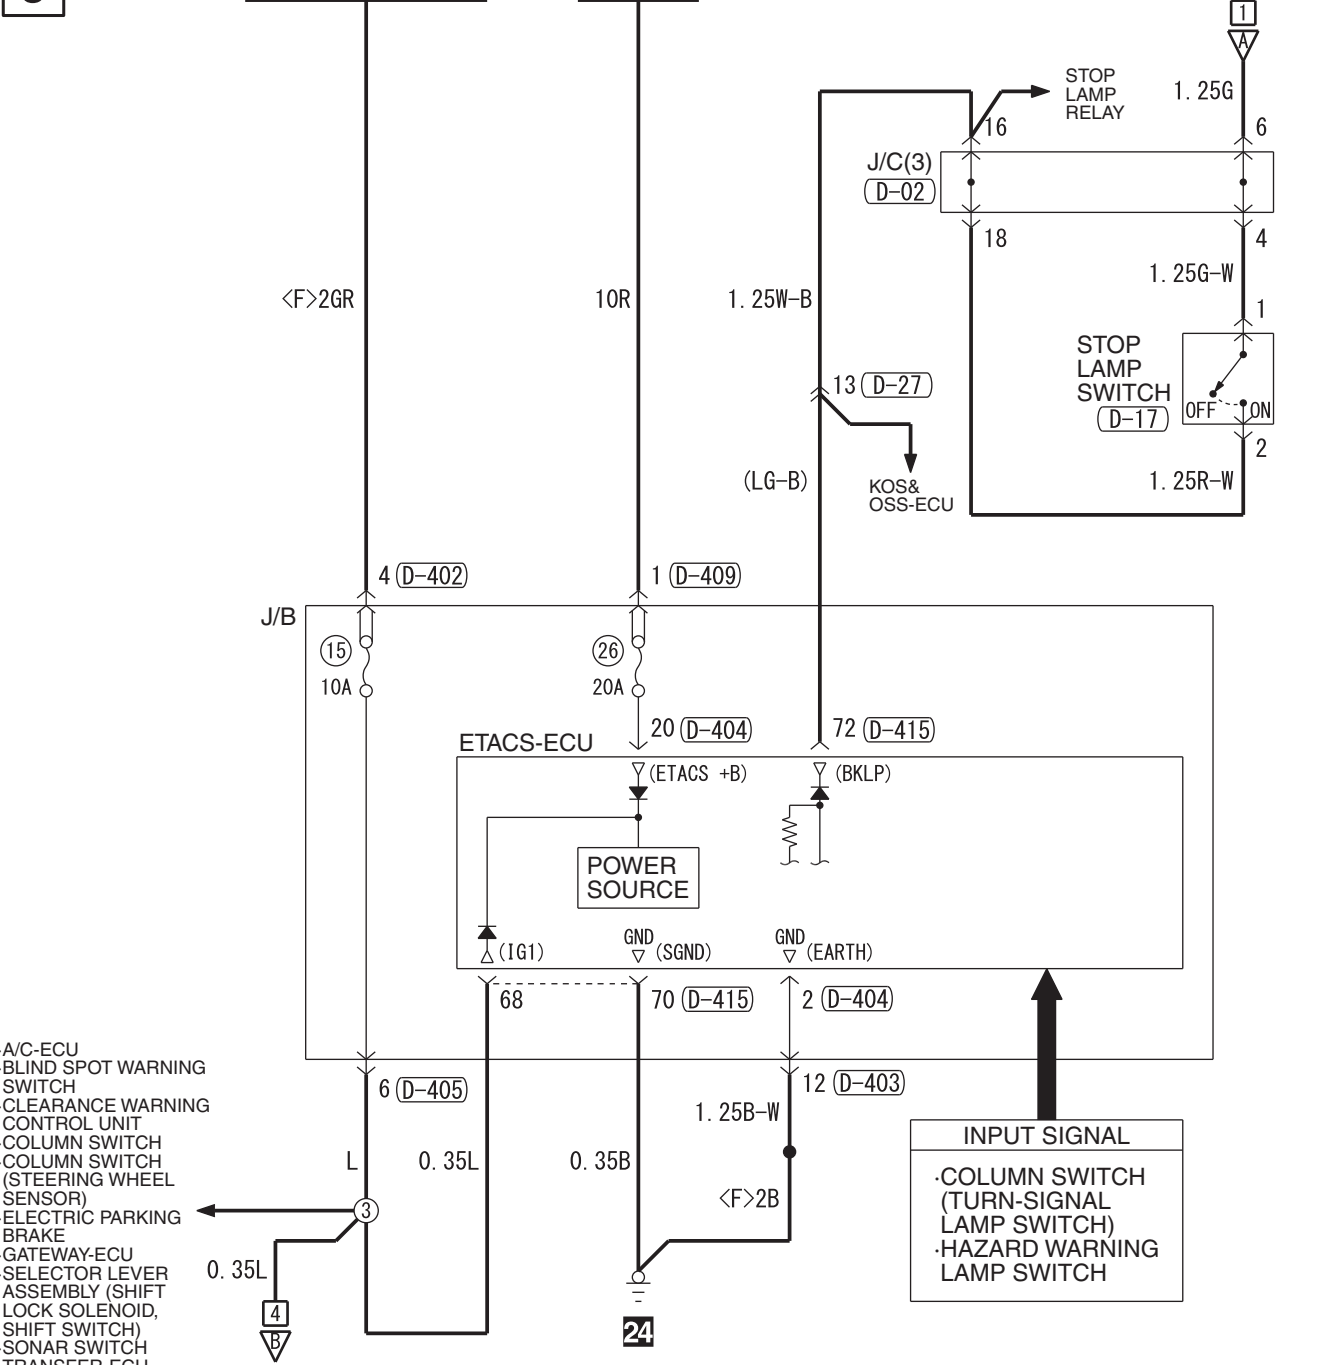

- .A/C-ECU
- .BLIND SPOT WARNING SWITCH
- .CLEARANCE WARNING CONTROL UNIT
- .COLUMN SWITCH
- .COLUMN SWITCH (STEERING WHEEL SENSOR)
- .ELECTRIC PARKING BRAKE
- .GATEWAY-ECU
- .SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID, SHIFT SWITCH)
- .SONAR SWITCH
- .TRANSFER-ECU

INPUT SIGNAL  
 .COLUMN SWITCH (TURN-SIGNAL LAMP SWITCH)  
 .HAZARD WARNING LAMP SWITCH

