


IGNITION SWITCH (IG1) OR IG1 RELAY


FRONT IMPACT SENSOR (LH) (A-16)

FRONT IMPACT SENSOR (RH) (A-25)

NOTE  
 \*1 : CONNECTOR COUPLED: ON  
 CONNECTOR UNCOUPLED: OFF  
 \*2 : VEHICLES FOR RUSSIA  
 \*3 : LHD  
 \*4 : RHD

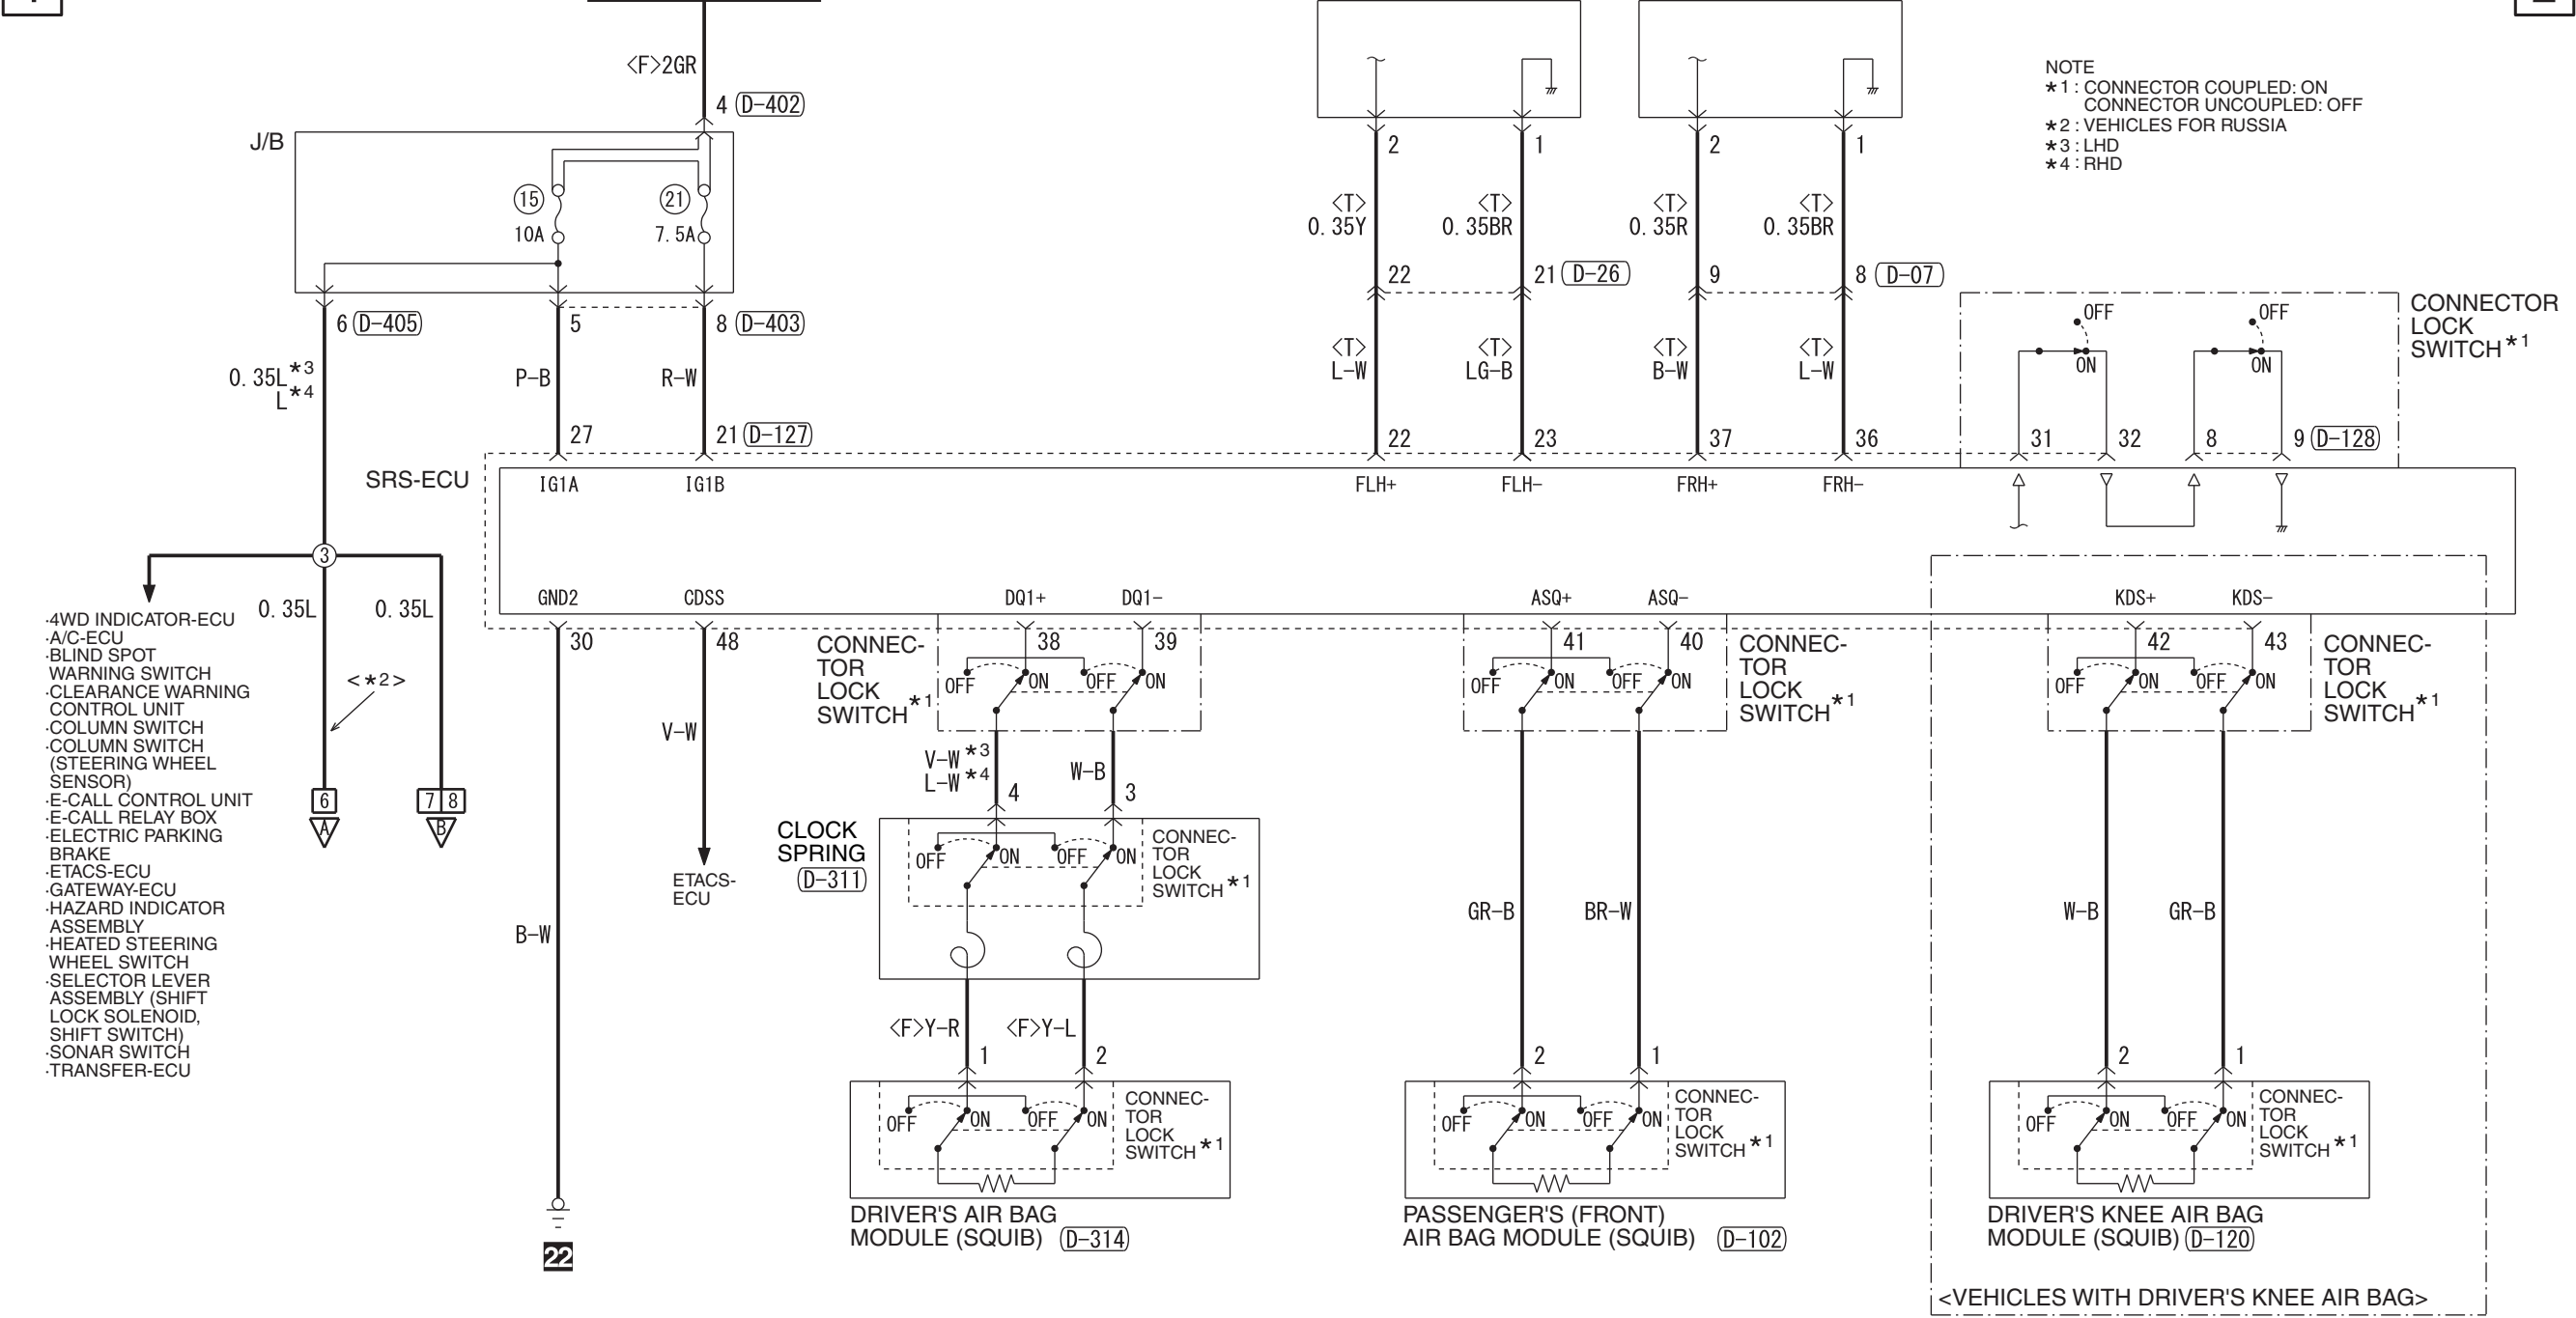

- .4WD INDICATOR-ECU
- .A/C-ECU
- .BLIND SPOT WARNING SWITCH
- .CLEARANCE WARNING CONTROL UNIT
- .COLUMN SWITCH
- .COLUMN SWITCH (STEERING WHEEL SENSOR)
- .E-CALL CONTROL UNIT
- .E-CALL RELAY BOX
- .ELECTRIC PARKING BRAKE
- .ETACS-ECU
- .GATEWAY-ECU
- .HAZARD INDICATOR ASSEMBLY
- .HEATED STEERING WHEEL SWITCH
- .SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID, SHIFT SWITCH)
- .SONAR SWITCH
- .TRANSFER-ECU

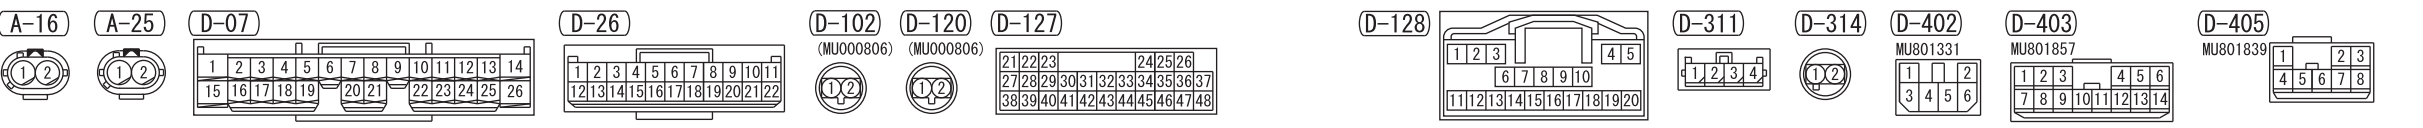

Wire colour code  
 B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue BR : Brown  
 O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver BE : Beige