


IGNITION SWITCH (IG1) OR IG1 RELAY


FRONT IMPACT SENSOR (LH) (A-16)

FRONT IMPACT SENSOR (RH) (A-25)

NOTE
 *1 : CONNECTOR COUPLED: ON
 CONNECTOR UNCOUPLED: OFF
 *2 : LHD
 *3 : RHD

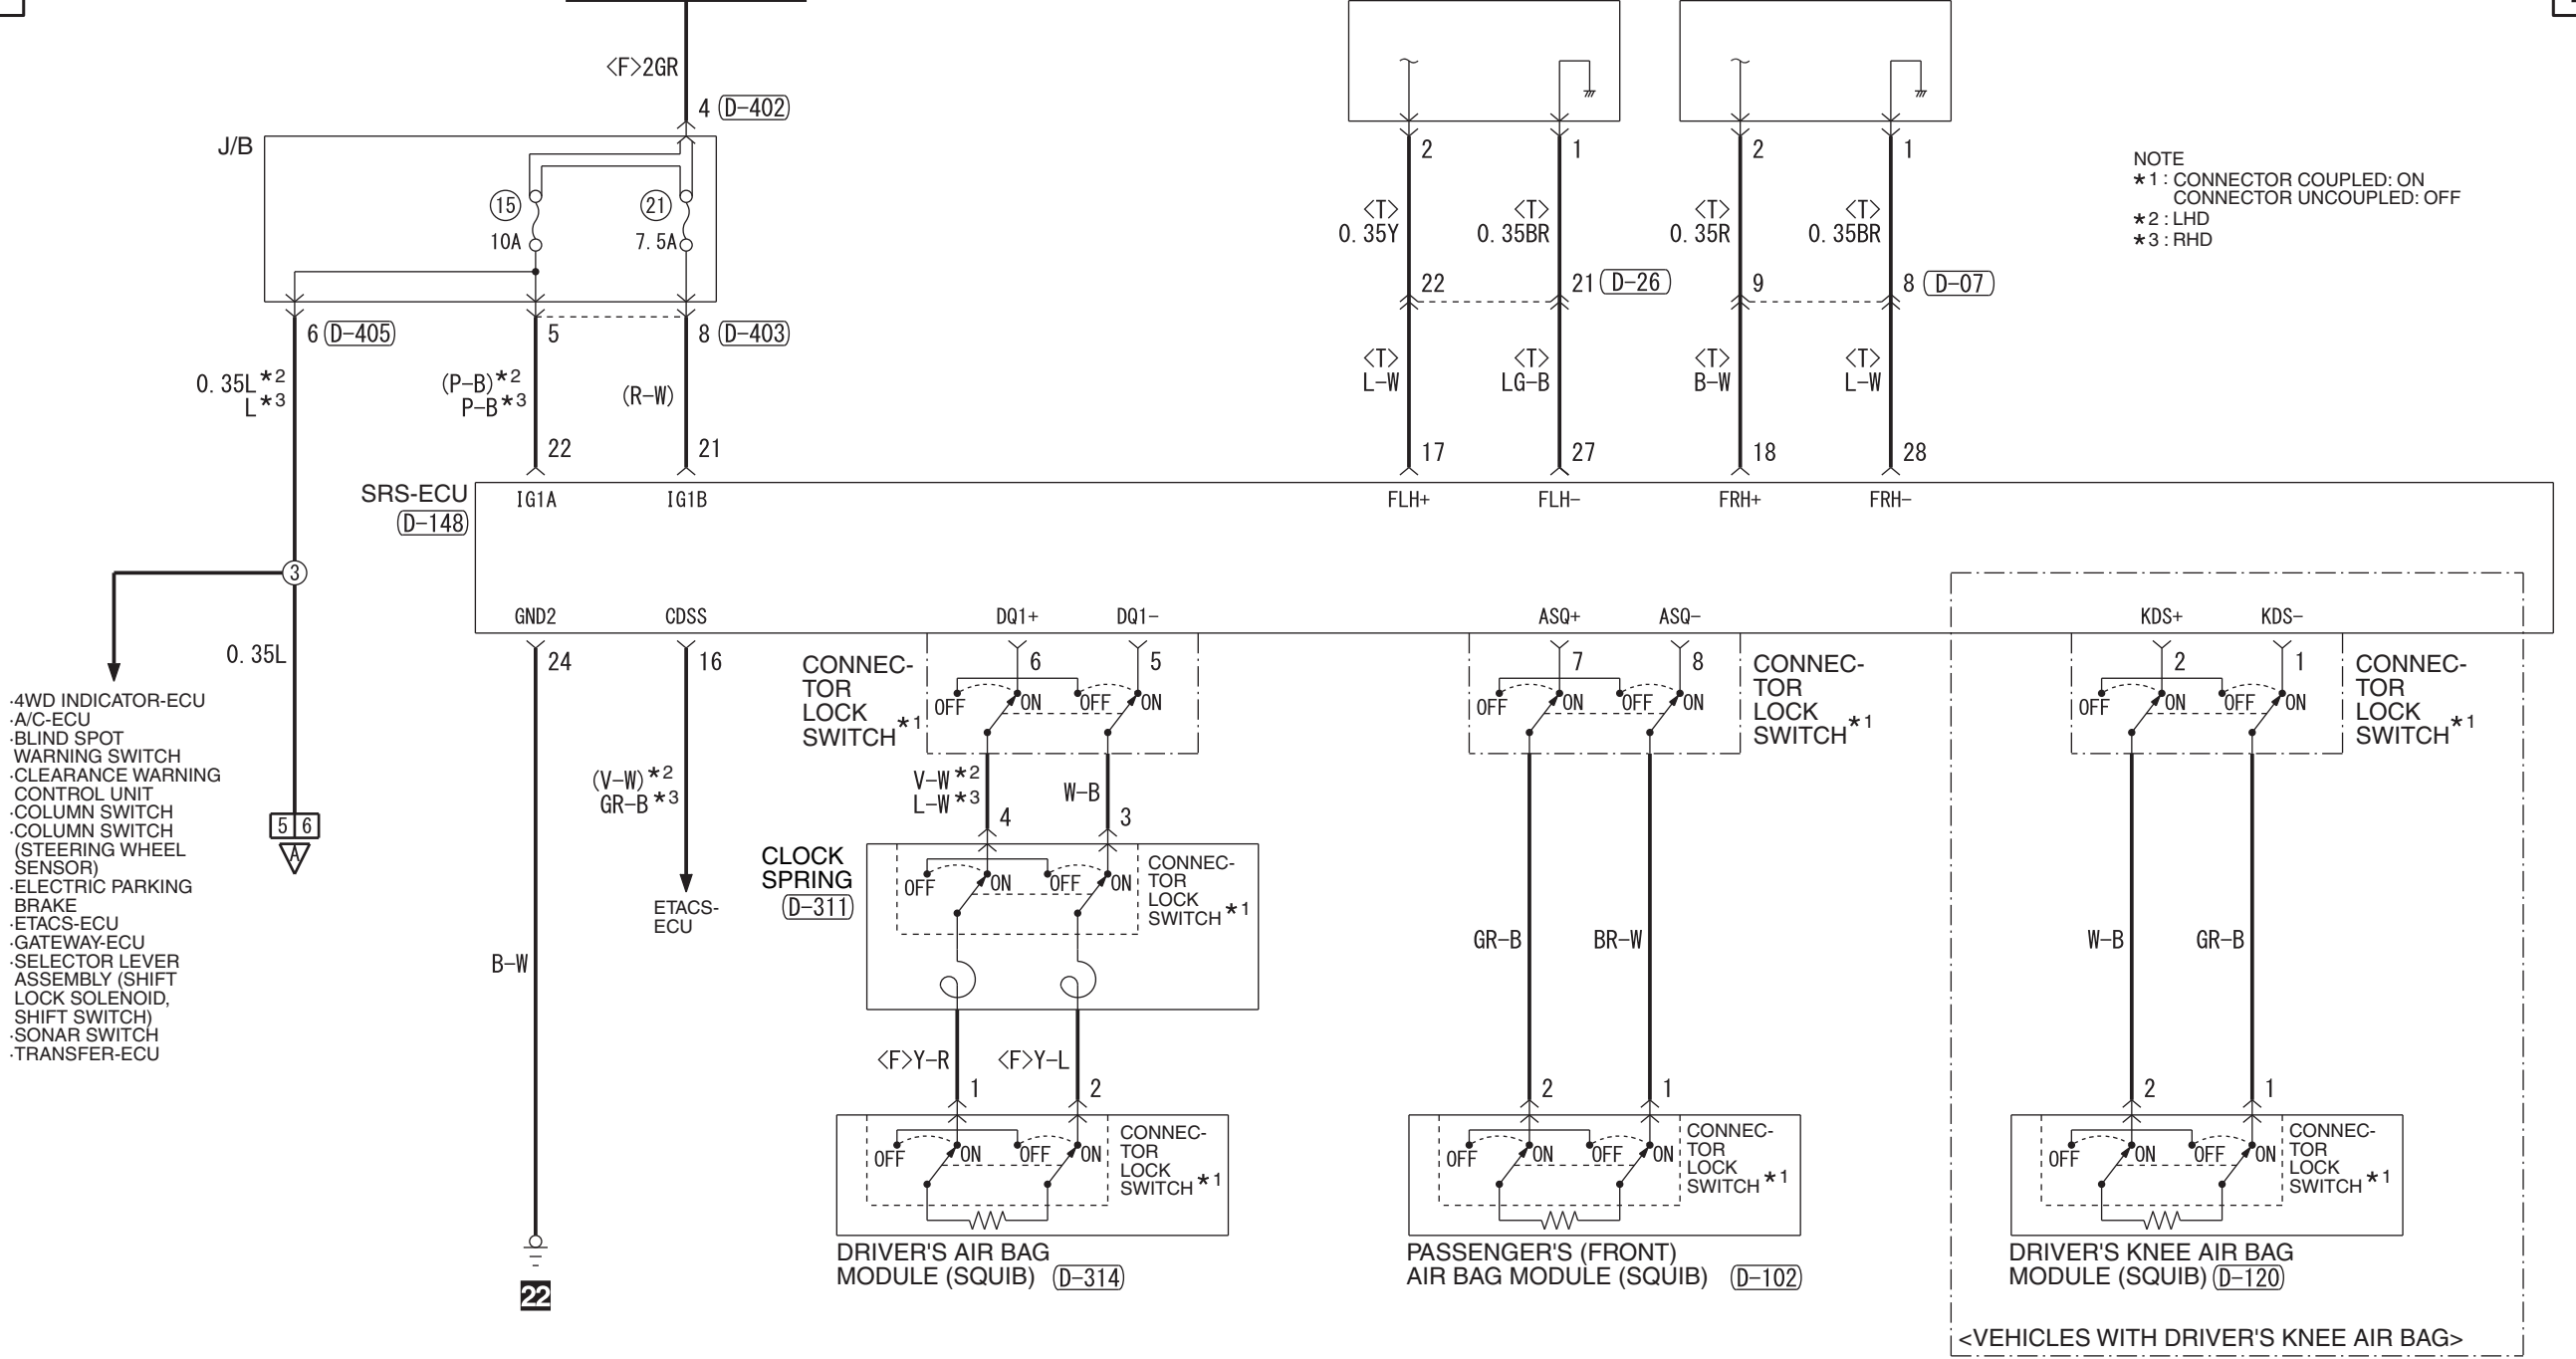

- 4WD INDICATOR-ECU
- A/C-ECU
- BLIND SPOT WARNING SWITCH
- CLEARANCE WARNING CONTROL UNIT
- COLUMN SWITCH
- COLUMN SWITCH (STEERING WHEEL SENSOR)
- ELECTRIC PARKING BRAKE
- ETACS-ECU
- GATEWAY-ECU
- SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID, SHIFT SWITCH)
- SONAR SWITCH
- TRANSFER-ECU

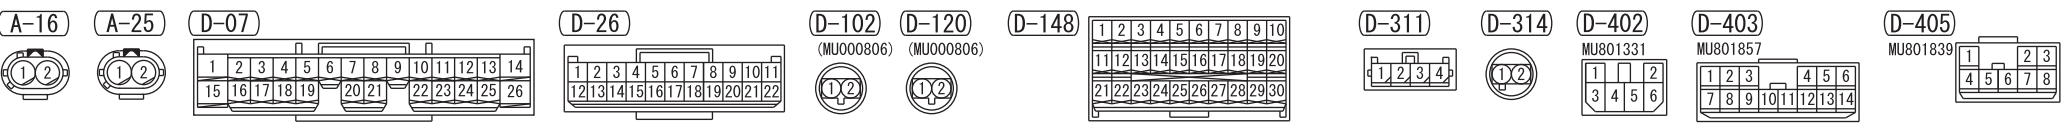

Wire colour code
 B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue BR : Brown
 O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver BE : Beige