



- NOTE  
 \*: -4WD INDICATOR-ECU  
 .A/C-ECU  
 .BLIND SPOT  
 .WARNING SWITCH  
 .CLEARANCE WARNING  
 .CONTROL UNIT  
 .COLUMN SWITCH  
 .COLUMN SWITCH  
 .COLUMN SWITCH  
 .STEERING WHEEL SENSOR)  
 .COMBINATION METER  
 .ELECTRIC PARKING BRAKE  
 .GATEWAY-ECU  
 .SELECTOR LEVER ASSEMBLY  
 .SHIFT LOCK SOLENOID,  
 .SHIFT SWITCH)  
 .SONAR SWITCH  
 .TRANSFER-ECU

- .A/C-ECU
- .CAMERA-ECU
- .CENTRE ROOM LAMP
- .COLUMN SWITCH
- .DOOR COURTESY LAMP
- .ELECTRIC PARKING
- .BRAKE SWITCH
- .GATEWAY-ECU
- .HANDS FREE-ECU
- .KEY REMINDER
- .SWITCH (ILL)
- .KOS&OSS-ECU
- .LUGGAGE
- .COMPARTMENT LAMP
- .MULTIVISION DISPLAY
- .PERSONAL LAMP
- .RADIO AND CD PLAYER

