



- NOTE
- \* : -4WD INDICATOR-ECU
  - A/C-ECU
  - BLIND SPOT WARNING SWITCH
  - CLEARANCE WARNING CONTROL UNIT
  - COLUMN SWITCH
  - COLUMN SWITCH (STEERING WHEEL SENSOR)
  - COMBINATION METER
  - ELECTRIC PARKING BRAKE
  - GATEWAY-ECU
  - SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID, SHIFT SWITCH)
  - SONAR SWITCH
  - TRANSFER-ECU

- A/C-ECU
- CAMERA-ECU
- CENTRE ROOM LAMP
- COLUMN SWITCH
- DOOR COURTESY LAMP
- ELECTRIC PARKING BRAKE SWITCH
- GATEWAY-ECU
- HANDS FREE-ECU
- KEY REMINDER SWITCH (ILL)
- KOS&OSS-ECU
- LUGGAGE COMPARTMENT LAMP
- MULTIVISION DISPLAY
- PERSONAL LAMP
- RADIO AND CD PLAYER

