


IGNITION SWITCH (IG1) OR IG1 RELAY

 
FUSIBLE LINK ②

NOTE  
 \*1: LHD  
 \*2: RHD  
 \*3: VEHICLES WITH AUTOMATIC AIR CONDITIONER

<VEHICLES WITH COOLER OR MANUAL AIR CONDITIONER>

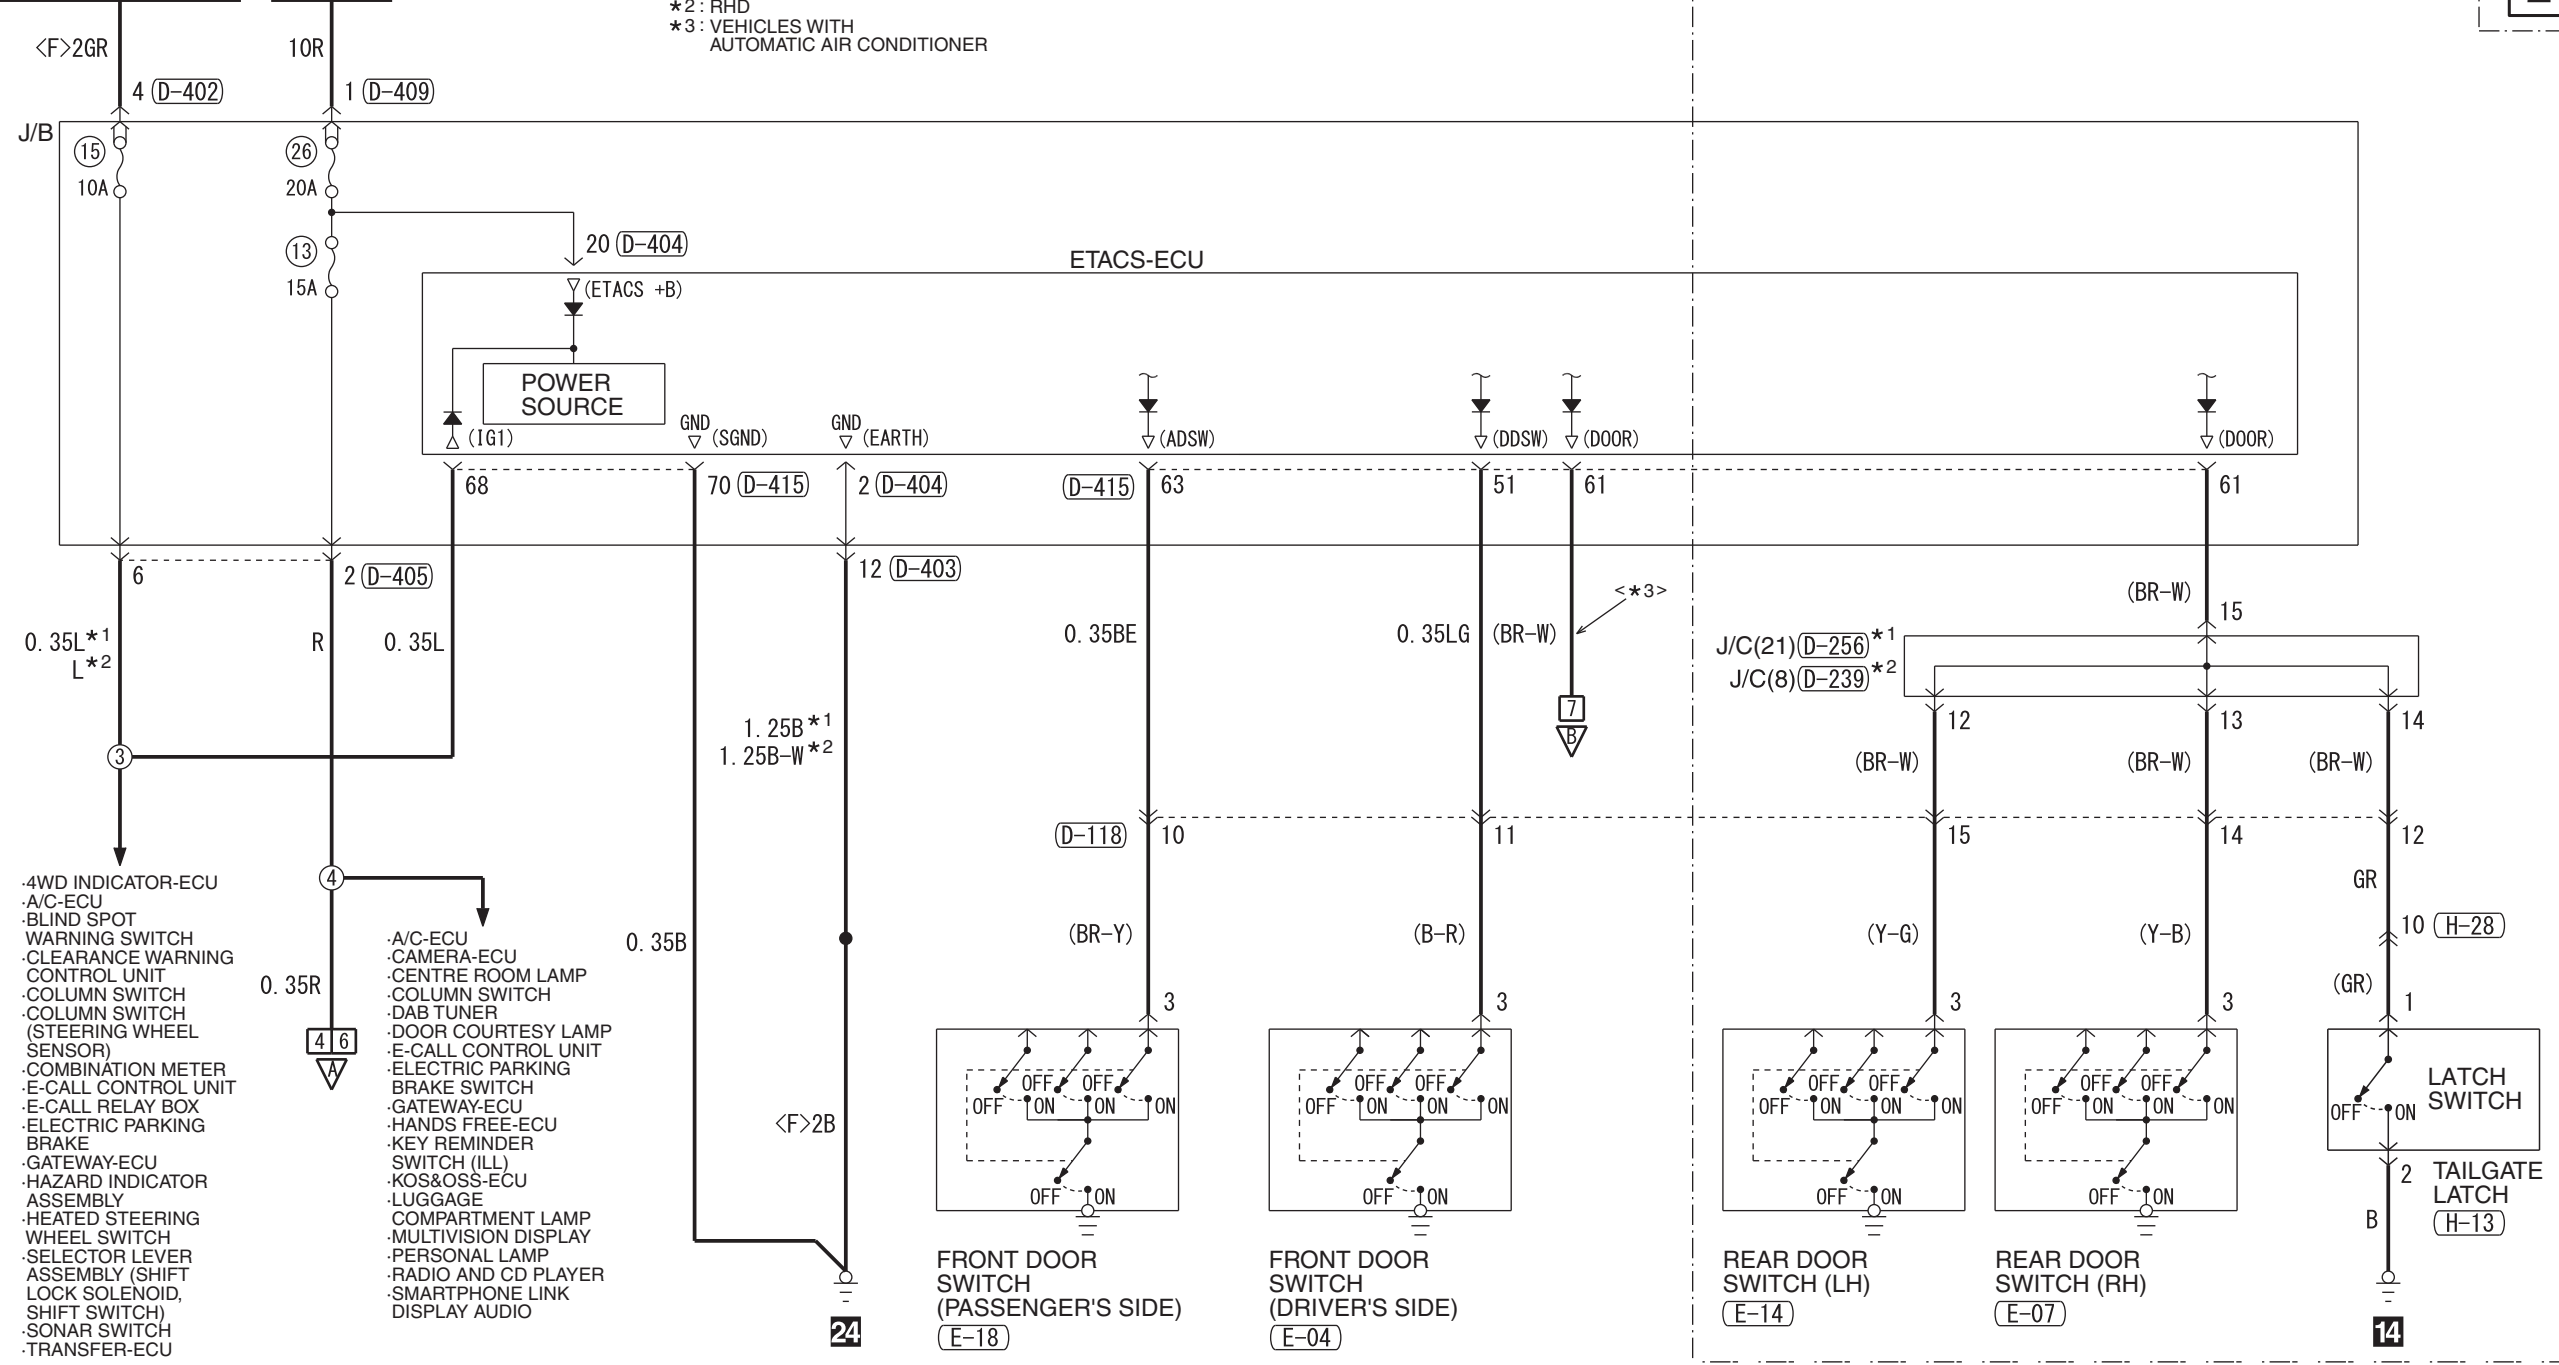

- 4WD INDICATOR-ECU
- A/C-ECU
- BLIND SPOT WARNING SWITCH
- CLEARANCE WARNING CONTROL UNIT
- COLUMN SWITCH
- COLUMN SWITCH (STEERING WHEEL SENSOR)
- COMBINATION METER
- E-CALL CONTROL UNIT
- E-CALL RELAY BOX
- ELECTRIC PARKING BRAKE
- GATEWAY-ECU
- HAZARD INDICATOR ASSEMBLY
- HEATED STEERING WHEEL SWITCH
- SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID, SHIFT SWITCH)
- SONAR SWITCH
- TRANSFER-ECU
- A/C-ECU
- CAMERA-ECU
- CENTRE ROOM LAMP
- COLUMN SWITCH
- DAB TUNER
- DOOR COURTESY LAMP
- E-CALL CONTROL UNIT
- ELECTRIC PARKING BRAKE SWITCH
- GATEWAY-ECU
- HANDS FREE-ECU
- KEY REMINDER SWITCH (ILL)
- KOS&OSS-ECU
- LUGGAGE COMPARTMENT LAMP
- MULTIVISION DISPLAY
- PERSONAL LAMP
- RADIO AND CD PLAYER
- SMARTPHONE LINK DISPLAY AUDIO



Wire colour code  
 B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue BR : Brown  
 O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver BE : Beige