




<When Engine-ECU is replaced (Vehicles without KOS)>

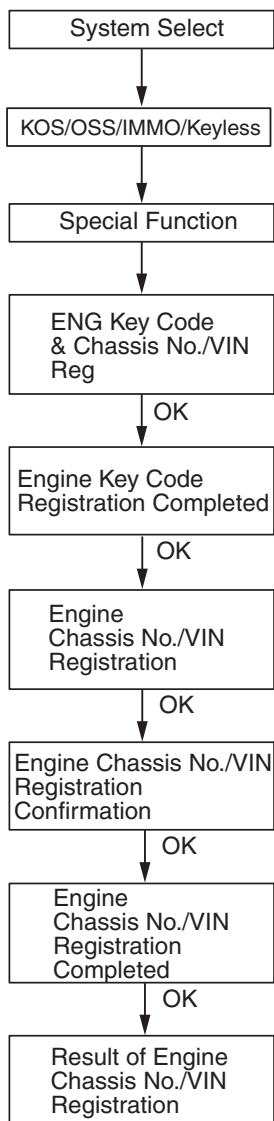

<When Engine-ECU is replaced (Vehicles with KOS)>

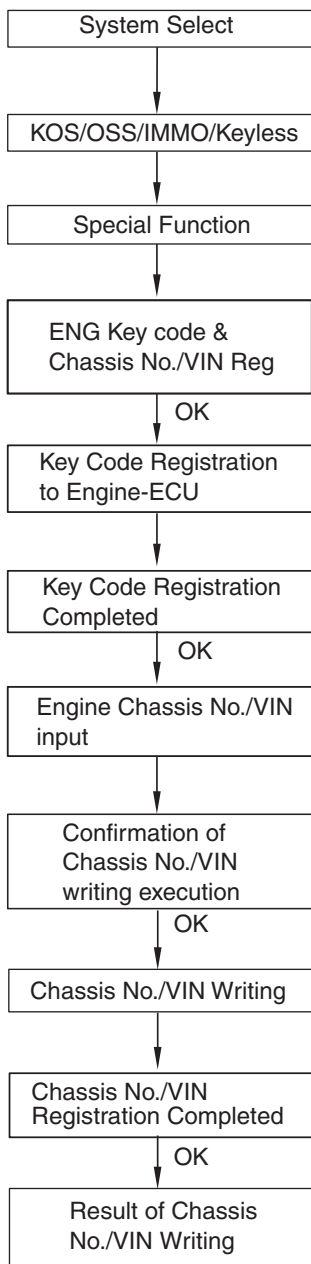

<When ETACS-ECU, KOS&OSS-ECU or Electric steering lock are replaced>

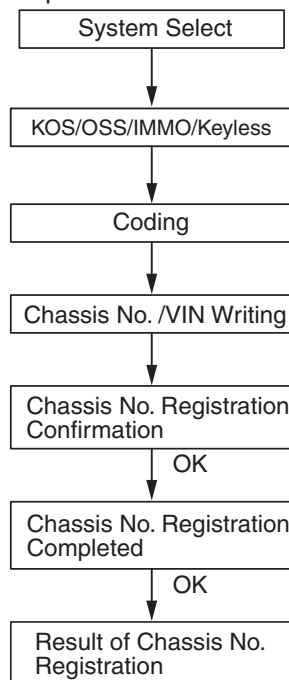

<When ETACS-ECU is replaced>

