




 Apply engine oil to  
 all moving parts  
 before installation.