


★1 Air flow sensor	● Accelerator pedal position sensor (main)
★2 Intake air temperature sensor	● Accelerator pedal position sensor (sub)
★3 Throttle position sensor (main)	● Alternator FR terminal
★4 Throttle position sensor (sub)	● Alternator L terminal
★5 Manifold absolute pressure sensor	● Fin thermo sensor <vehicles with cooler or A/C>
★6 Camshaft position sensor	● A/C switch
★7 Crank angle sensor	● Power steering fluid pressure switch
★8 Engine coolant temperature sensor	● Vehicle speed sensor
★9 Detonation sensor	● Oil pressure switch
★10 Oxygen sensor (front)	● Ignition switch-IG
★11 Oxygen sensor (rear) <EURO4>	● Ignition switch-ST
	● Power supply
	● CAN communication (input signal)

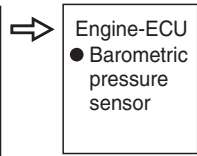

★1 Injector	● Ignition coil
★2 Throttle valve control servo	● Engine control relay
★3 Purge control solenoid valve	● Fuel pump relay
	● Starter relay
	● Throttle valve control servo relay
	● Alternator G terminal
	● Oxygen sensor (front) heater
	● Oxygen sensor(rear) heater <EURO4>
	● A/C compressor relay
	● A/C condenser fan relay <vehicles with condenser fan>
	● CAN communication (output signal)

