

## Engine-ECU Connector

1	2		3	4					5	6		7	8	41	42	43				44	45	46	71	72	73	74				75	76	77	101	102		103	104				105	106	107							
9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	47	48	49	50	51	52	53	54	55	56	57	78	79	80	81	82	83	84	85	86	87	88	89	108	109	110	111	112	113	114	115	116	117	118	119	120
24	25		26	27	28	29		30	31	32	33		34	35	58	59		60	61	62	63		64	65	66	90	91		92	93	94		95	96		97	98	121	122	123		124	125		126	127	128		129	130