

## Engine-ECU harness side connector

107	106	105					104	103		102	101	77	76	75				74	73	72	71	46	45	44				43	42	41	8	7		6	5				4	3		2	1							
120	119	118	117	116	115	114	113	112	111	110	109	108	89	88	87	86	85	84	83	82	81	80	79	78	57	56	55	54	53	52	51	50	49	48	47	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9
130	129		128	127	126		125	124		123	122	121	98	97		96	95		94	93	92		91	90	66	65	64		63	62	61	60		59	58	35	34		33	32	31	30		29	28	27	26		25	24