



19 ± 5 N·m

 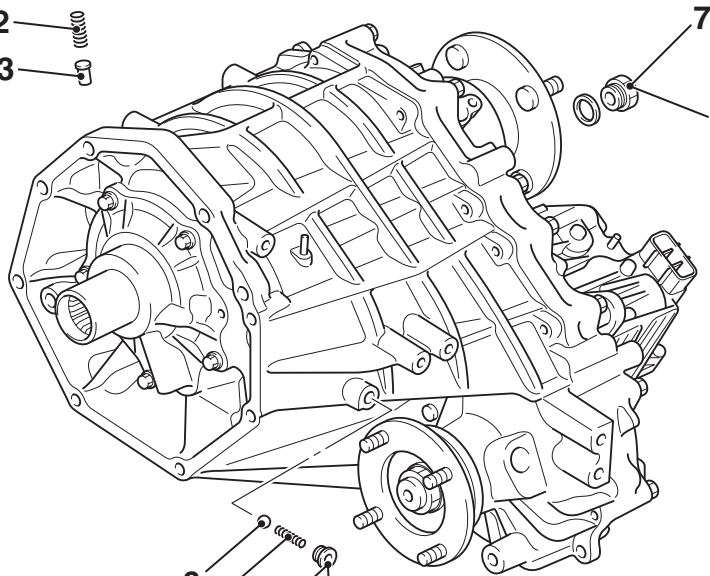


Apply gear oil to all moving parts before installation.

37 ± 11 N·m

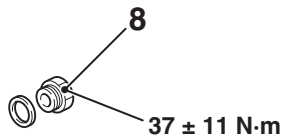

37 ± 11 N·m



19 ± 5 N·m