



Apply gear oil to all moving parts before installation.