

69



18 ± 5 N·m



64

18 ± 5 N·m



 
 

61

61



60

59

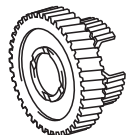

54

58

56

57


55

51

53

52

50

 Apply gear oil to all moving parts before installation.