


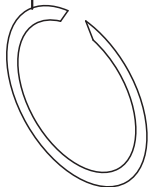


Apply gear oil to
all moving parts
before installation.

N 1



2

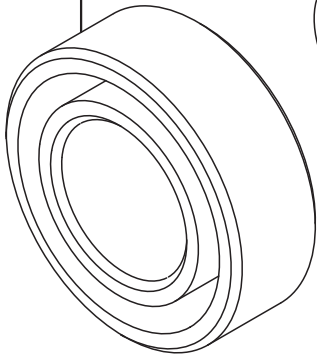

3

