

Display

S P K R C H E C K

C O N N E C T

F L Front door speaker and tweeter (LH)

Press the button D.

F R Front door speaker and tweeter (RH)

Press the button D.

R L Rear door speaker (LH)

Press the button D.

R R Rear door speaker (RH)

Press the button D.