



Inside/outside
air changeover lever

The diagram shows a line drawing of a car's interior air control system. A central air changeover lever is highlighted with a thick black outline. It is a curved lever with a circular knob at the top and a circular knob at the bottom. The lever is positioned in the 'inside air recirculation' position, which is indicated by a thick black outline around the lever and the text 'Inside air recirculation position shown'. A line points from the text 'Inside/outside air changeover lever' to the lever. The lever is connected to a complex mechanical assembly of pipes and components. The background shows a grid pattern representing the car's interior structure.

**Inside air recirculation
position shown**

ACE02138AB