★1 Throttle position sensor (main) ★2 Throttle position sensor (sub) ★3 Intake air temperature sensor ★4 Manifold absolute pressure sensor ★5 Engine coolant temperature sensor ★6 Detonation sensor ★7 Camshaft position sensor ★8 Crank angle sensor ★9 Oxygen sensor (front) ★10 Oxygen sensor (rear)* ★11 Brake booster pressure sensor	● Accelerator pedal position sensor (main) ● Accelerator pedal position sensor (sub) ● Oil pressure switch ● Alternator FR terminal ● Alternator L terminal ● Battery current sensor <Vehicles for Thailand> ● Vehicle speed sensor <M/T - vehicles without ABS> ● A/C pressure sensor ● Fin thermo sensor ● Blower fan signal <Manual A/C, Cooler> ● Brake monitoring switch <CVT> ● Ignition switch-IG ● Ignition switch-ST ● Power supply ● CAN communication (input signal)	⇨	Engine-ECU	⇨	☆1 Throttle valve control servo ☆2 Injector ☆3 Oil feeder control valve ☆4 Purge control solenoid valve	● Ignition coil ● Engine control relay ● Fuel pump relay ● Starter relay ● Throttle valve control servo relay ● Alternator G terminal ● Oxygen sensor (front) heater ● Oxygen sensor (rear) heater* ● A/C compressor relay ● Cooling fan control relay (low) <CVT(Except vehicles for Thailand and Malaysia)> ● Cooling fan control relay (high) <CVT (Except vehicles for Thailand and Malaysia)> ● Cooling fan control relay <M/T, CVT (Vehicles for Thailand and Malaysia)> ● CAN communication (output signal)

*: Except vehicles with single oxygen sensor

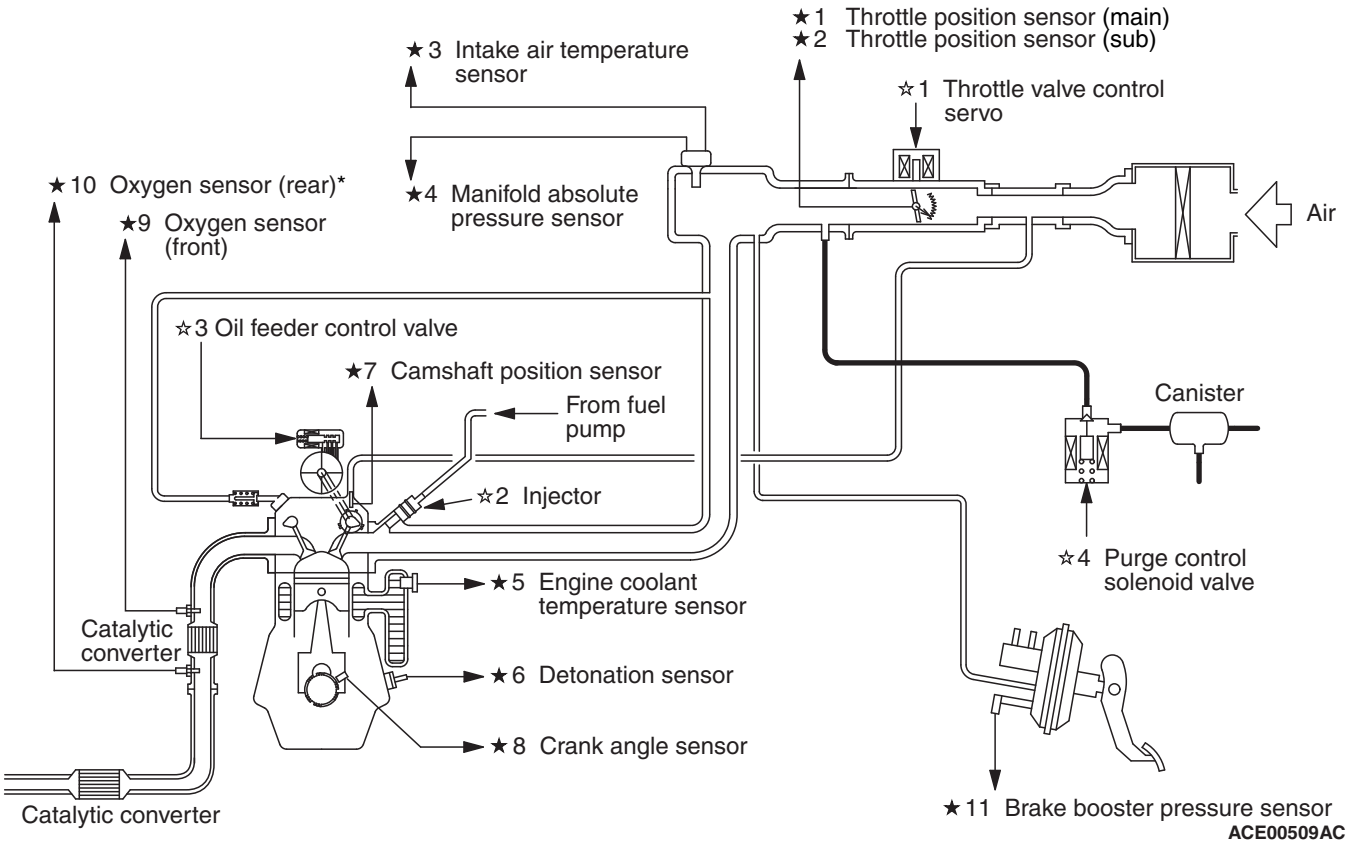

ACE00509AC