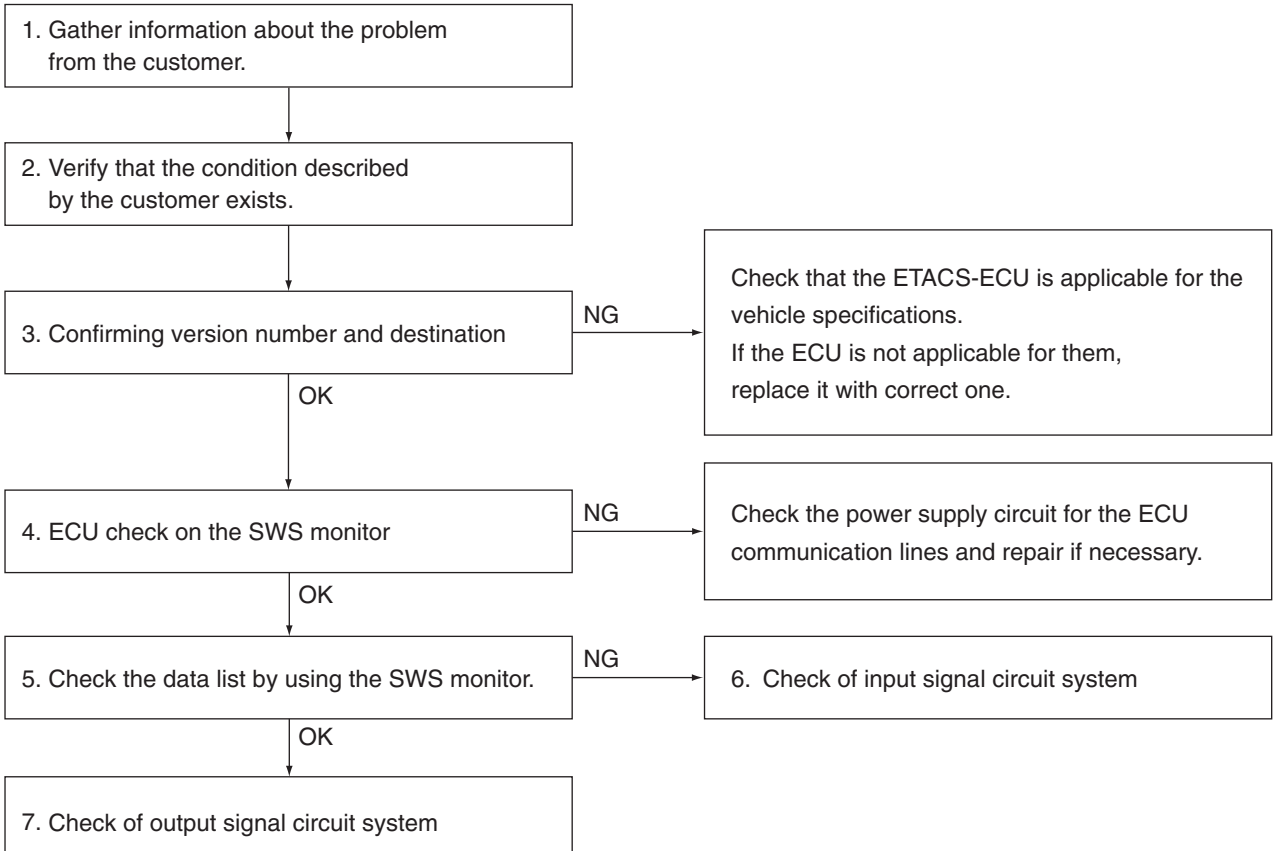
1. Gather information about the problem from the customer.
2. Verify that the condition described by the customer exists.
3. Confirming version number and destination
NG
Check that the ETACS-ECU is applicable for the vehicle specifications.
If the ECU is not applicable for them, replace it with correct one.
OK
4. ECU check on the SWS monitor
NG
Check the power supply circuit for the ECU communication lines and repair if necessary.
OK
5. Check the data list by using the SWS monitor.
NG
6. Check of input signal circuit system
OK
7. Check of output signal circuit system
AC211883AB