| | | | | | |
|---|---|---|---|---|---|
| ★1 Throttle position sensor (main)<br>★2 Throttle position sensor (sub)<br>★3 Intake air temperature sensor<br>★4 Manifold absolute pressure sensor<br>★5 Engine coolant temperature sensor<br>★6 Detonation sensor<br>★7 Camshaft position sensor<br>★8 Crank angle sensor<br>★9 Oxygen sensor (front)<br>★10 Oxygen sensor (rear)*<br>★11 Brake booster pressure sensor | ● Accelerator pedal position sensor (main)<br>● Accelerator pedal position sensor (sub)<br>● Oil pressure switch<br>● Alternator FR terminal<br>● Alternator L terminal<br>● Vehicle speed sensor <M/T><br>● A/C pressure sensor<br>● Fin thermo sensor<br>● Blower fan signal <Manual A/C, Cooler><br>● Brake monitoring switch <CVT><br>● Ignition switch-IG<br>● Ignition switch-ST<br>● Power supply<br>● CAN communication (input signal) | ⇨ | Engine-ECU | ⇨ | ☆1 Throttle valve control servo<br>☆2 Injector<br>☆3 Oil feeder control valve<br>☆4 Purge control solenoid valve | ● Ignition coil<br>● Engine control relay<br>● Fuel pump relay<br>● Starter relay<br>● Throttle valve control servo relay<br>● Alternator G terminal<br>● Oxygen sensor (front) heater<br>● Oxygen sensor (rear) heater*<br>● A/C compressor relay<br>● Fan motor relay (low)<br>● Fan motor relay (high) <CVT (except MOROCCO)><br>● CAN communication (output signal) |
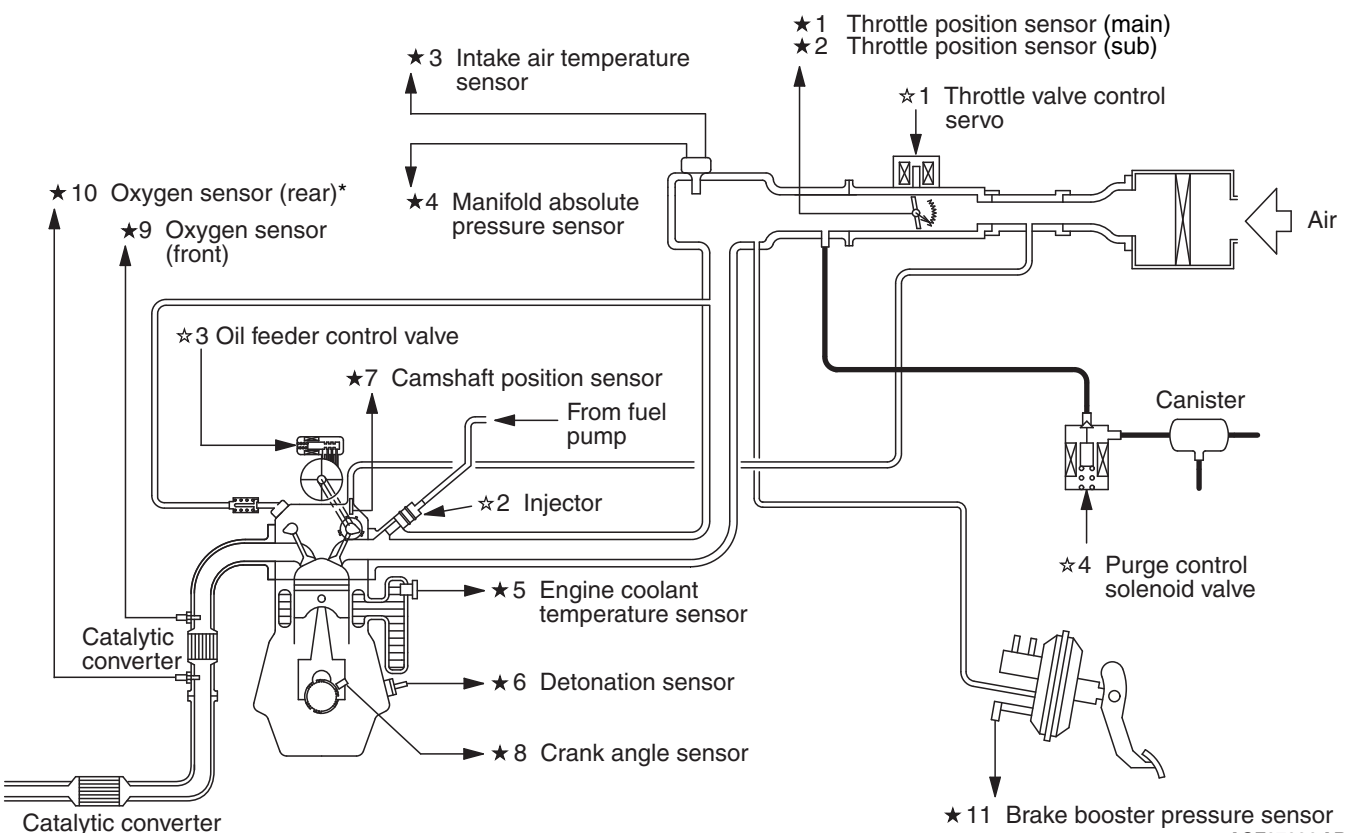
*: Except vehicles with single oxygen sensor