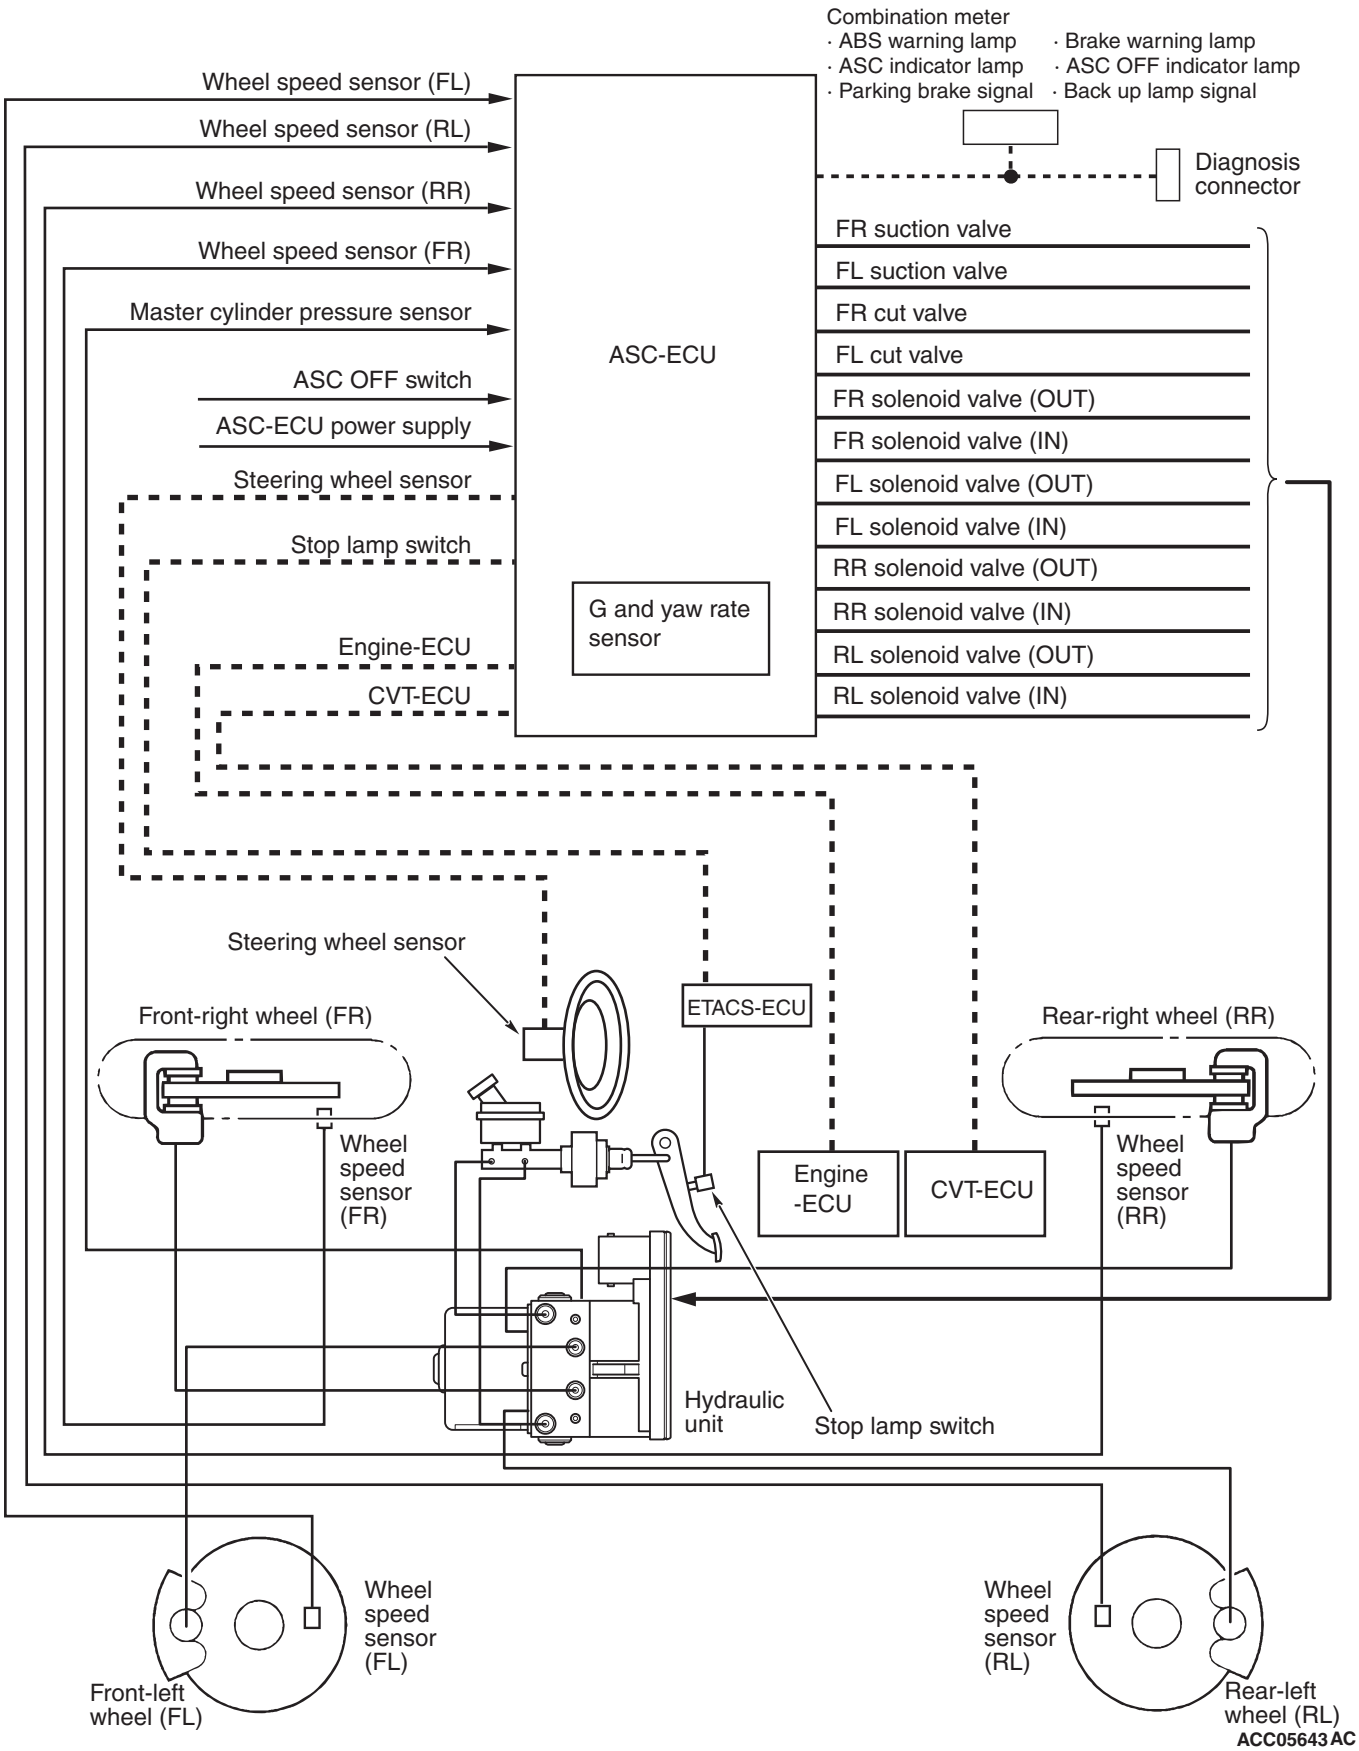
Combination meter
· ABS warning lamp
· ASC indicator lamp
· Parking brake signal
· Brake warning lamp
· ASC OFF indicator lamp
· Back up lamp signal
Diagnosis connector
Wheel speed sensor (FL)
Wheel speed sensor (RL)
Wheel speed sensor (RR)
Wheel speed sensor (FR)
Master cylinder pressure sensor
ASC OFF switch
ASC-ECU power supply
Steering wheel sensor
Stop lamp switch
Engine-ECU
CVT-ECU
ASC-ECU
G and yaw rate sensor
FR suction valve
FL suction valve
FR cut valve
FL cut valve
FR solenoid valve (OUT)
FR solenoid valve (IN)
FL solenoid valve (OUT)
FL solenoid valve (IN)
RR solenoid valve (OUT)
RR solenoid valve (IN)
RL solenoid valve (OUT)
RL solenoid valve (IN)
Steering wheel sensor
ETACS-ECU
Front-right wheel (FR)
Rear-right wheel (RR)
Wheel speed sensor (FR)
Engine -ECU
CVT-ECU
Wheel speed sensor (RR)
Hydraulic unit
Stop lamp switch
Wheel speed sensor (FL)
Front-left wheel (FL)
Wheel speed sensor (RL)
Rear-left wheel (RL)
ACC05643AC