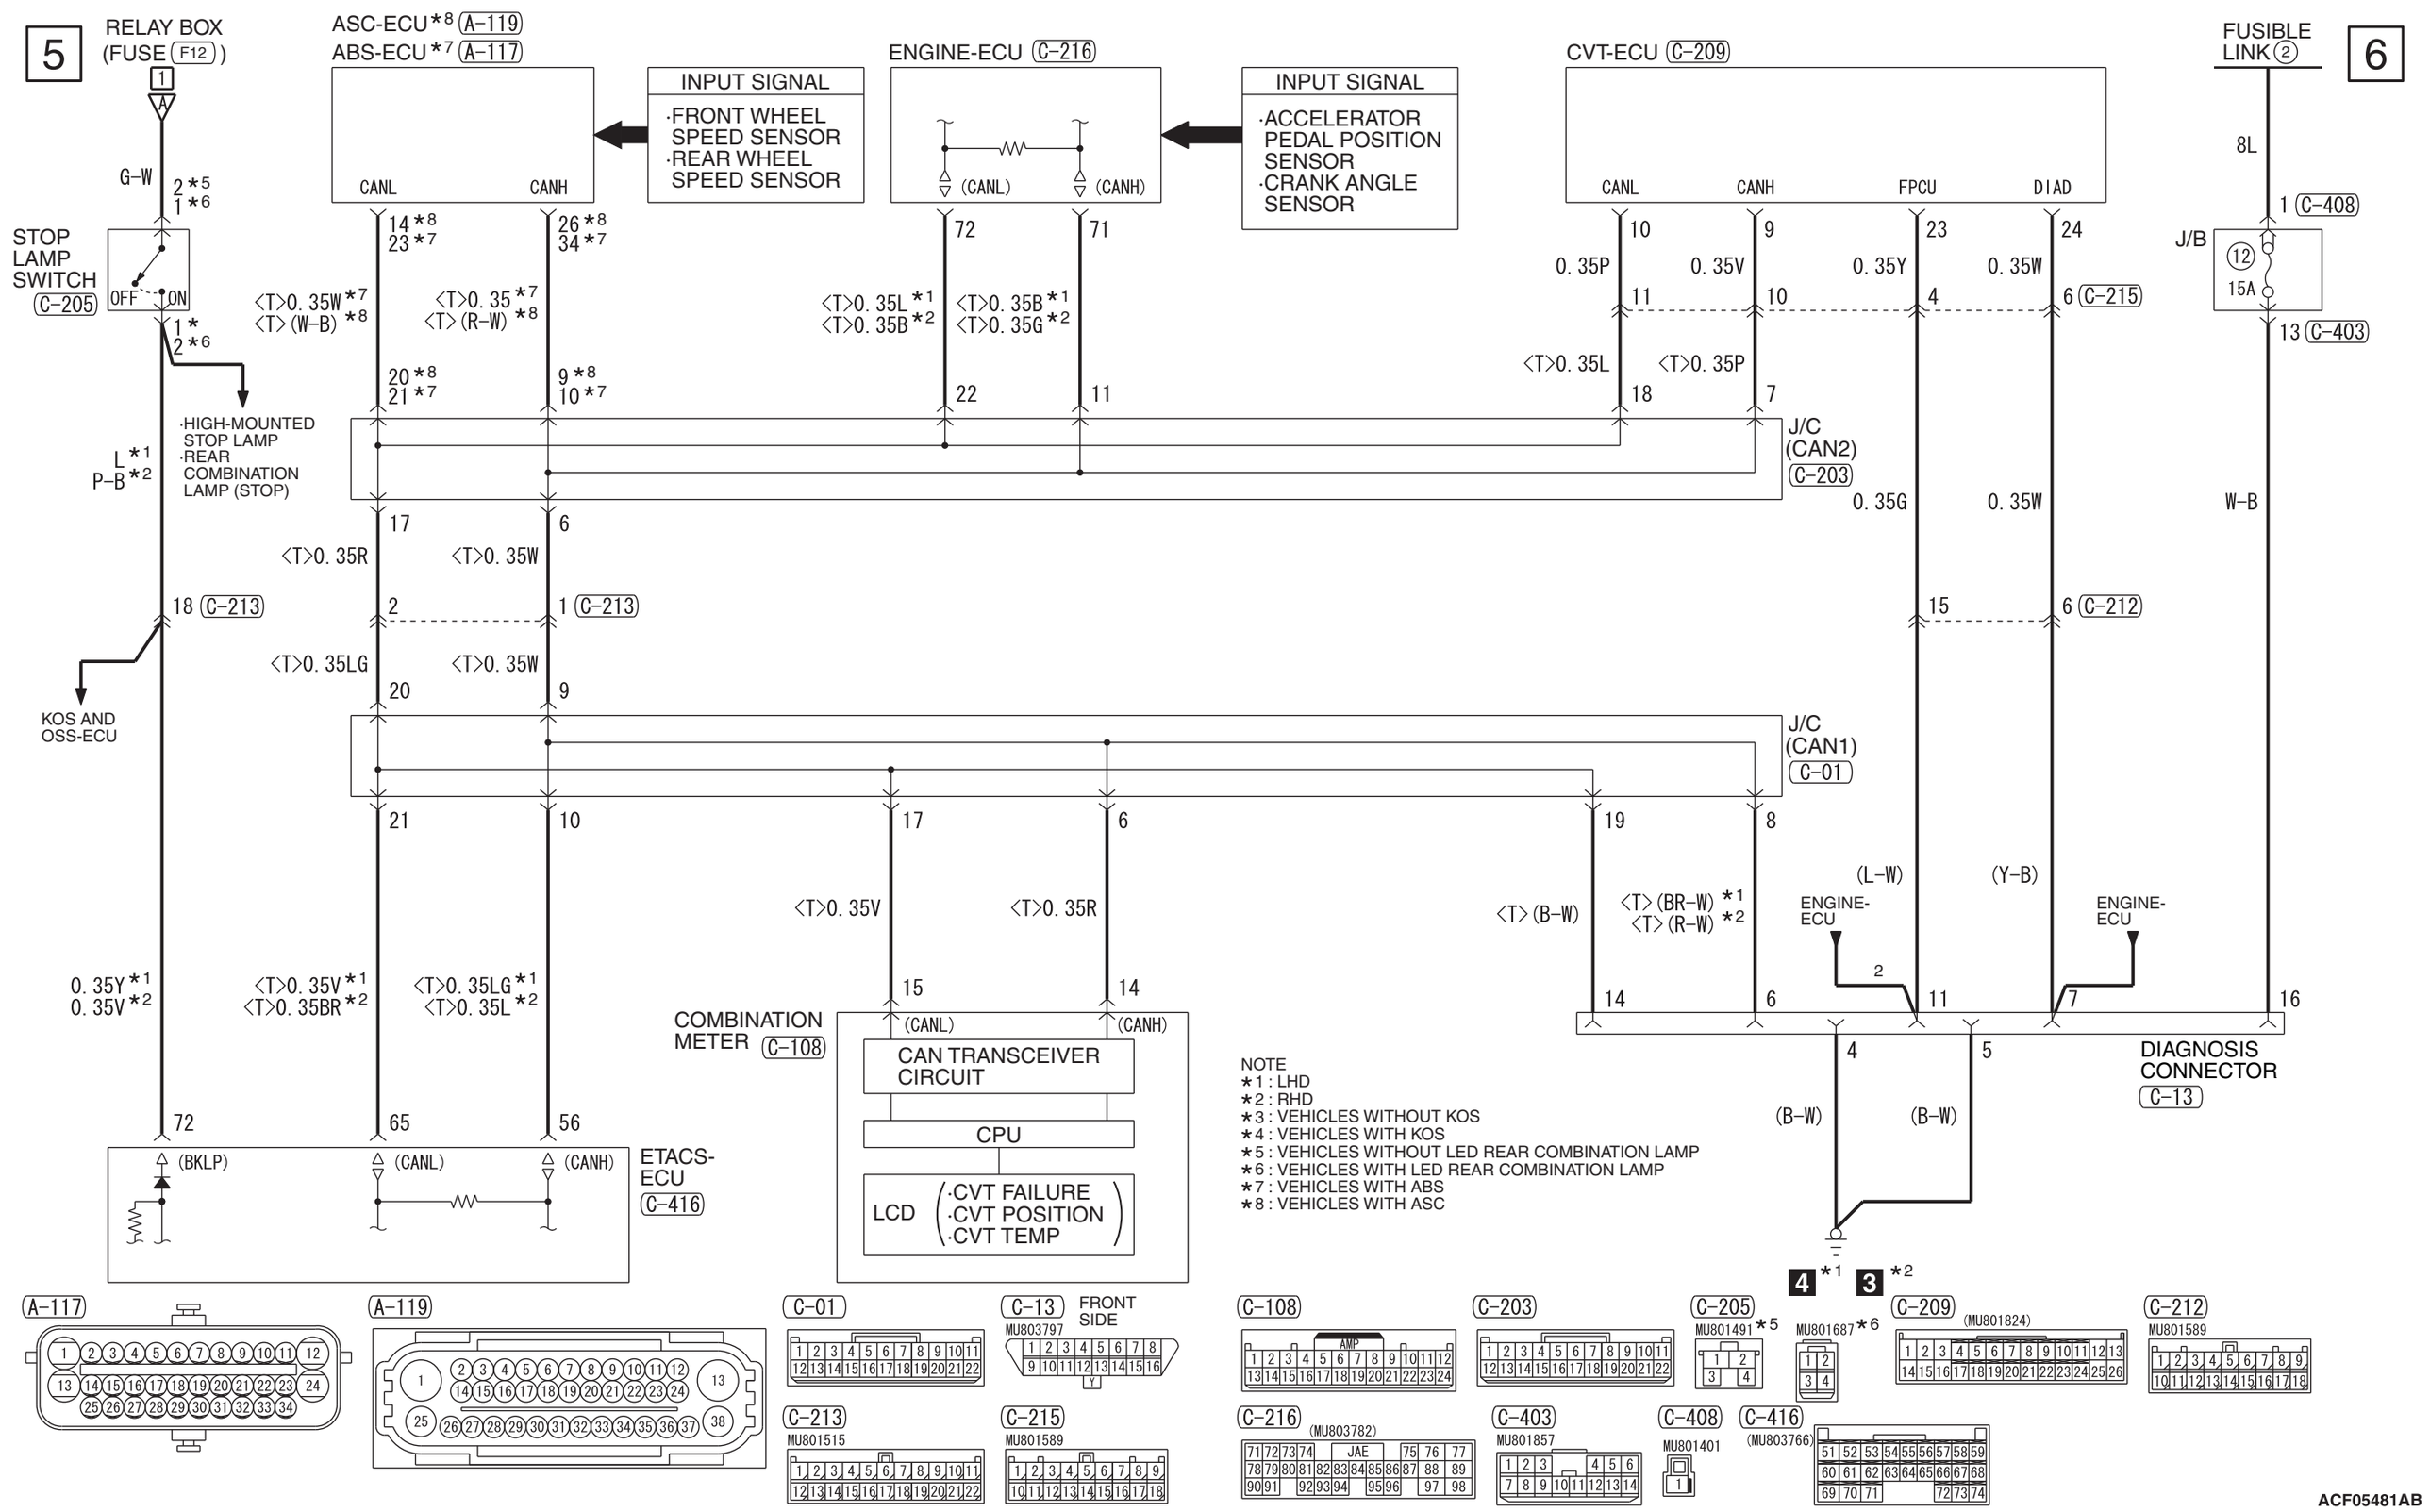
5
6
RELAY BOX
(FUSE F12)
ASC-ECU*8 A-119
ABS-ECU*7 A-117
INPUT SIGNAL
·FRONT WHEEL SPEED SENSOR
·REAR WHEEL SPEED SENSOR
ENGINE-ECU C-216
INPUT SIGNAL
·ACCELERATOR PEDAL POSITION SENSOR
·CRANK ANGLE SENSOR
CVT-ECU C-209
FUSIBLE LINK 2
STOP LAMP SWITCH C-205
OFF
ON
·HIGH-MOUNTED STOP LAMP
·REAR COMBINATION LAMP (STOP)
J/C (CAN2) C-203
J/C (CAN1) C-01
KOS AND OSS-ECU
J/B
15A
DIAGNOSIS CONNECTOR C-13
ENGINE-ECU
COMBINATION METER C-108
CAN TRANSCEIVER CIRCUIT
CPU
LCD
·CVT FAILURE
·CVT POSITION
·CVT TEMP
ETACS-ECU C-416
NOTE
*1 : LHD
*2 : RHD
*3 : VEHICLES WITHOUT KOS
*4 : VEHICLES WITH KOS
*5 : VEHICLES WITHOUT LED REAR COMBINATION LAMP
*6 : VEHICLES WITH LED REAR COMBINATION LAMP
*7 : VEHICLES WITH ABS
*8 : VEHICLES WITH ASC
A-117
A-119
C-01
C-13 FRONT SIDE
MU803797
C-108
C-203
C-205
MU801491*5
MU801687*6
C-209
MU801824
C-212
MU801589
C-213
MU801515
C-215
MU801589
C-216
MU803782
C-403
MU801857
C-408
MU801401
C-416
MU803766
ACF05481AB