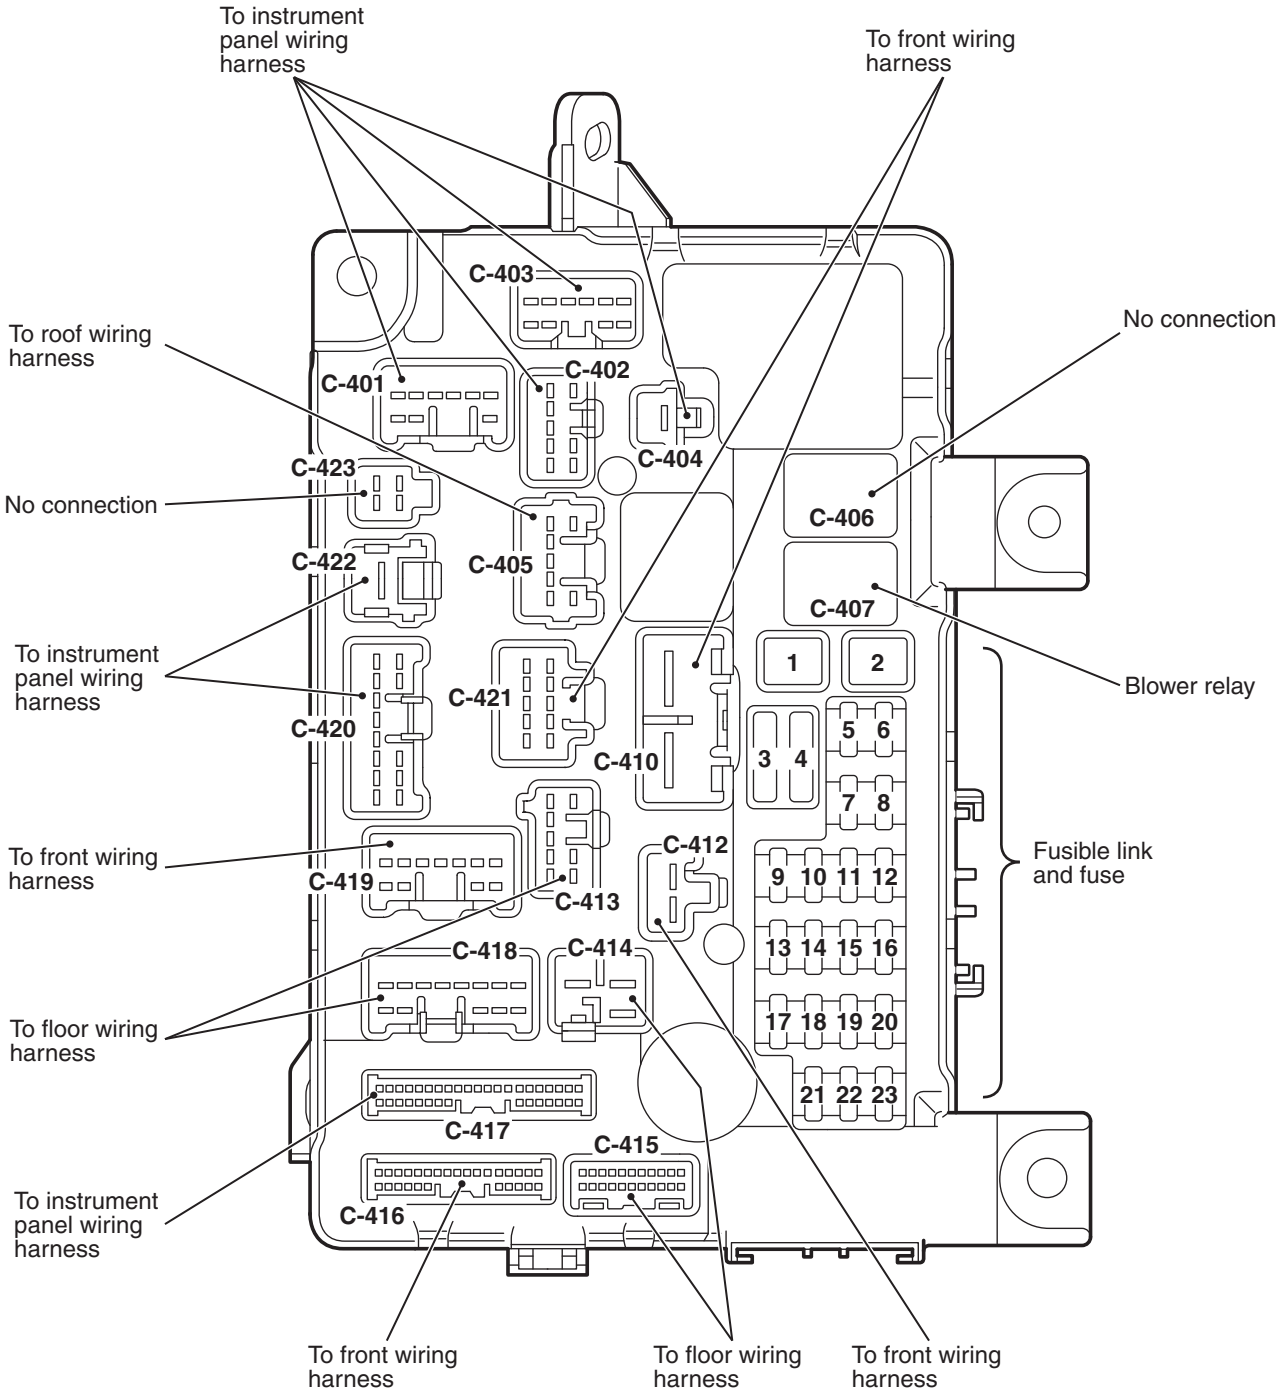
To instrument panel wiring harness
To front wiring harness
C-403
To roof wiring harness
C-401
C-402
C-404
No connection
C-423
No connection
C-406
C-422
C-405
C-407
To instrument panel wiring harness
C-421
Blower relay
C-420
C-410
1
2
3
4
5
6
7
8
To front wiring harness
C-419
C-413
C-412
Fusible link and fuse
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
C-418
C-414
To floor wiring harness
C-417
C-415
To instrument panel wiring harness
C-416
To front wiring harness
To floor wiring harness
To front wiring harness
ACB04404AJ