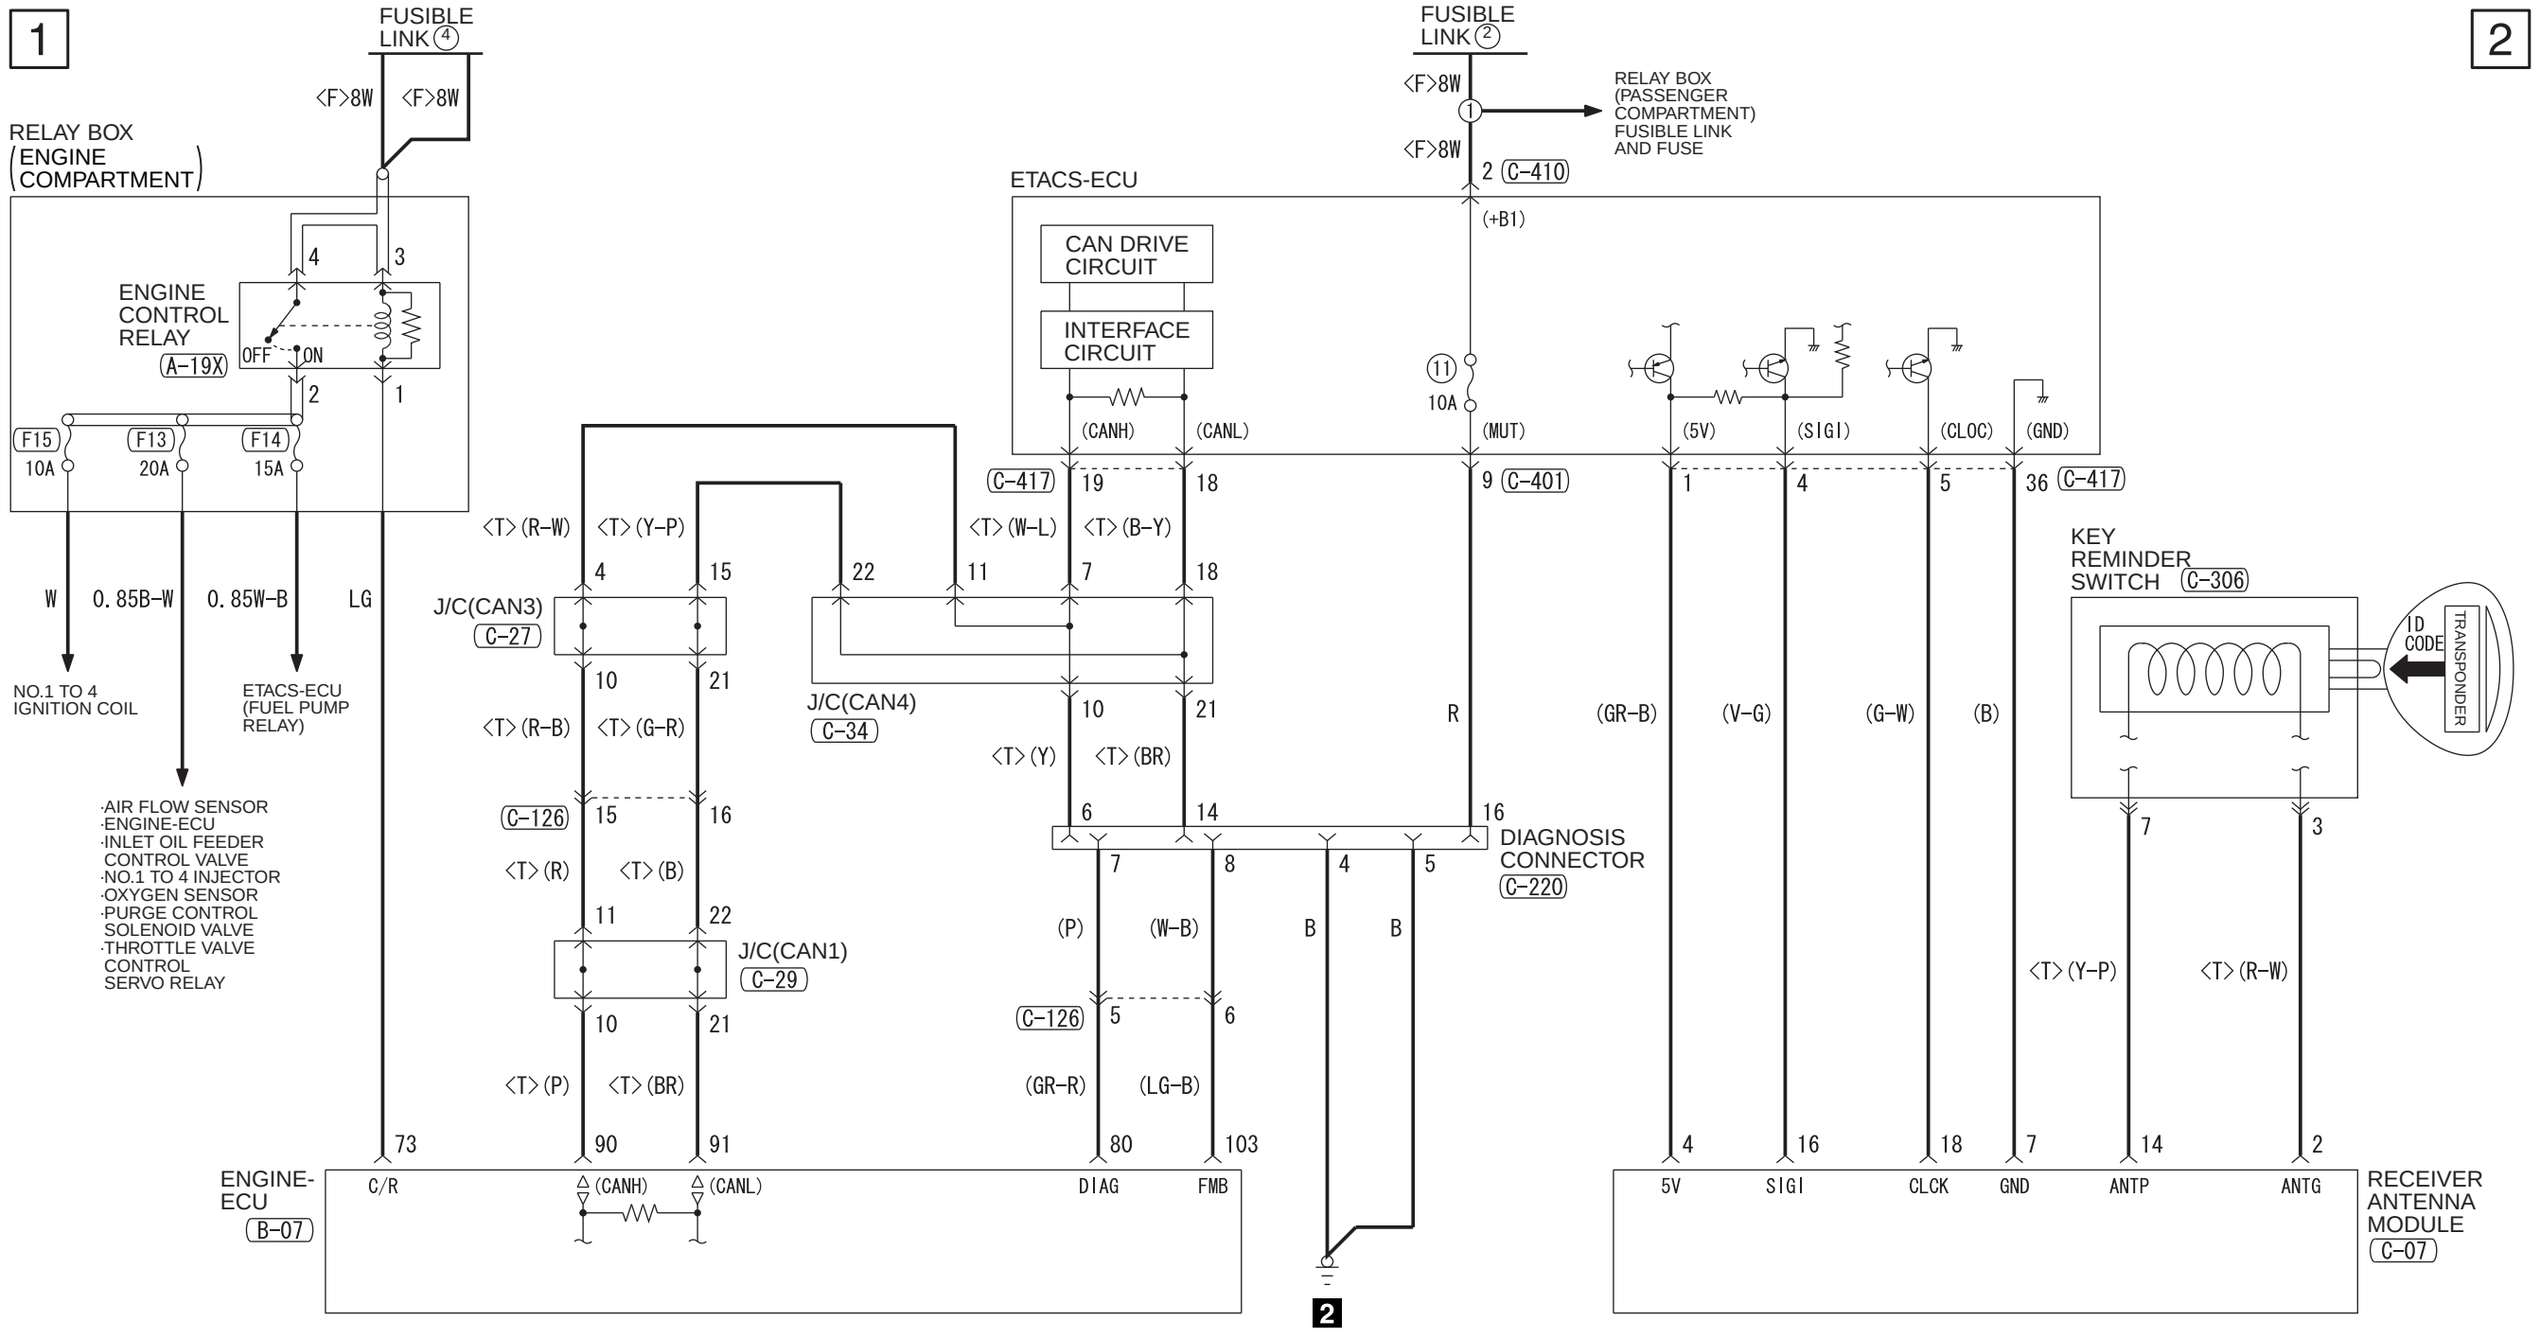
1
2
FUSIBLE LINK 4
<F>8W
<F>8W
RELAY BOX (ENGINE COMPARTMENT)
ENGINE CONTROL RELAY
A-19X
OFF
ON
F15 10A
F13 20A
F14 15A
W
0.85B-W
0.85W-B
LG
NO.1 TO 4 IGNITION COIL
ETACS-ECU (FUEL PUMP RELAY)
·AIR FLOW SENSOR
·ENGINE-ECU
·INLET OIL FEEDER CONTROL VALVE
·NO.1 TO 4 INJECTOR
·OXYGEN SENSOR
·PURGE CONTROL SOLENOID VALVE
·THROTTLE VALVE CONTROL SERVO RELAY
J/C(CAN3) C-27
J/C(CAN4) C-34
J/C(CAN1) C-29
C-126
C-417
ETACS-ECU
CAN DRIVE CIRCUIT
INTERFACE CIRCUIT
(CANH)
(CANL)
(+B1)
10A
(MUT)
(5V)
(SIGI)
(CLOC)
(GND)
FUSIBLE LINK 2
RELAY BOX (PASSENGER COMPARTMENT) FUSIBLE LINK AND FUSE
C-410
C-401
DIAGNOSIS CONNECTOR C-220
KEY REMINDER SWITCH C-306
ID CODE
TRANSPONDER
ENGINE-ECU B-07
C/R
DIAG
FMB
RECEIVER ANTENNA MODULE C-07
5V
SIGI
CLCK
GND
ANTP
ANTG
A-19X
B-07
C-07
C-27
C-29
C-417
C-34
C-126
C-220
FRONT SIDE
C-306
C-401
C-410
Wire colour code
B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue
BR : Brown O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver
HFU15X01AC