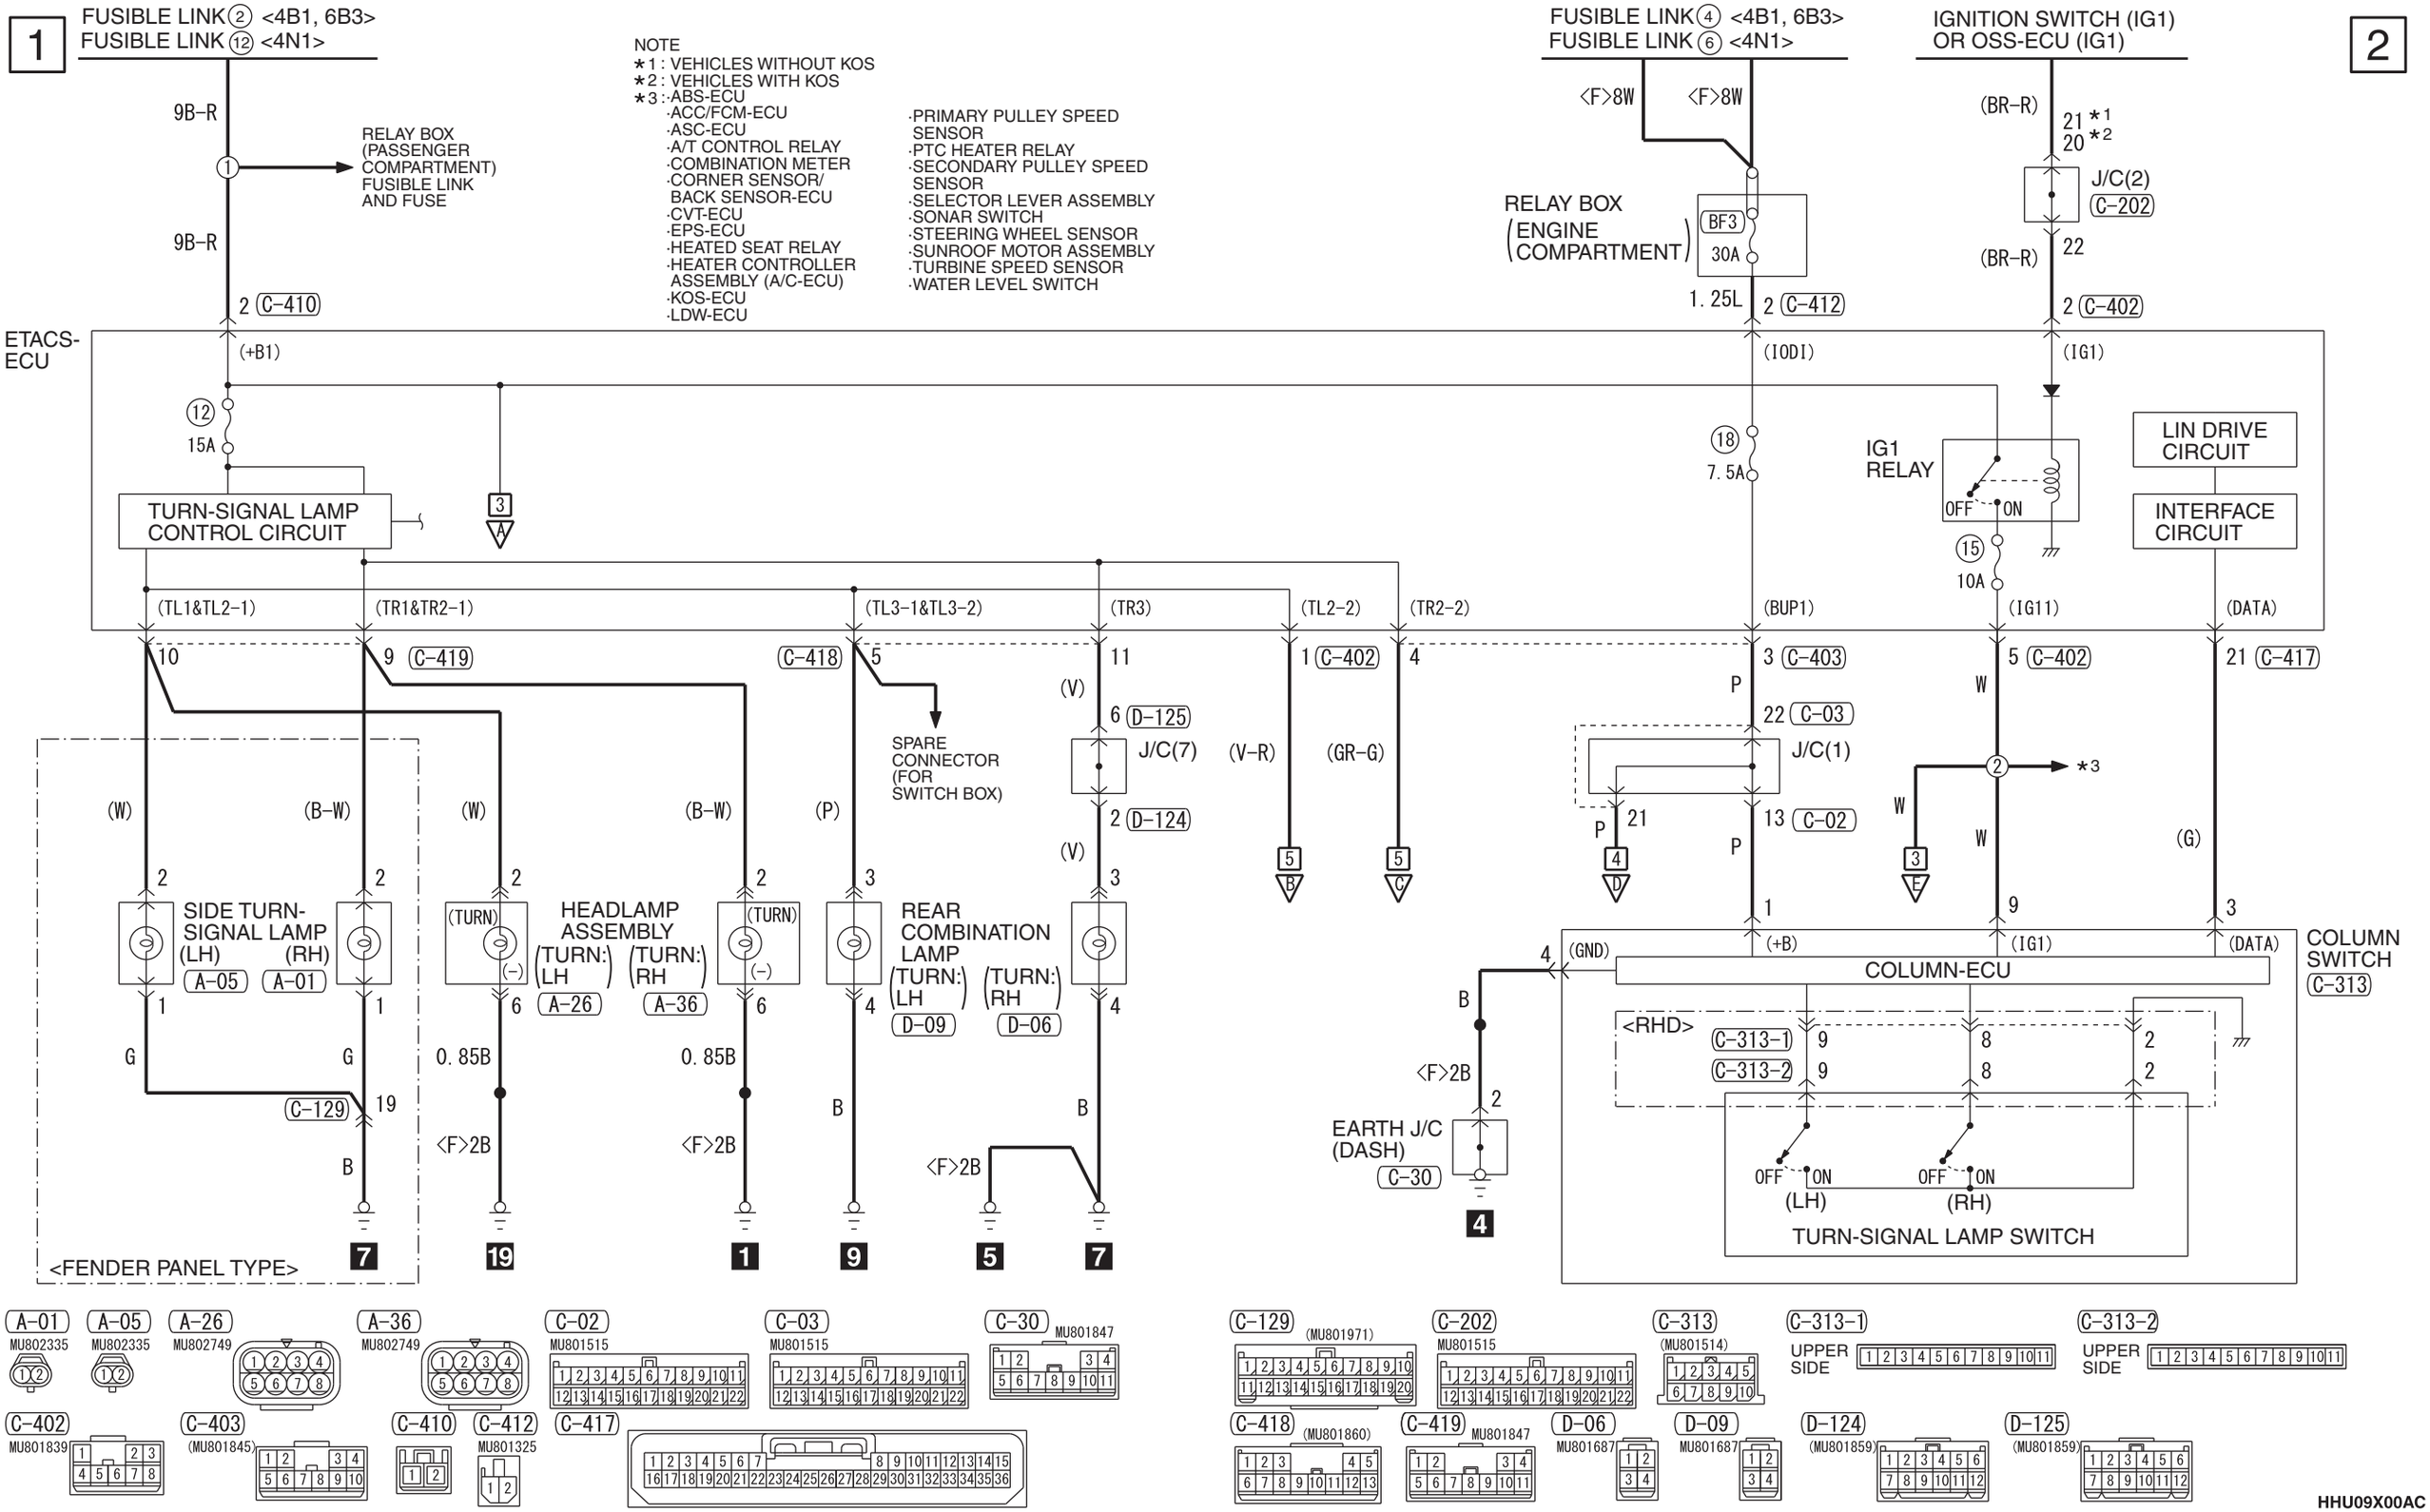
1
2
FUSIBLE LINK ② <4B1, 6B3>
FUSIBLE LINK ⑫ <4N1>
FUSIBLE LINK ④ <4B1, 6B3>
FUSIBLE LINK ⑥ <4N1>
IGNITION SWITCH (IG1)
OR OSS-ECU (IG1)
NOTE
*1 : VEHICLES WITHOUT KOS
*2 : VEHICLES WITH KOS
*3 : ·ABS-ECU
·ACC/FCM-ECU
·ASC-ECU
·A/T CONTROL RELAY
·COMBINATION METER
·CORNER SENSOR/
BACK SENSOR-ECU
·CVT-ECU
·EPS-ECU
·HEATED SEAT RELAY
·HEATER CONTROLLER
ASSEMBLY (A/C-ECU)
·KOS-ECU
·LDW-ECU
·PRIMARY PULLEY SPEED
SENSOR
·PTC HEATER RELAY
·SECONDARY PULLEY SPEED
SENSOR
·SELECTOR LEVER ASSEMBLY
·SONAR SWITCH
·STEERING WHEEL SENSOR
·SUNROOF MOTOR ASSEMBLY
·TURBINE SPEED SENSOR
·WATER LEVEL SWITCH
9B-R
RELAY BOX
(PASSENGER
COMPARTMENT)
FUSIBLE LINK
AND FUSE
9B-R
2 C-410
ETACS-
ECU
(+B1)
⑫
15A
TURN-SIGNAL LAMP
CONTROL CIRCUIT
3
A
<F>8W
<F>8W
RELAY BOX
(ENGINE
COMPARTMENT)
BF3
30A
1. 25L
2 C-412
(IODI)
⑱
7. 5A
(BR-R)
21 *1
20 *2
J/C(2)
C-202
(BR-R)
22
2 C-402
(IG1)
IG1
RELAY
OFF
ON
⑮
10A
LIN DRIVE
CIRCUIT
INTERFACE
CIRCUIT
(TL1&TL2-1)
(TR1&TR2-1)
(TL3-1&TL3-2)
(TR3)
(TL2-2)
(TR2-2)
(BUP1)
(IG11)
(DATA)
10
9 C-419
C-418
5
11
1 C-402
4
3 C-403
5 C-402
21 C-417
(V)
6 D-125
J/C(7)
2 D-124
(V)
(V-R)
(GR-G)
P
22 C-03
J/C(1)
W
*3
W
P
21
13 C-02
P
W
W
(G)
(W)
(B-W)
(W)
(B-W)
(P)
SPARE
CONNECTOR
(FOR
SWITCH BOX)
SIDE TURN-
SIGNAL LAMP
(LH)
(RH)
A-05
A-01
(TURN)
HEADLAMP
ASSEMBLY
(TURN:
LH)
(TURN:
RH)
A-26
A-36
REAR
COMBINATION
LAMP
(TURN:
LH)
(TURN:
RH)
D-09
D-06
G
G
0. 85B
0. 85B
B
B
B
C-129
19
<F>2B
<F>2B
<F>2B
B
<FENDER PANEL TYPE>
7
19
1
9
5
7
4
(GND)
(+B)
(IG1)
(DATA)
COLUMN-ECU
COLUMN
SWITCH
C-313
B
<F>2B
2
EARTH J/C
(DASH)
C-30
4
<RHD>
C-313-1
C-313-2
OFF
ON
(LH)
(RH)
TURN-SIGNAL LAMP SWITCH
A-01
MU802335
A-05
MU802335
A-26
MU802749
A-36
MU802749
C-02
MU801515
C-03
MU801515
C-30
MU801847
C-129
(MU801971)
C-202
MU801515
C-313
(MU801514)
C-313-1
UPPER
SIDE
C-313-2
UPPER
SIDE
C-402
MU801839
C-403
(MU801845)
C-410
C-412
MU801325
C-417
C-418
(MU801860)
C-419
MU801847
D-06
MU801687
D-09
MU801687
D-124
(MU801859)
D-125
(MU801859)
HHU09X00AC