★ 1 Air flow sensor ★ 2 Intake air temperature sensor ★ 3 Throttle position sensor (main/sub) ★ 4 Manifold absolute pressure sensor ★ 5 Engine coolant temperature sensor ★ 6 Camshaft position sensor ★ 7 Crank angle sensor ★ 8 Right bank detonation sensor ★ 9 Left bank detonation sensor ★ 10 Right bank oxygen sensor (front) ★ 11 Right bank oxygen sensor (rear) ★ 12 Left bank oxygen sensor (front) ★ 13 Left bank oxygen sensor (rear)	● Accelerator pedal position sensor (main/sub) ● Engine oil pressure switch ● Power supply ● Ignition switch-IG ● Ignition switch-ST ● Alternator FR terminal ● Alternator L terminal ● Battery current sensor ● CAN communication (input signal)	⇨	Engine-ECU ● Barometric pressure sensor	⇨	☆ 1 Injector ☆ 2 Throttle valve control servo (DC motor) ☆ 3 Exhaust gas recirculation valve (stepper motor) ☆ 4 Purge control solenoid valve ☆ 5 Oil feeder control valve	● Engine control relay ● Fuel pump relay ● A/C compressor relay ● Ignition coil ● Throttle valve control servo relay ● Alternator G terminal ● Right bank oxygen sensor (front) heater ● Right bank oxygen sensor (rear) heater ● Left bank oxygen sensor (front) heater ● Left bank oxygen sensor (rear) heater ● Diagnosis output ● CAN communication (output signal)

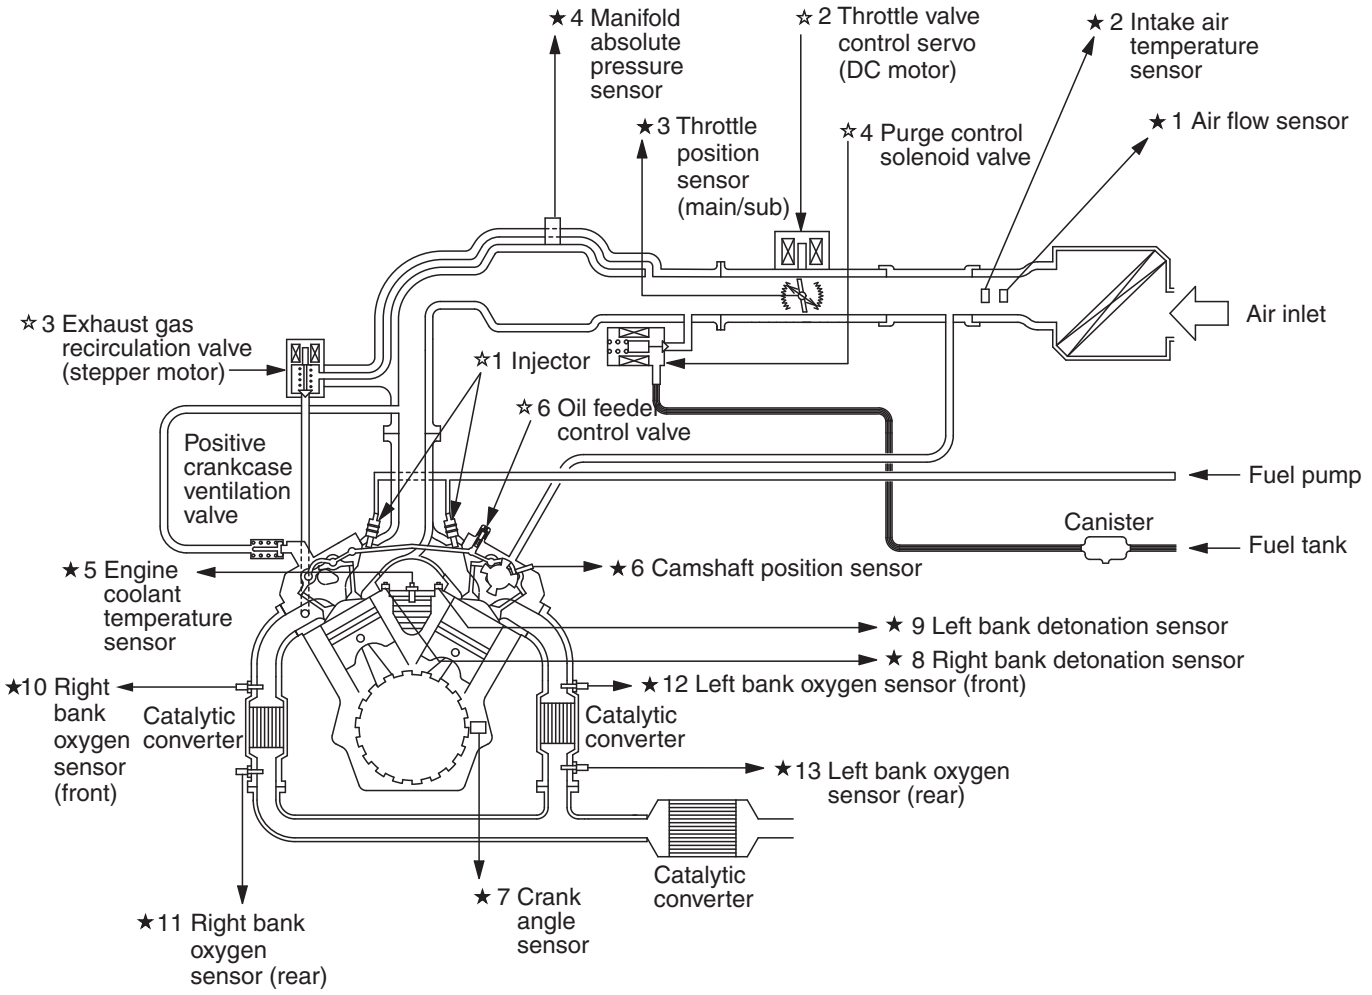

ACD01103AC