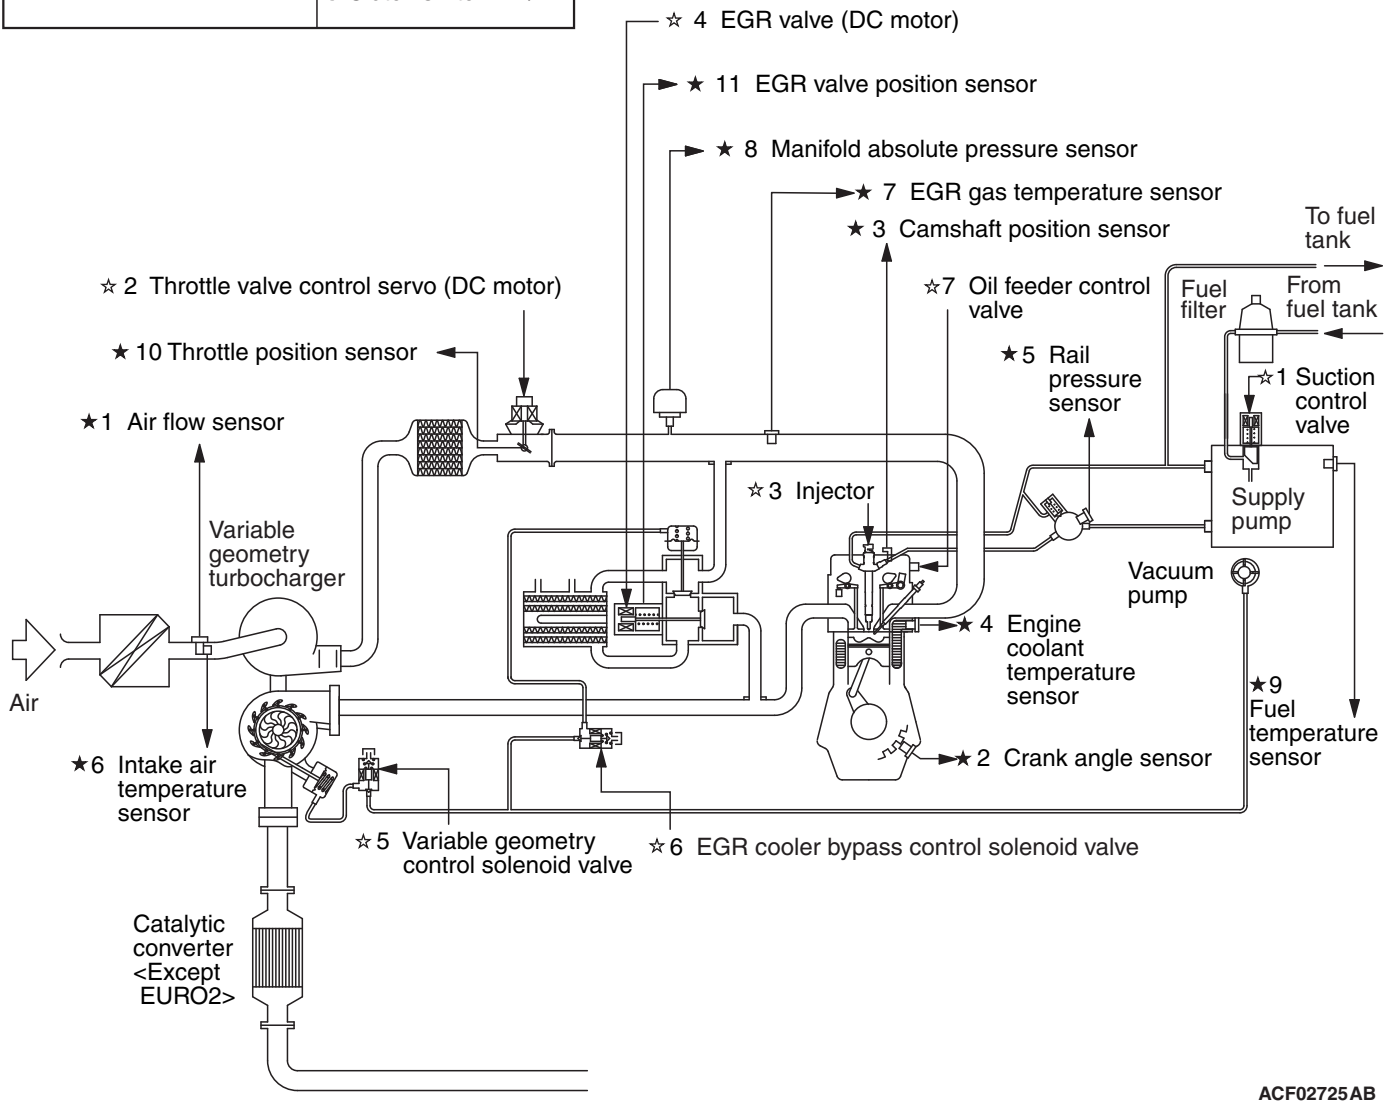★1 Air flow sensor ★2 Crank angle sensor ★3 Camshaft position sensor ★4 Engine coolant temperature sensor ★5 Rail pressure sensor ★6 Intake air temperature sensor ★7 EGR gas temperature sensor ★8 Manifold absolute pressure sensor ★9 Fuel temperature sensor ★10 Throttle position sensor ★11 EGR valve position sensor	● Accelerator pedal position sensor (main) ● Accelerator pedal position sensor (sub) ● Power supply ● Ignition switch-IG ● Ignition switch-ST ● Alternator L terminal ● Alternator FR terminal ● Glow diagnosis signal ● A/C switch ● CAN communication (input signal) ● Starter active signal switch ● Fuel filter switch ● Transmission oil temperature sensor <M/T> ● Clutch switch <M/T>	⇨	Engine-ECU ● Barometric pressure sensor	⇨	☆1 Suction control valve ☆2 Throttle valve control servo (DC motor) ☆3 Injector ☆4 EGR valve (DC motor) ☆5 Variable geometry control solenoid valve ☆6 EGR cooler bypass control solenoid valve ☆7 Oil feeder control valve ● Engine control relay ● A/C compressor relay ● Starter relay ● Glow control unit ● Condenser fan relay ● CAN communication (output signal) ● Alternator G terminal