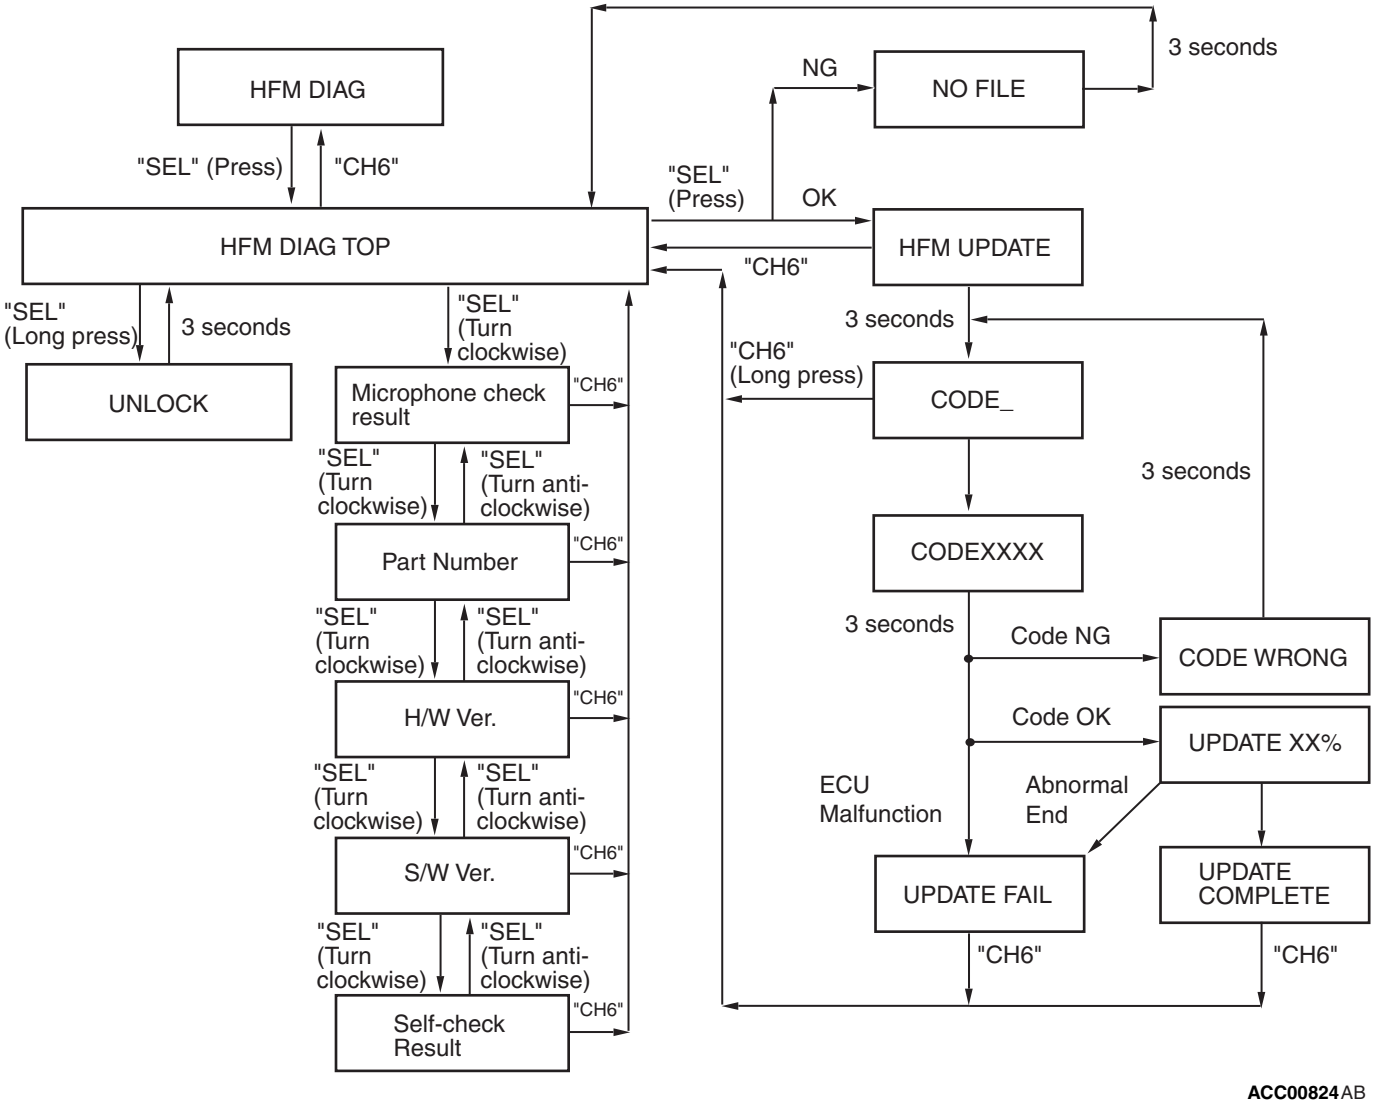
HFM DIAG
"SEL" (Press)
"CH6"
HFM DIAG TOP
"SEL"
(Long press)
3 seconds
UNLOCK
"SEL"
(Turn
clockwise)
Microphone check
result
"CH6"
"SEL"
(Turn
clockwise)
"SEL"
(Turn anti-
clockwise)
Part Number
"CH6"
"SEL"
(Turn
clockwise)
"SEL"
(Turn anti-
clockwise)
H/W Ver.
"CH6"
"SEL"
(Turn
clockwise)
"SEL"
(Turn anti-
clockwise)
S/W Ver.
"CH6"
"SEL"
(Turn
clockwise)
"SEL"
(Turn anti-
clockwise)
Self-check
Result
"CH6"
3 seconds
NG
NO FILE
"SEL"
(Press)
OK
HFM UPDATE
"CH6"
3 seconds
"CH6"
(Long press)
CODE_
3 seconds
CODEXXXX
3 seconds
Code NG
CODE WRONG
Code OK
UPDATE XX%
ECU
Malfunction
Abnormal
End
UPDATE FAIL
UPDATE
COMPLETE
"CH6"
"CH6"

ACC00824AB