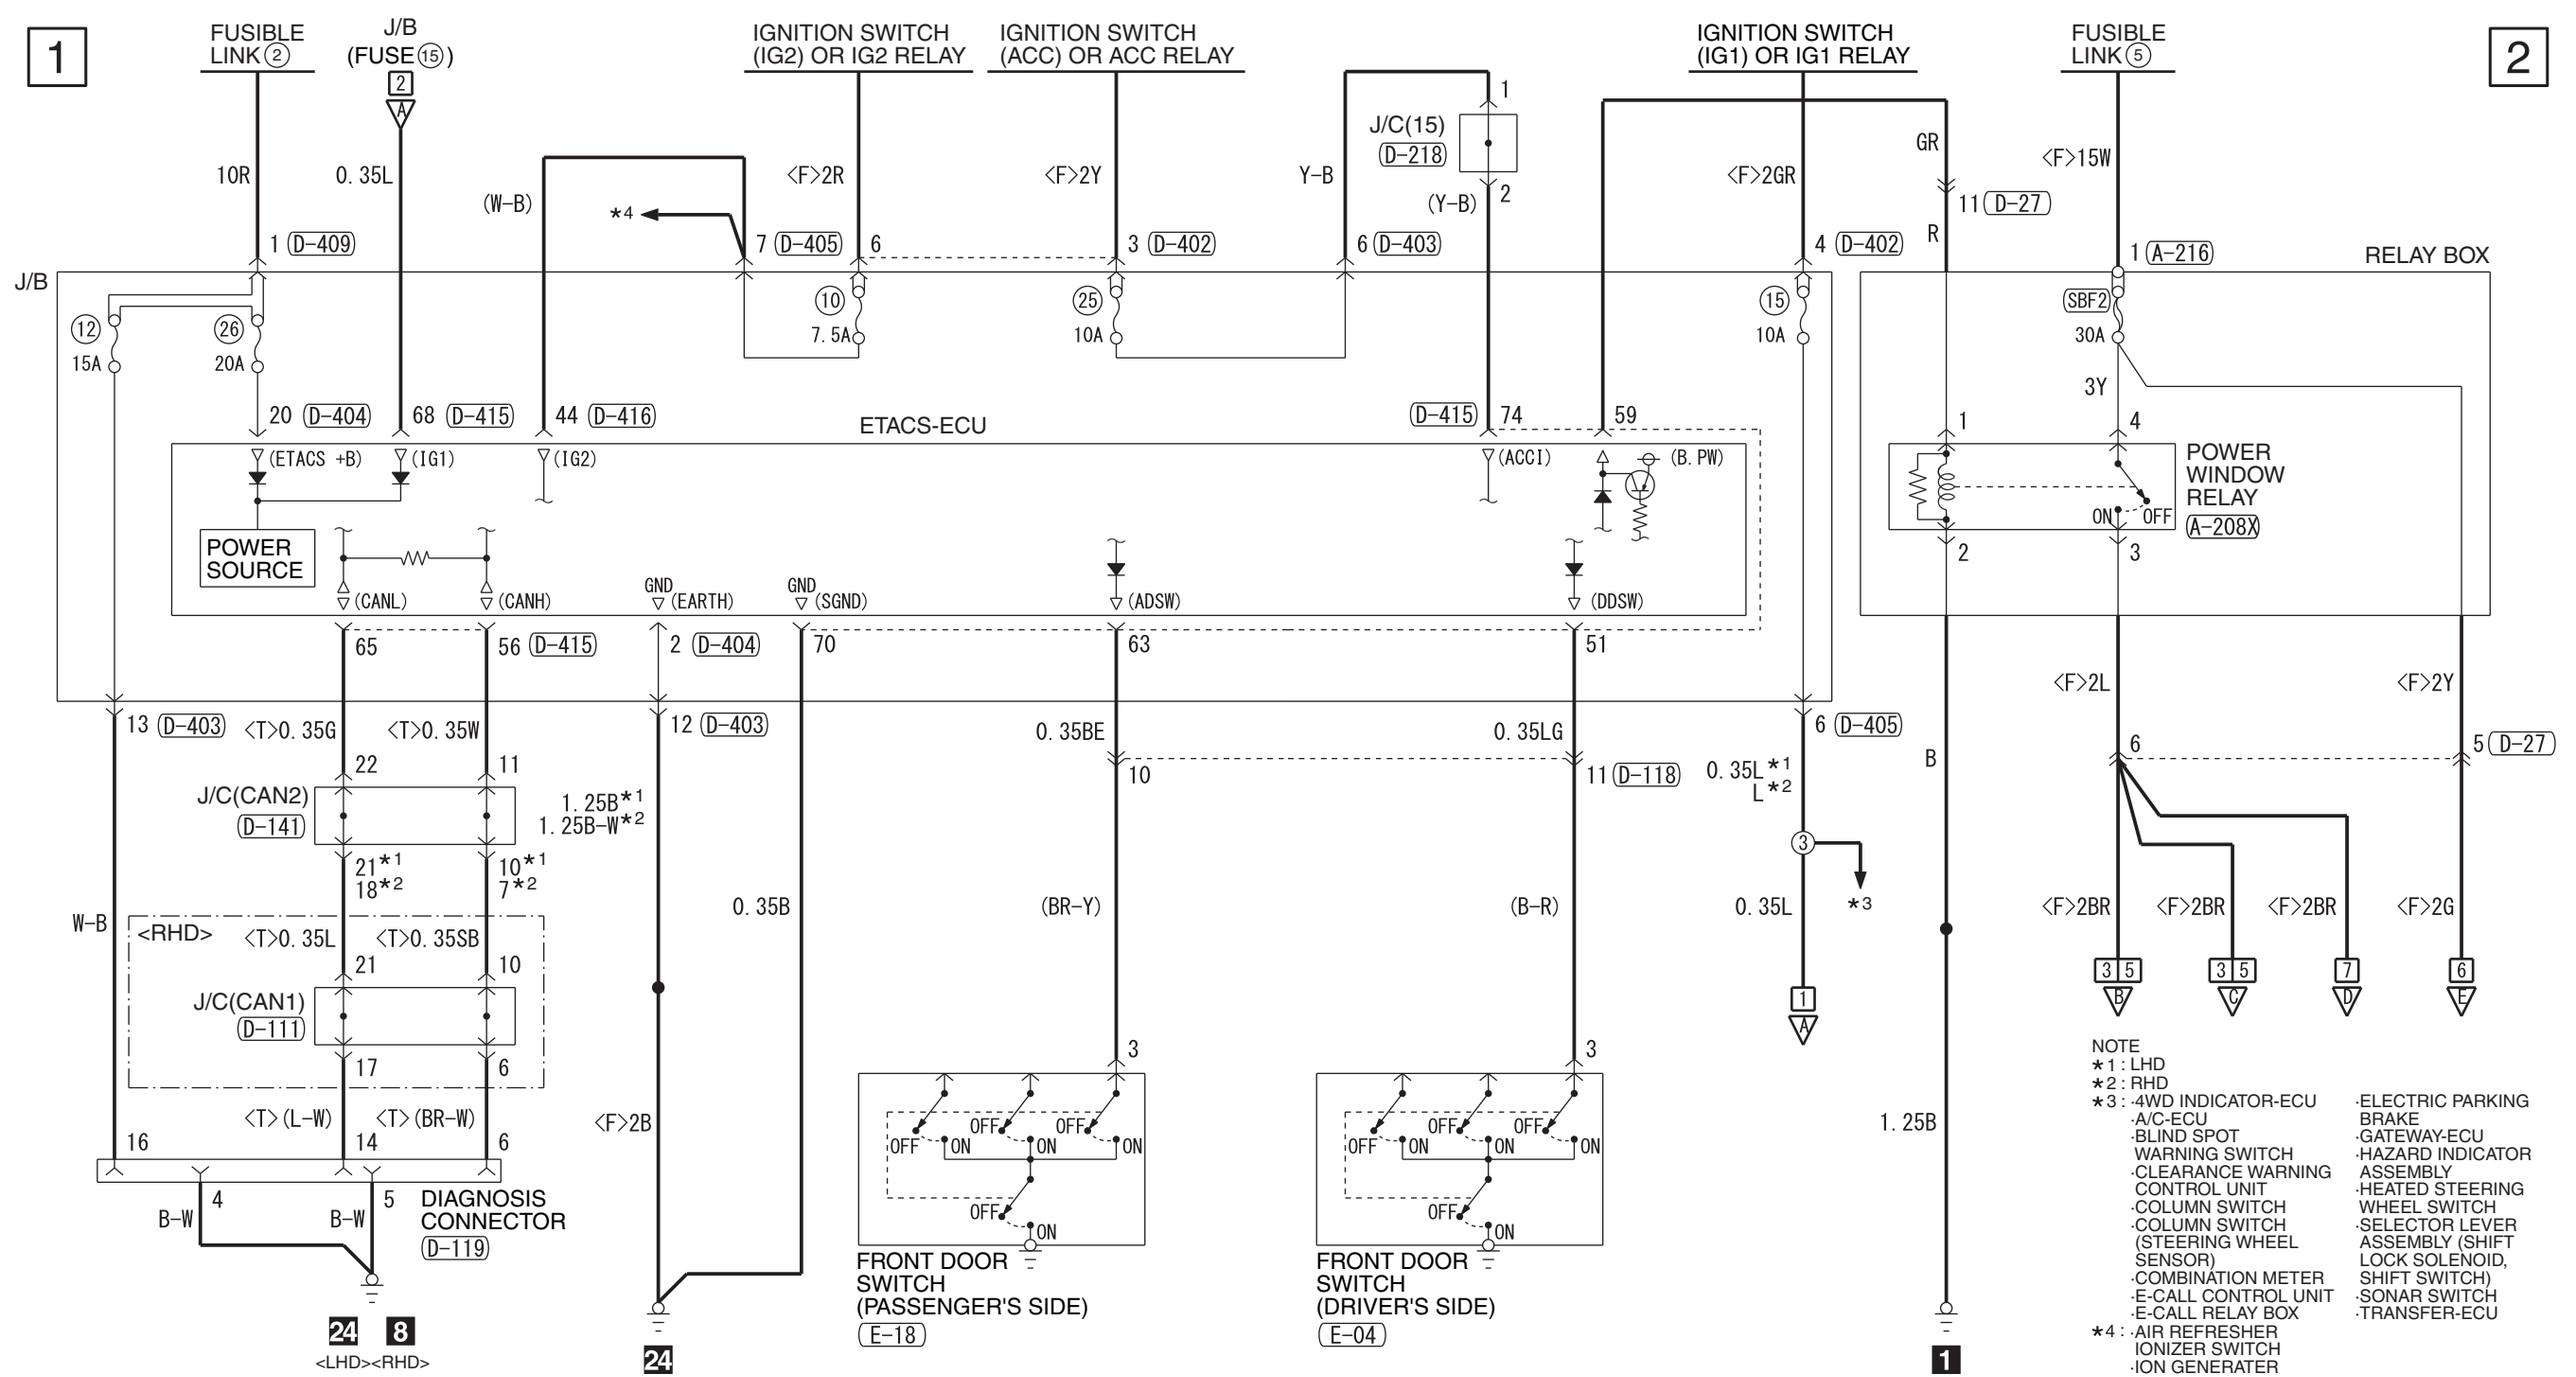
1
2
FUSIBLE LINK ②
J/B (FUSE ⑮)
IGNITION SWITCH (IG2) OR IG2 RELAY
IGNITION SWITCH (ACC) OR ACC RELAY
IGNITION SWITCH (IG1) OR IG1 RELAY
FUSIBLE LINK ⑤
J/C(15) D-218
RELAY BOX
J/B
ETACS-ECU
POWER SOURCE
(ETACS +B)
(IG1)
(IG2)
(ACCI)
(B. PW)
(CANL)
(CANH)
GND (EARTH)
GND (SGND)
(ADSW)
(DDSW)
POWER WINDOW RELAY A-208X
ON
OFF
SBF2
30A
J/C(CAN2) D-141
J/C(CAN1) D-111
<RHD>
DIAGNOSIS CONNECTOR D-119
FRONT DOOR SWITCH (PASSENGER'S SIDE) E-18
FRONT DOOR SWITCH (DRIVER'S SIDE) E-04
<LHD><RHD>
NOTE
*1 : LHD
*2 : RHD
*3 : ·4WD INDICATOR-ECU
·A/C-ECU
·BLIND SPOT WARNING SWITCH
·CLEARANCE WARNING CONTROL UNIT
·COLUMN SWITCH
·COLUMN SWITCH (STEERING WHEEL SENSOR)
·COMBINATION METER
·E-CALL CONTROL UNIT
·E-CALL RELAY BOX
·ELECTRIC PARKING BRAKE
·GATEWAY-ECU
·HAZARD INDICATOR ASSEMBLY
·HEATED STEERING WHEEL SWITCH
·SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID, SHIFT SWITCH)
·SONAR SWITCH
·TRANSFER-ECU
*4 : ·AIR REFRESHER IONIZER SWITCH
·ION GENERATER
A-208X
A-216
D-27
D-111
D-118
D-119
FRONT SIDE
MU803797
D-405
MU801839
D-409
D-415
(MU803766)
D-416
(MU803765)
E-04
(MU801536)
E-18
(MU801536)
D-141
D-218
D-402
MU801331
D-403
MU801857
D-404
J/B SIDE
Wire colour code
B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue BR : Brown
O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver BE : Beige
ACH04169AB