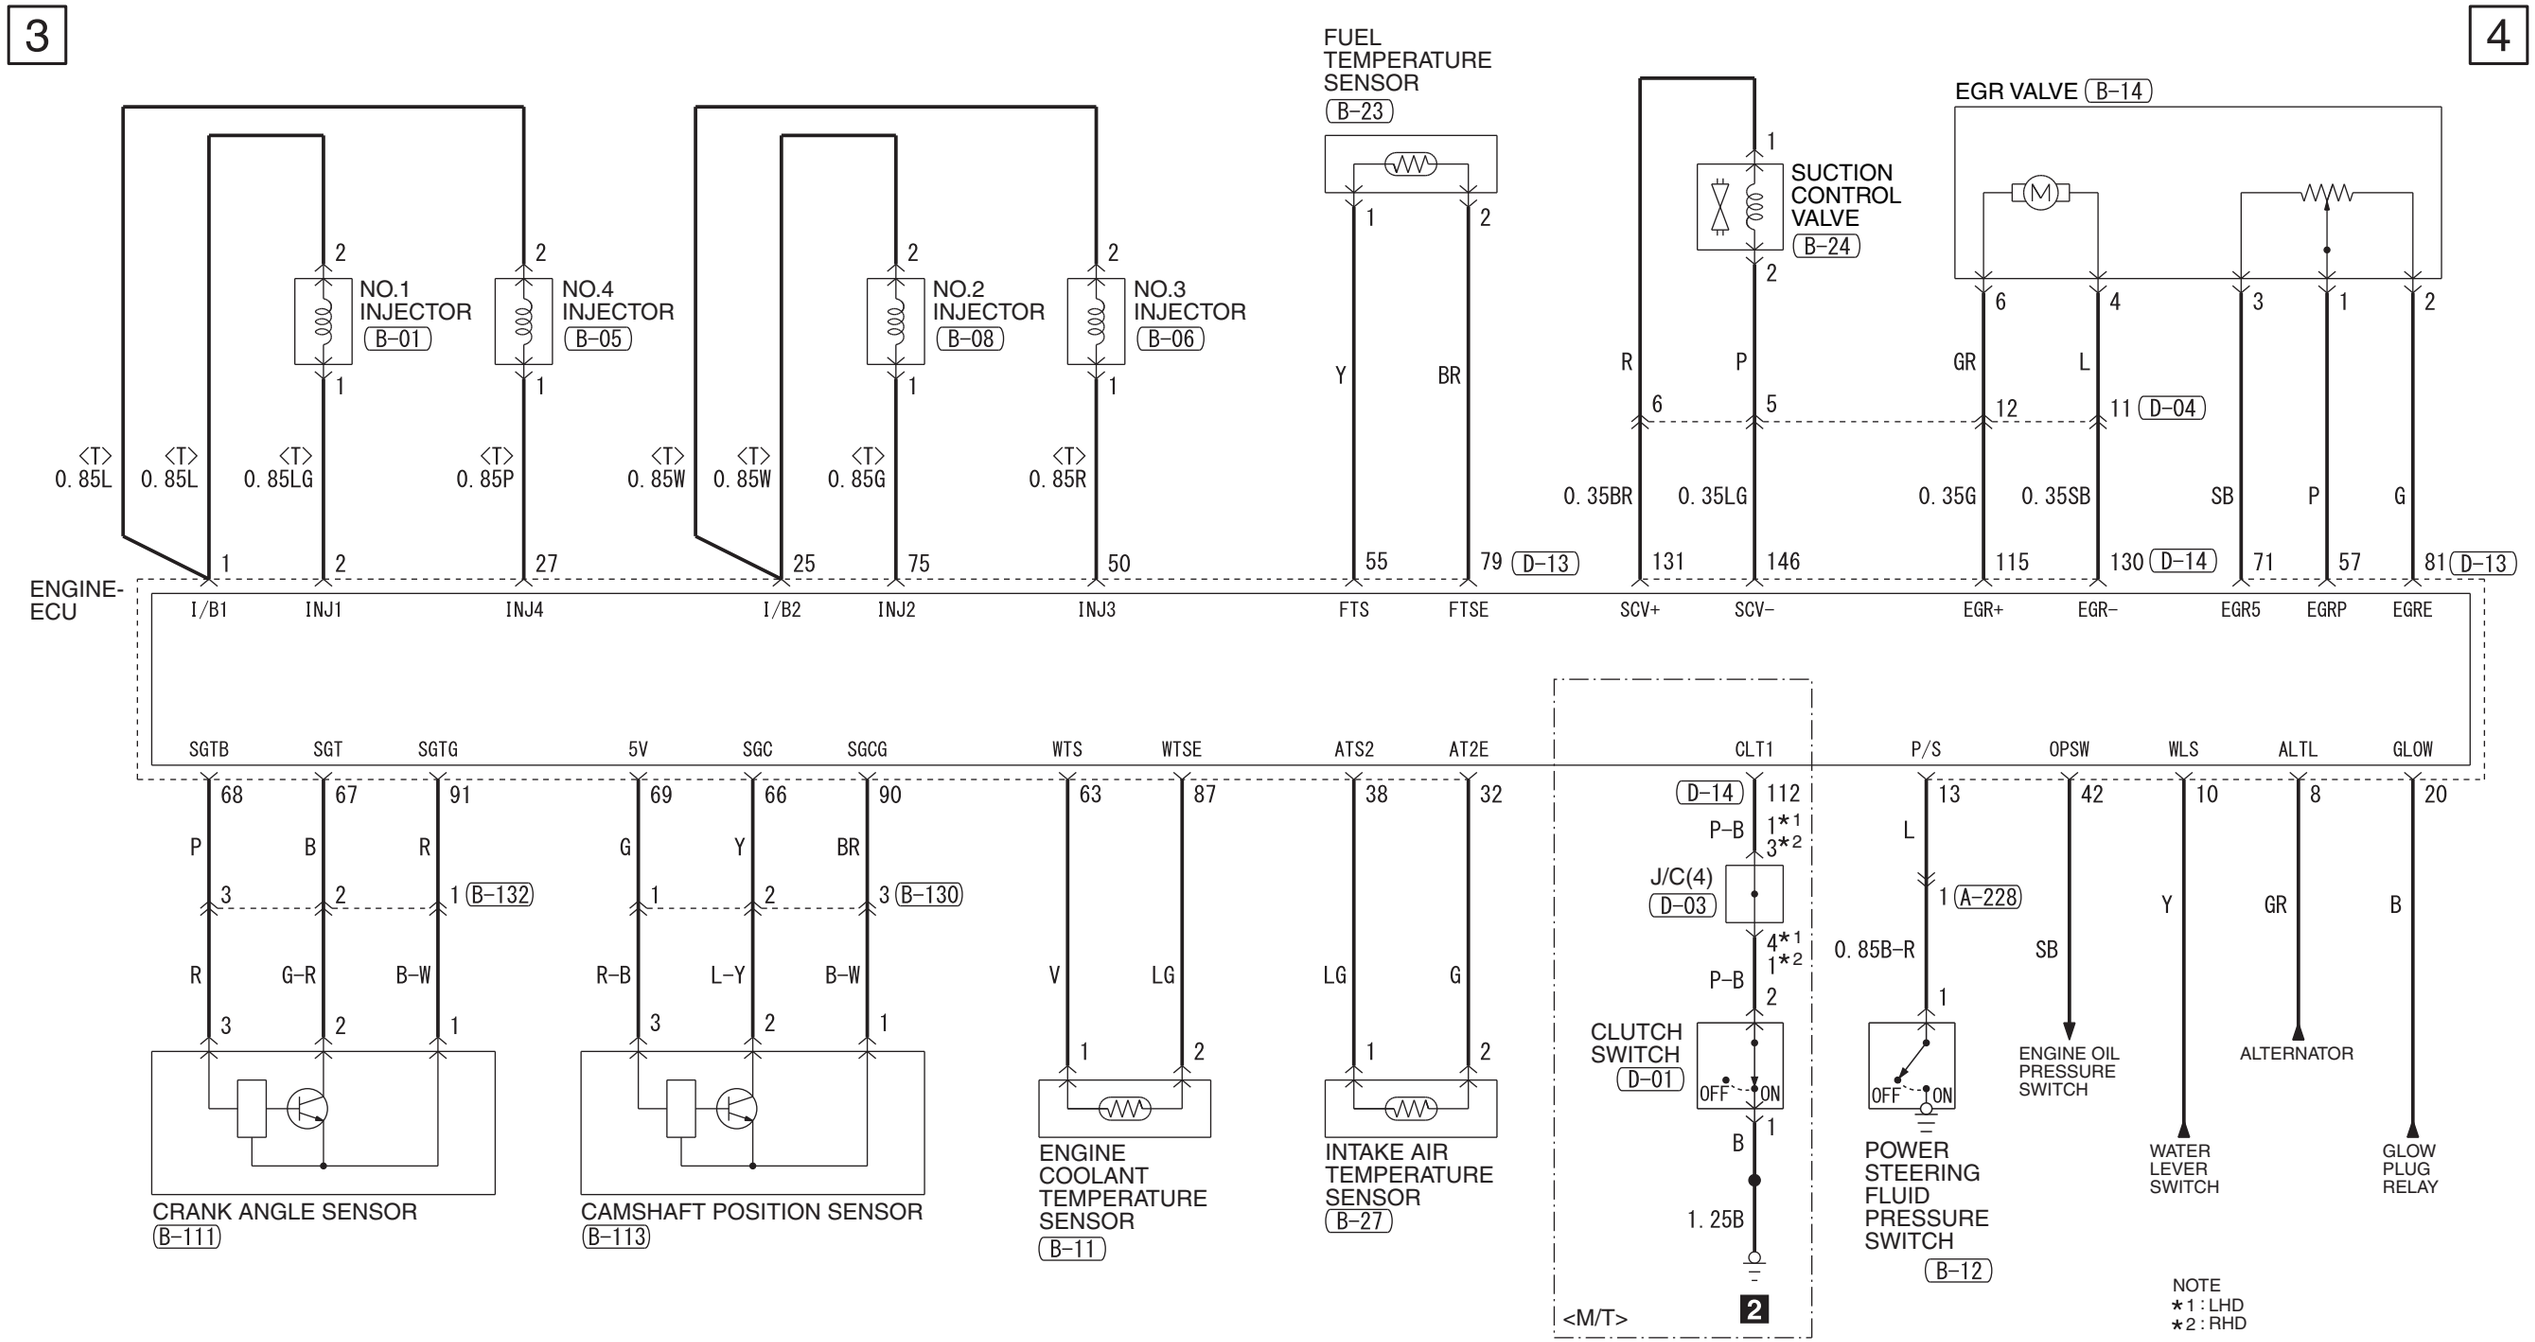
3
4
NO.1 INJECTOR B-01
NO.4 INJECTOR B-05
NO.2 INJECTOR B-08
NO.3 INJECTOR B-06
FUEL TEMPERATURE SENSOR B-23
SUCTION CONTROL VALVE B-24
EGR VALVE B-14
ENGINE-ECU
I/B1 INJ1 INJ4 I/B2 INJ2 INJ3 FTS FTSE SCV+ SCV- EGR+ EGR- EGR5 EGRP EGRE
SGTB SGT SGTG 5V SGC SGCG WTS WTSE ATS2 AT2E CLT1 P/S OPSW WLS ALTL GLOW
CRANK ANGLE SENSOR B-111
CAMSHAFT POSITION SENSOR B-113
ENGINE COOLANT TEMPERATURE SENSOR B-11
INTAKE AIR TEMPERATURE SENSOR B-27
J/C(4) D-03
CLUTCH SWITCH D-01
OFF ON
POWER STEERING FLUID PRESSURE SWITCH B-12
ENGINE OIL PRESSURE SWITCH
ALTERNATOR
WATER LEVER SWITCH
GLOW PLUG RELAY
<M/T>
NOTE
*1 : LHD
*2 : RHD
A-228 (MU802755)
B-01 B-05 B-06 B-08
B-11 (MU802406)
B-12 (MU801211)
B-14 (MU802056)
B-23 (MU802406)
B-24 (MU802768)
B-27 (MU802409)
B-111 MU802337
B-113 MU802337
B-130 MU802607
B-132 MU802603
D-01 MU801669
D-03
D-04
D-13
D-14
HHM05X07BC