7

8

FUSIBLE LINK (2)

10R

1 (D-409)

J/B

(12)

15A

13 (D-403)

W-B

INPUT SIGNAL

INHIBITOR SWITCH

A/T-ECU (D-21)

CANL CANH

75 76

<T> (B-W) <T> (R)

13 14 (D-22)

<T>0. 35G <T>0. 35BR

12 1

J/C (CAN2) (D-141)

21 10

<T> (L-W) <T> (BR-W)

16 14 6

DIAGNOSIS CONNECTOR (D-119)

4 5

B-W B-W

24

INPUT SIGNAL

AMBIENT TEMPERATURE SENSOR

J/B (FUSE (15))

1 C

0. 35L

2 (IG+)

COMBINATION METER (D-215)

CPU

LCD

·CORNER SENSOR SYSTEM INDICATOR
·FCM AND ULTRASONIC MISACCELERATION MITIGATION SYSTEM OFF INDICATOR
·ULTRASONIC MISACCELERATION MITIGATION SYSTEM INDICATION
·ULTRASONIC MISACCELERATION MITIGATION SYSTEM WARNING

(CANL) (CANH)

15 14

<T>0. 35Y <T>0. 35BE

13 2

J/B (FUSE (15))

1 B

0. 35L <T>0. 35G <T>0. 35W

12 14 13

(IG) (CANL) (CANH)

STEERING WHEEL SENSOR

(GND)

0. 35B 15

COLUMN SWITCH (D-309)

8

CLEARANCE WARNING CONTROL UNIT (D-109)

CANL CANH

3 4

<T>0. 35P <T>0. 35V

17 6

J/C (CAN1) (D-111)

20 9

<T>0. 35L <T>0. 35SB

18 7

22 11

<T>0. 35G <T>0. 35W

65 56 (D-415)

(CANL) (CANH)

ETACS-ECU

INPUT SIGNAL

·FRONT WHEEL SPEED SENSOR
·REAR WHEEL SPEED SENSOR

ASTC-ECU (A-32)

CANL CANH FCSW

14 26 15

<T> (BR-W) <T> (L-W) (V-W)

20 21 (D-07)

2 F

<T>0. 35L <T>0. 35GR

16 5

21 10

<T>0. 35P <T>0. 35V

9 D

9 E

<M/T>

BACK-UP LAMP SWITCH

1 A

V-W

31 (D-416)

(BACK)

A-32

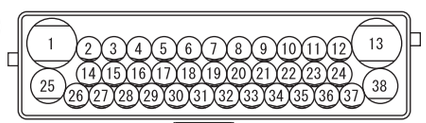

D-07



D-21



D-22



D-109



D-111



D-119

MU803797

FRONT SIDE



D-141



D-215



D-309



D-403

MU801857



D-409

1

D-415

(MU803766)



D-416

(MU803765)



Wire colour code

B : Black LG : Light green G : Green L : Blue W : White
Y : Yellow SB : Sky blue BR : Brown O : Orange GR : Grey
R : Red P : Pink V : Violet PU : Purple SI : Silver BE : Beige