




Apply the primer and adhesive along the fictitious lines (seal line) between the marks

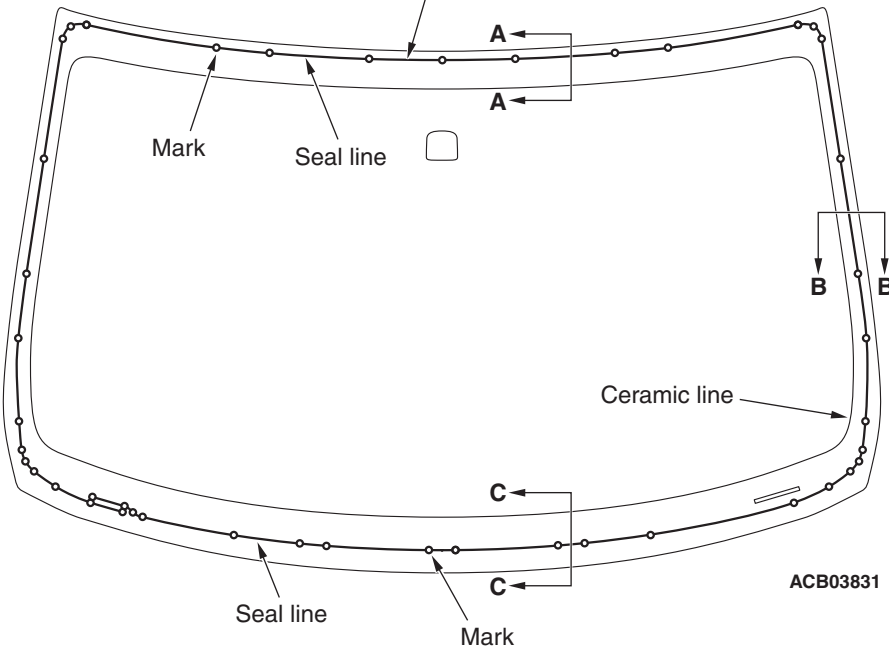


Section A - A

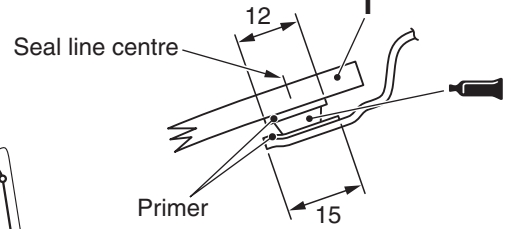

Section B - B

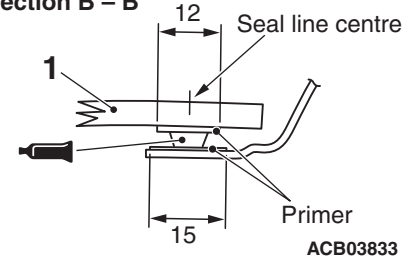

Section C - C

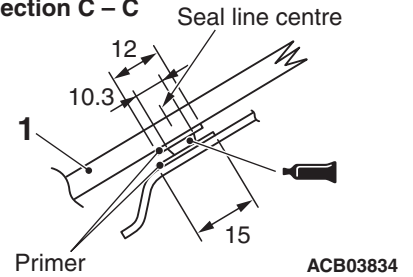

Adhesive: 3M ATD part No. 8609 Super Fast Urethane and 3M ATD Part No. 8608 Super Fast Urethane Primer or equivalent