


- NOTE
- *1 : -ETACS-ECU
-RADIO AND CD PLAYER
-REAR COMBINATION LAMP (BACK-UP)
-SPARE CONNECTOR (FOR AUDIO)
 - *2 : -4WD INDICATOR-ECU
-A/C-ECU
-COLUMN SWITCH
-COLUMN SWITCH (STEERING WHEEL SENSOR)
-ETACS-ECU
-GATEWAY-ECU
-SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID)
-TRANSFER-ECU
 - *3 : -GATEWAY-ECU
-SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID)
 - *4 : -A/C-ECU
-ASC OFF SWITCH
-COMBINATION METER
-DRIVE MODE-SELECTOR
-GLOVE BOX LAMP
-HAZARD WARNING LAMP SWITCH
-HEADLAMP MANUAL LEVELLING SWITCH
-HEATER CONTROLLER ASSEMBLY
-HILL DESCENT CONTROL SWITCH
-OFF-ROAD MODE SELECTOR
-RADIO AND CD PLAYER
-REAR COOLER CONTROL PANEL
-REAR DIFFERENTIAL LOCK SWITCH
-REAR DISPLAY UNIT
-REAR FAN SWITCH
-STEERING WHEEL REMOTE CONTROL SWITCH

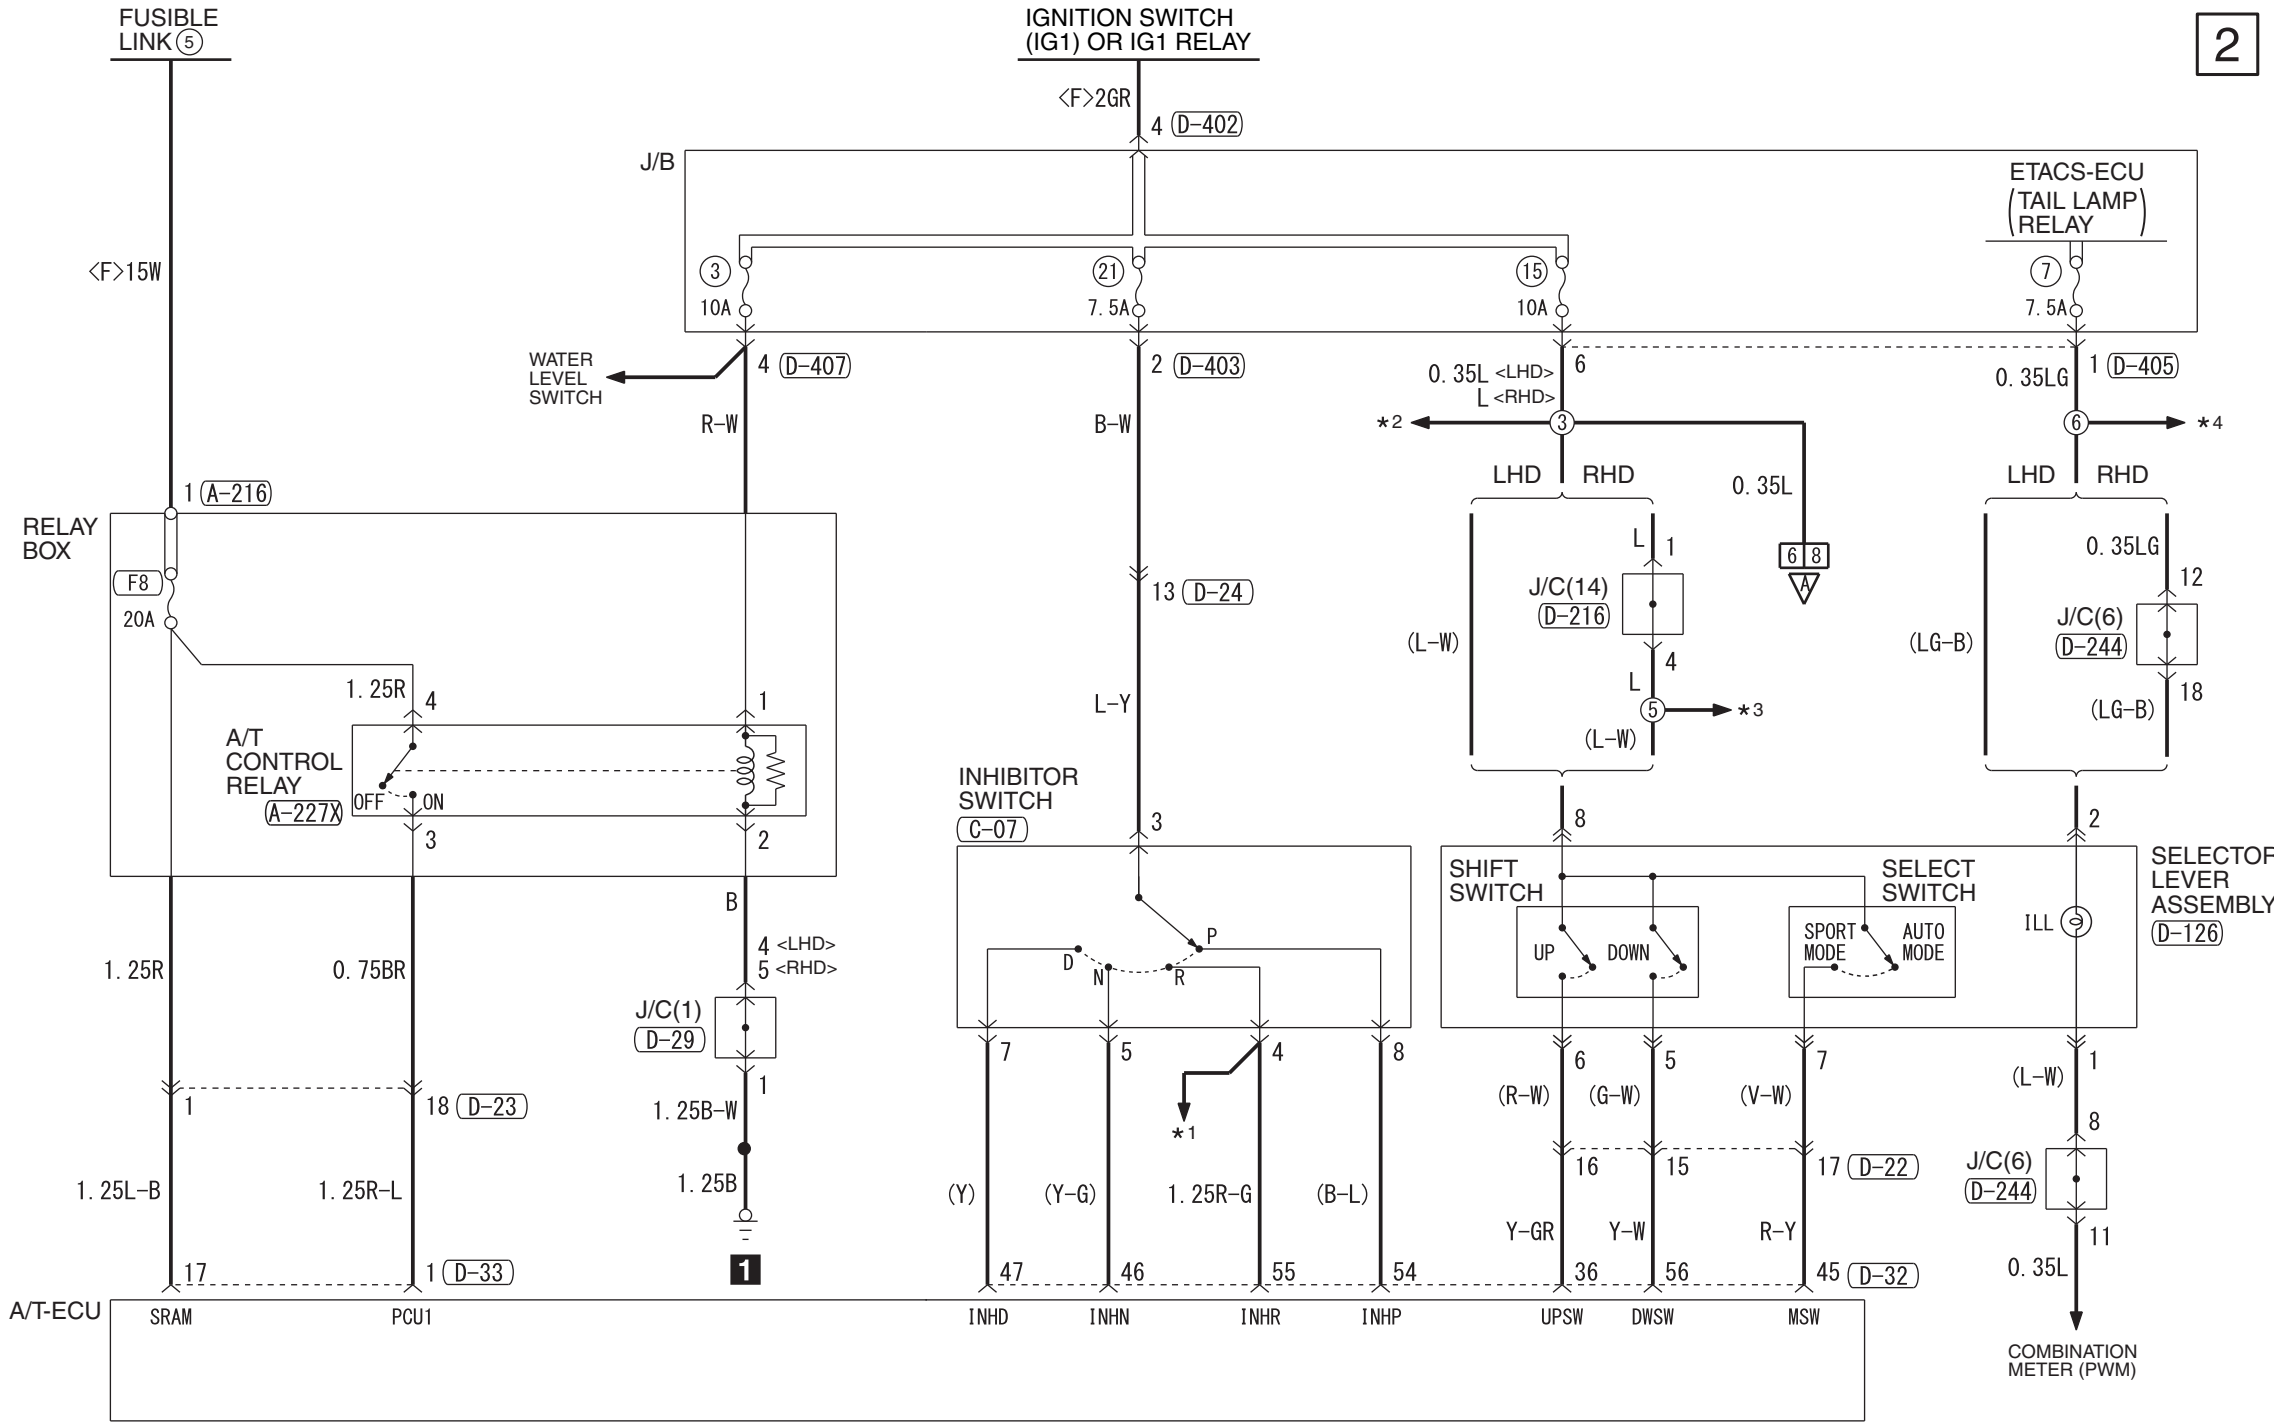

Wire colour code
 B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue BR : Brown
 O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver BE : Beige

Connector pinouts:

- (A-216)**: 1, 2, 3, 4
- (A-227X)**: 1, 2, 3, 4
- (C-07)**: 1, 2, 3, 4, 5, 6, 7, 8, 9
- (D-22)**: 1-18
- (D-23)**: 1-9
- (D-24)**: 1-14
- (D-29)**: 1-9
- (D-32)**: AMP 31-36
- (D-33)**: AMP 1-6
- (D-126)**: MU801451 1-10
- (D-216)**: 1-4
- (D-244)**: 1-22
- (D-402)**: MU801857 1-2
- (D-403)**: MU801857 1-6
- (D-405)**: MU801839 1-3
- (D-407)**: MU801867 1-4