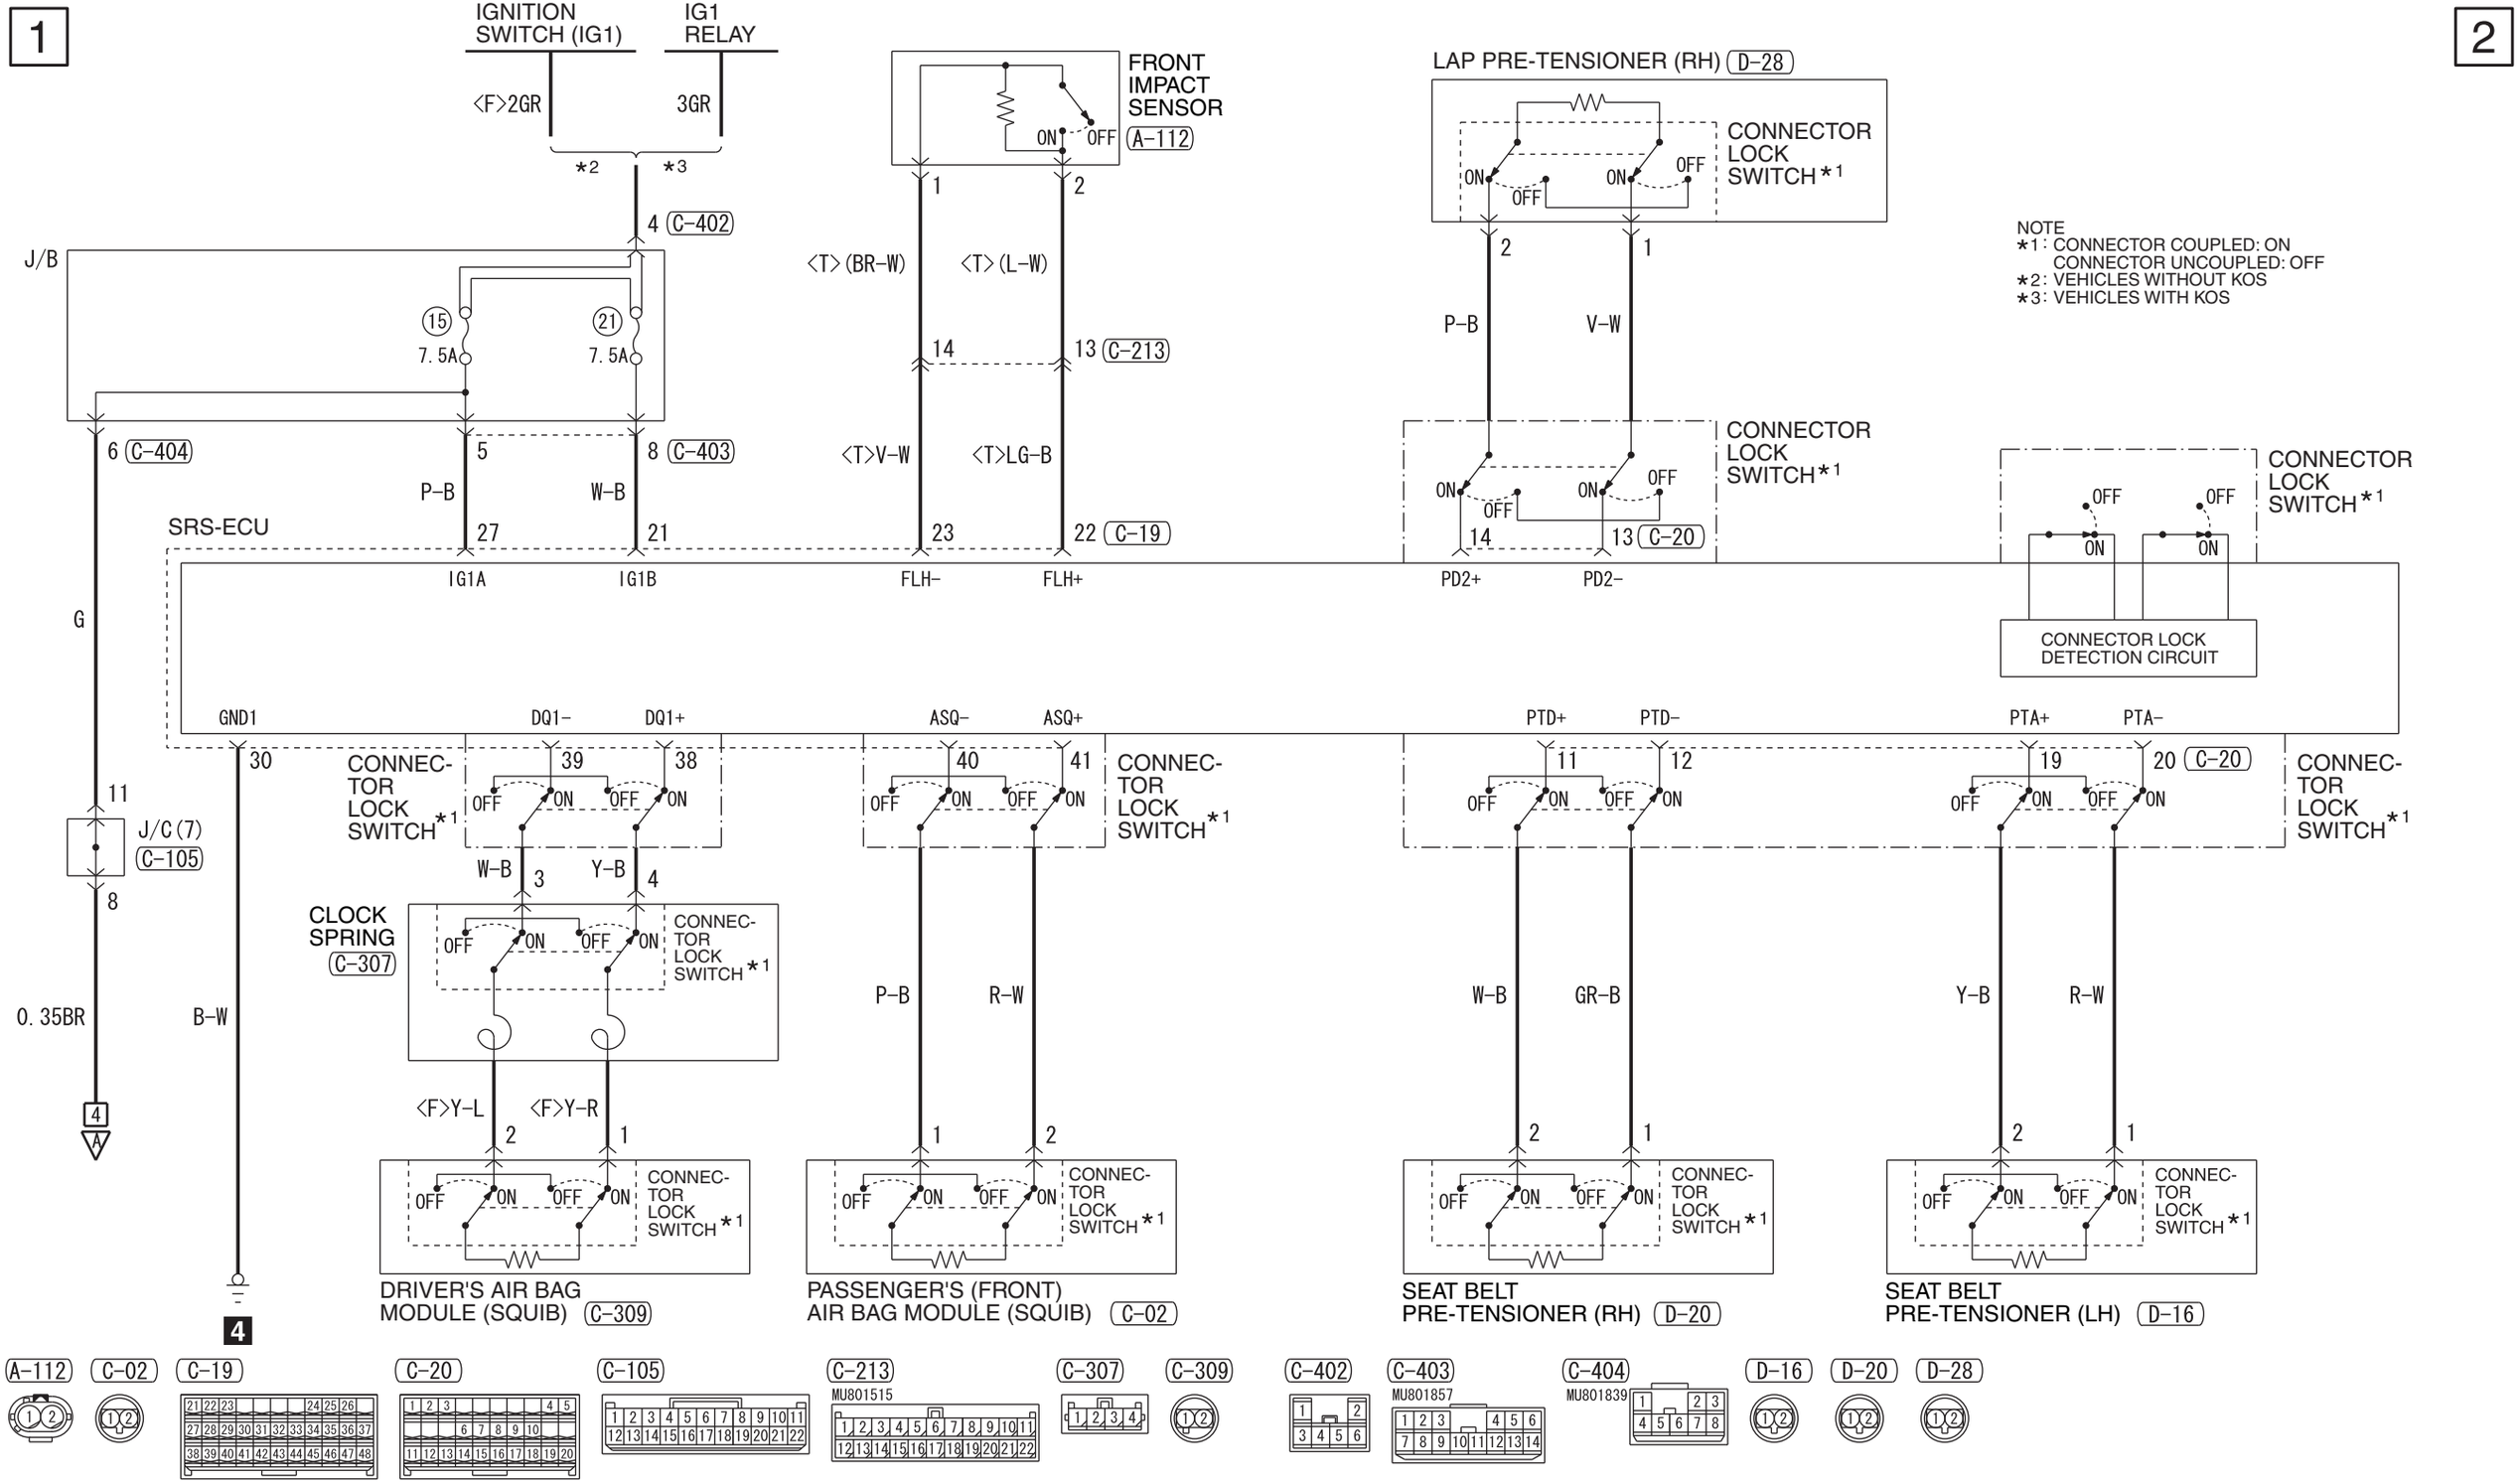
1
2
IGNITION SWITCH (IG1)
IG1 RELAY
<F>2GR
3GR
*2
*3
4 (C-402)
J/B
15
21
7.5A
7.5A
6 (C-404)
5
8 (C-403)
P-B
W-B
27
21
IG1A
IG1B
FRONT IMPACT SENSOR (A-112)
ON
OFF
1
2
<T>(BR-W)
<T>(L-W)
14
13 (C-213)
<T>V-W
<T>LG-B
23
22 (C-19)
FLH-
FLH+
LAP PRE-TENSIONER (RH) (D-28)
CONNECTOR LOCK SWITCH*1
P-B
V-W
14
13 (C-20)
PD2+
PD2-
CONNECTOR LOCK DETECTION CIRCUIT
NOTE
*1: CONNECTOR COUPLED: ON
CONNECTOR UNCOUPLED: OFF
*2: VEHICLES WITHOUT KOS
*3: VEHICLES WITH KOS
SRS-ECU
G
GND1
DQ1-
DQ1+
ASQ-
ASQ+
PTD+
PTD-
PTA+
PTA-
30
39
38
40
41
11
12
19
20 (C-20)
11
J/C (7) (C-105)
8
0.35BR
B-W
4
A
CLOCK SPRING (C-307)
W-B
3
Y-B
4
P-B
R-W
W-B
GR-B
Y-B
R-W
<F>Y-L
<F>Y-R
2
1
DRIVER'S AIR BAG MODULE (SQUIB) (C-309)
PASSENGER'S (FRONT) AIR BAG MODULE (SQUIB) (C-02)
SEAT BELT PRE-TENSIONER (RH) (D-20)
SEAT BELT PRE-TENSIONER (LH) (D-16)
4
A-112
C-02
C-19
C-20
C-105
C-213
MU801515
C-307
C-309
C-402
C-403
MU801857
C-404
MU801839
D-16
D-20
D-28
Wire colour code
B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue
BR : Brown O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver
ACF05462AB