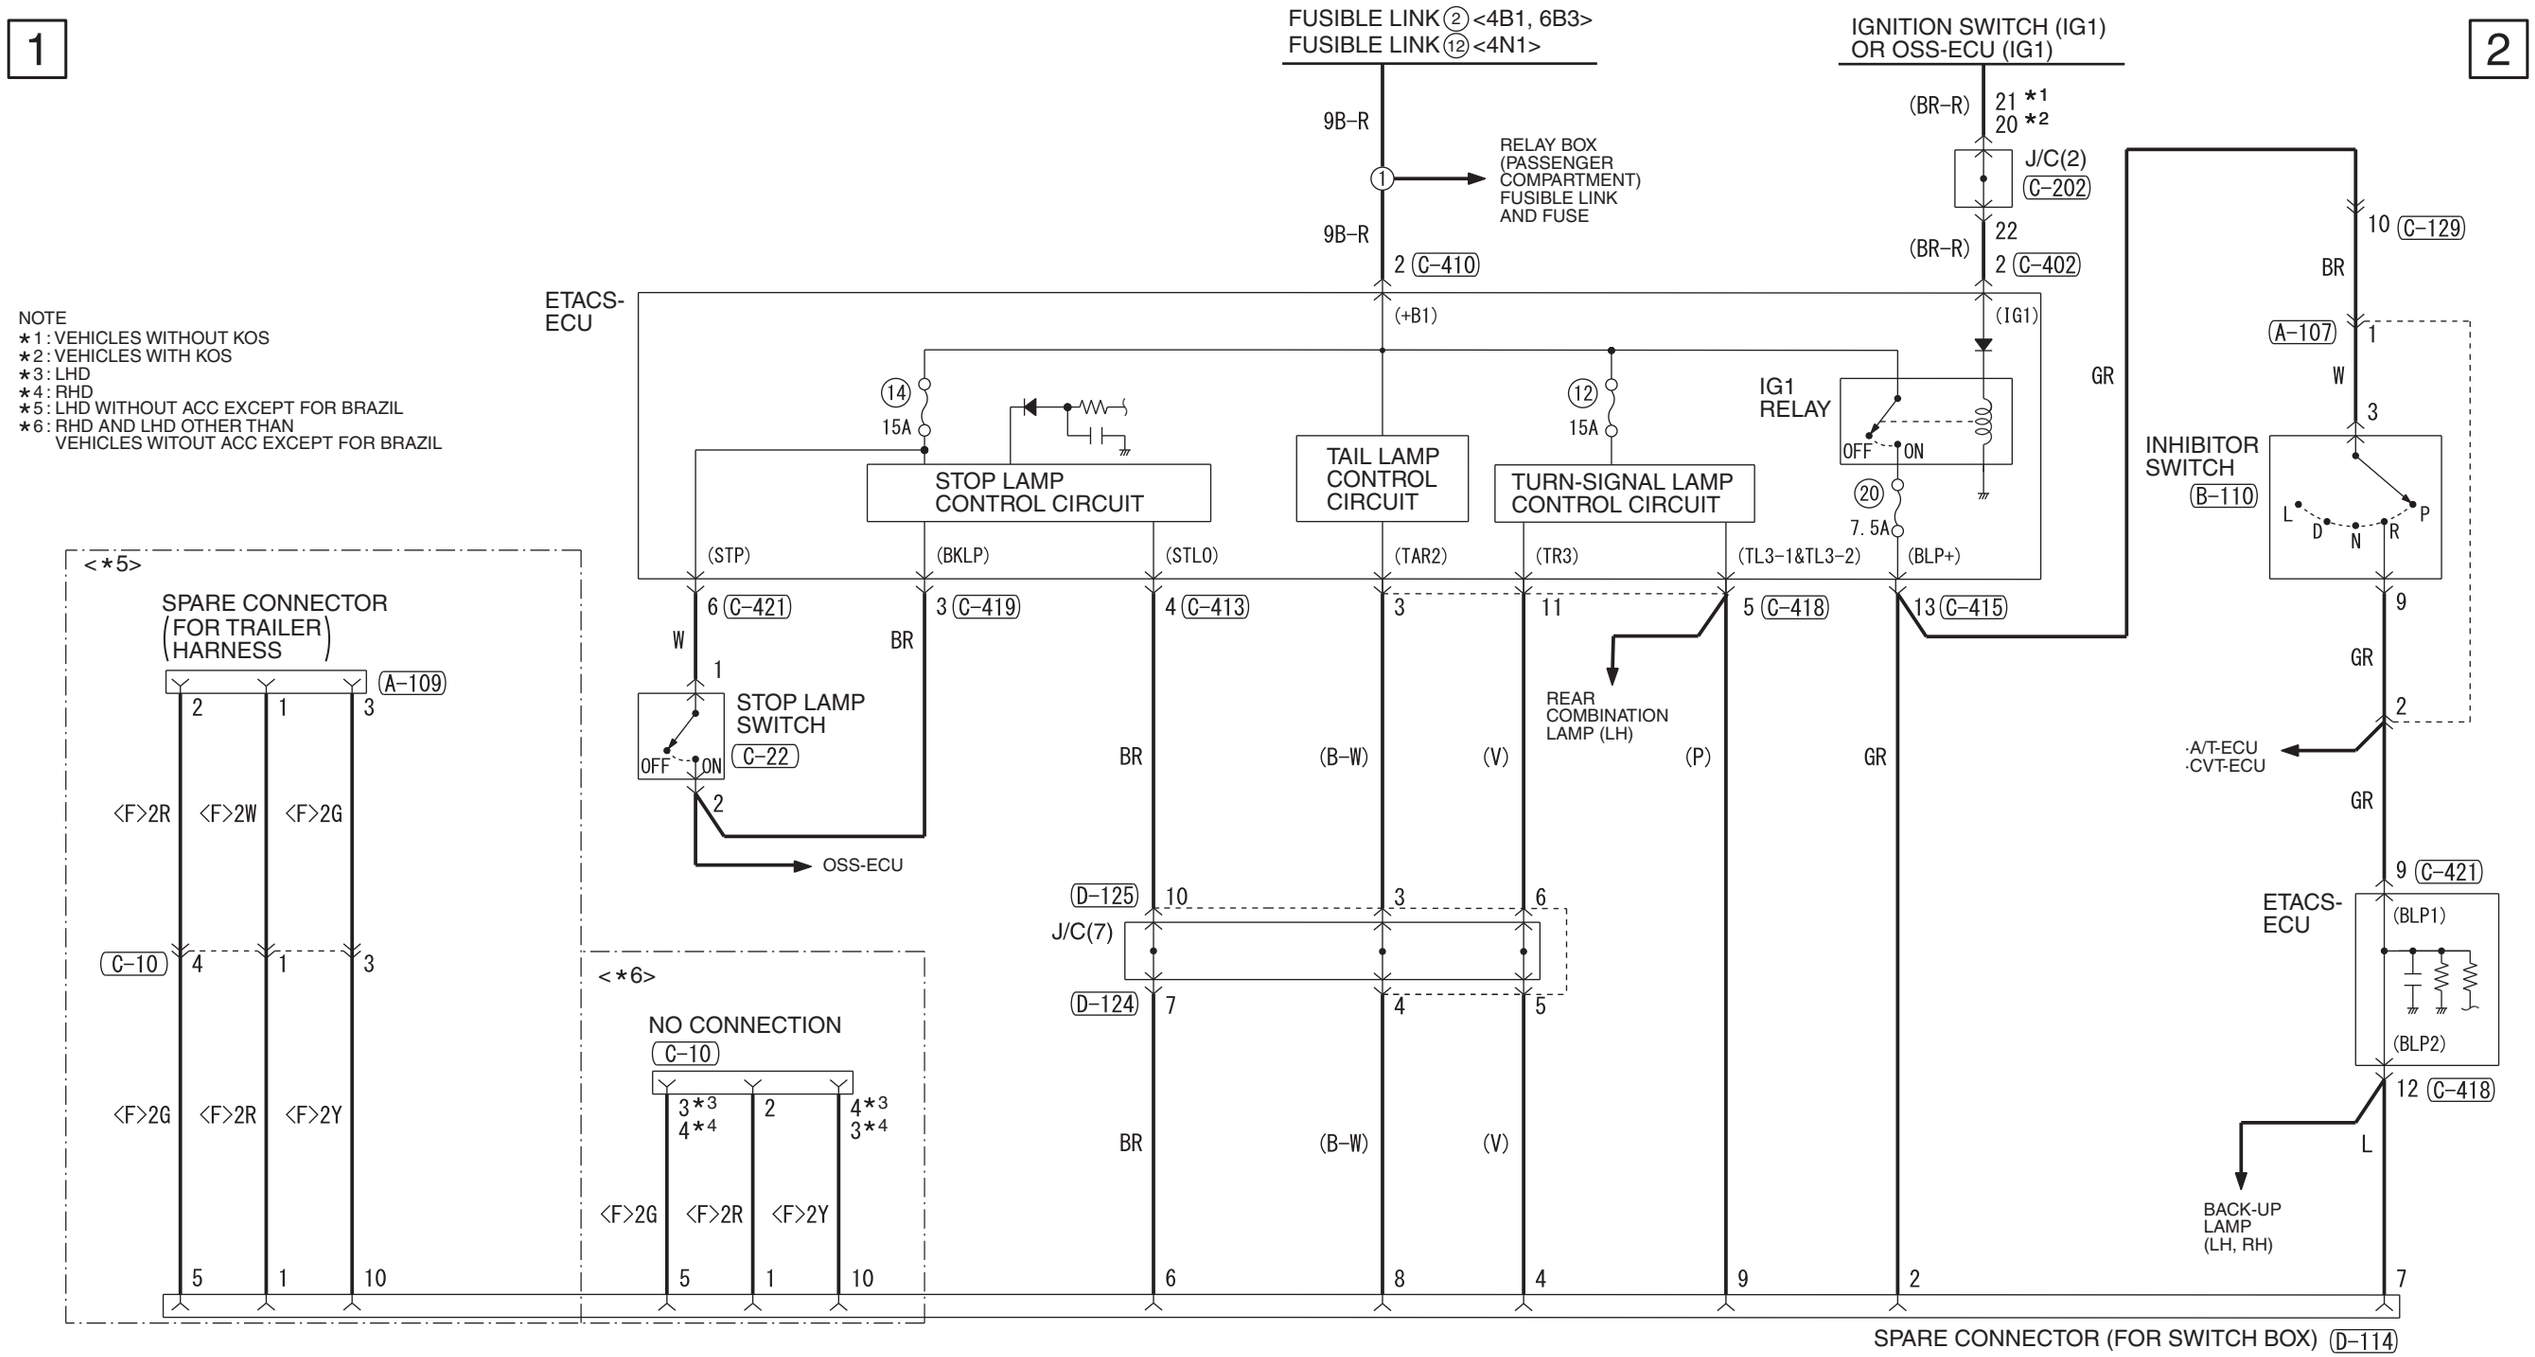
1
2
FUSIBLE LINK ② <4B1, 6B3>
FUSIBLE LINK ⑫ <4N1>
IGNITION SWITCH (IG1)
OR OSS-ECU (IG1)
9B-R
RELAY BOX (PASSENGER COMPARTMENT) FUSIBLE LINK AND FUSE
(BR-R)
21 *1
20 *2
J/C(2)
C-202
22
2 C-402
2 C-410
ETACS-ECU
(+B1)
(IG1)
10 C-129
BR
A-107
W
GR
14
15A
12
15A
IG1 RELAY
OFF
ON
20
7.5A
INHIBITOR SWITCH
B-110
L
D
N
R
P
STOP LAMP CONTROL CIRCUIT
TAIL LAMP CONTROL CIRCUIT
TURN-SIGNAL LAMP CONTROL CIRCUIT
(STP)
(BKLP)
(STLO)
(TAR2)
(TR3)
(TL3-1&TL3-2)
(BLP+)
6 C-421
3 C-419
4 C-413
3
11
5 C-418
13 C-415
9
W
BR
1
STOP LAMP SWITCH
C-22
OFF
ON
2
OSS-ECU
REAR COMBINATION LAMP (LH)
BR
(B-W)
(V)
(P)
GR
·A/T-ECU
·CVT-ECU
GR
9 C-421
ETACS-ECU
(BLP1)
(BLP2)
12 C-418
L
BACK-UP LAMP (LH, RH)
D-125
10
3
6
J/C(7)
D-124
7
4
5
BR
(B-W)
(V)
6
8
4
9
2
7
SPARE CONNECTOR (FOR SWITCH BOX) D-114
NOTE
*1: VEHICLES WITHOUT KOS
*2: VEHICLES WITH KOS
*3: LHD
*4: RHD
*5: LHD WITHOUT ACC EXCEPT FOR BRAZIL
*6: RHD AND LHD OTHER THAN VEHICLES WITOUT ACC EXCEPT FOR BRAZIL
<*5>
SPARE CONNECTOR (FOR TRAILER HARNESS)
A-109
2
1
3
<F>2R
<F>2W
<F>2G
C-10
4
1
3
<F>2G
<F>2R
<F>2Y
5
1
10
<*6>
NO CONNECTION
C-10
3*3
4*4
2
4*3
3*4
<F>2G
<F>2R
<F>2Y
5
1
10
A-107
MU801515
A-109
MU802084
B-110
MU802355
C-10
MU801687
<*5>
<*6>
MU801688
C-22
MU801687
C-129
(MU801971)
C-421
MU801843
D-114
MU801844
D-124
(MU801859)
D-125
(MU801859)
C-202
MU801515
C-402
MU801839
C-410
C-413
C-415
C-418
(MU801860)
C-419
MU801847
Wire colour code
B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue BR : Brown
O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver BE : Beige
HHU15X40AC