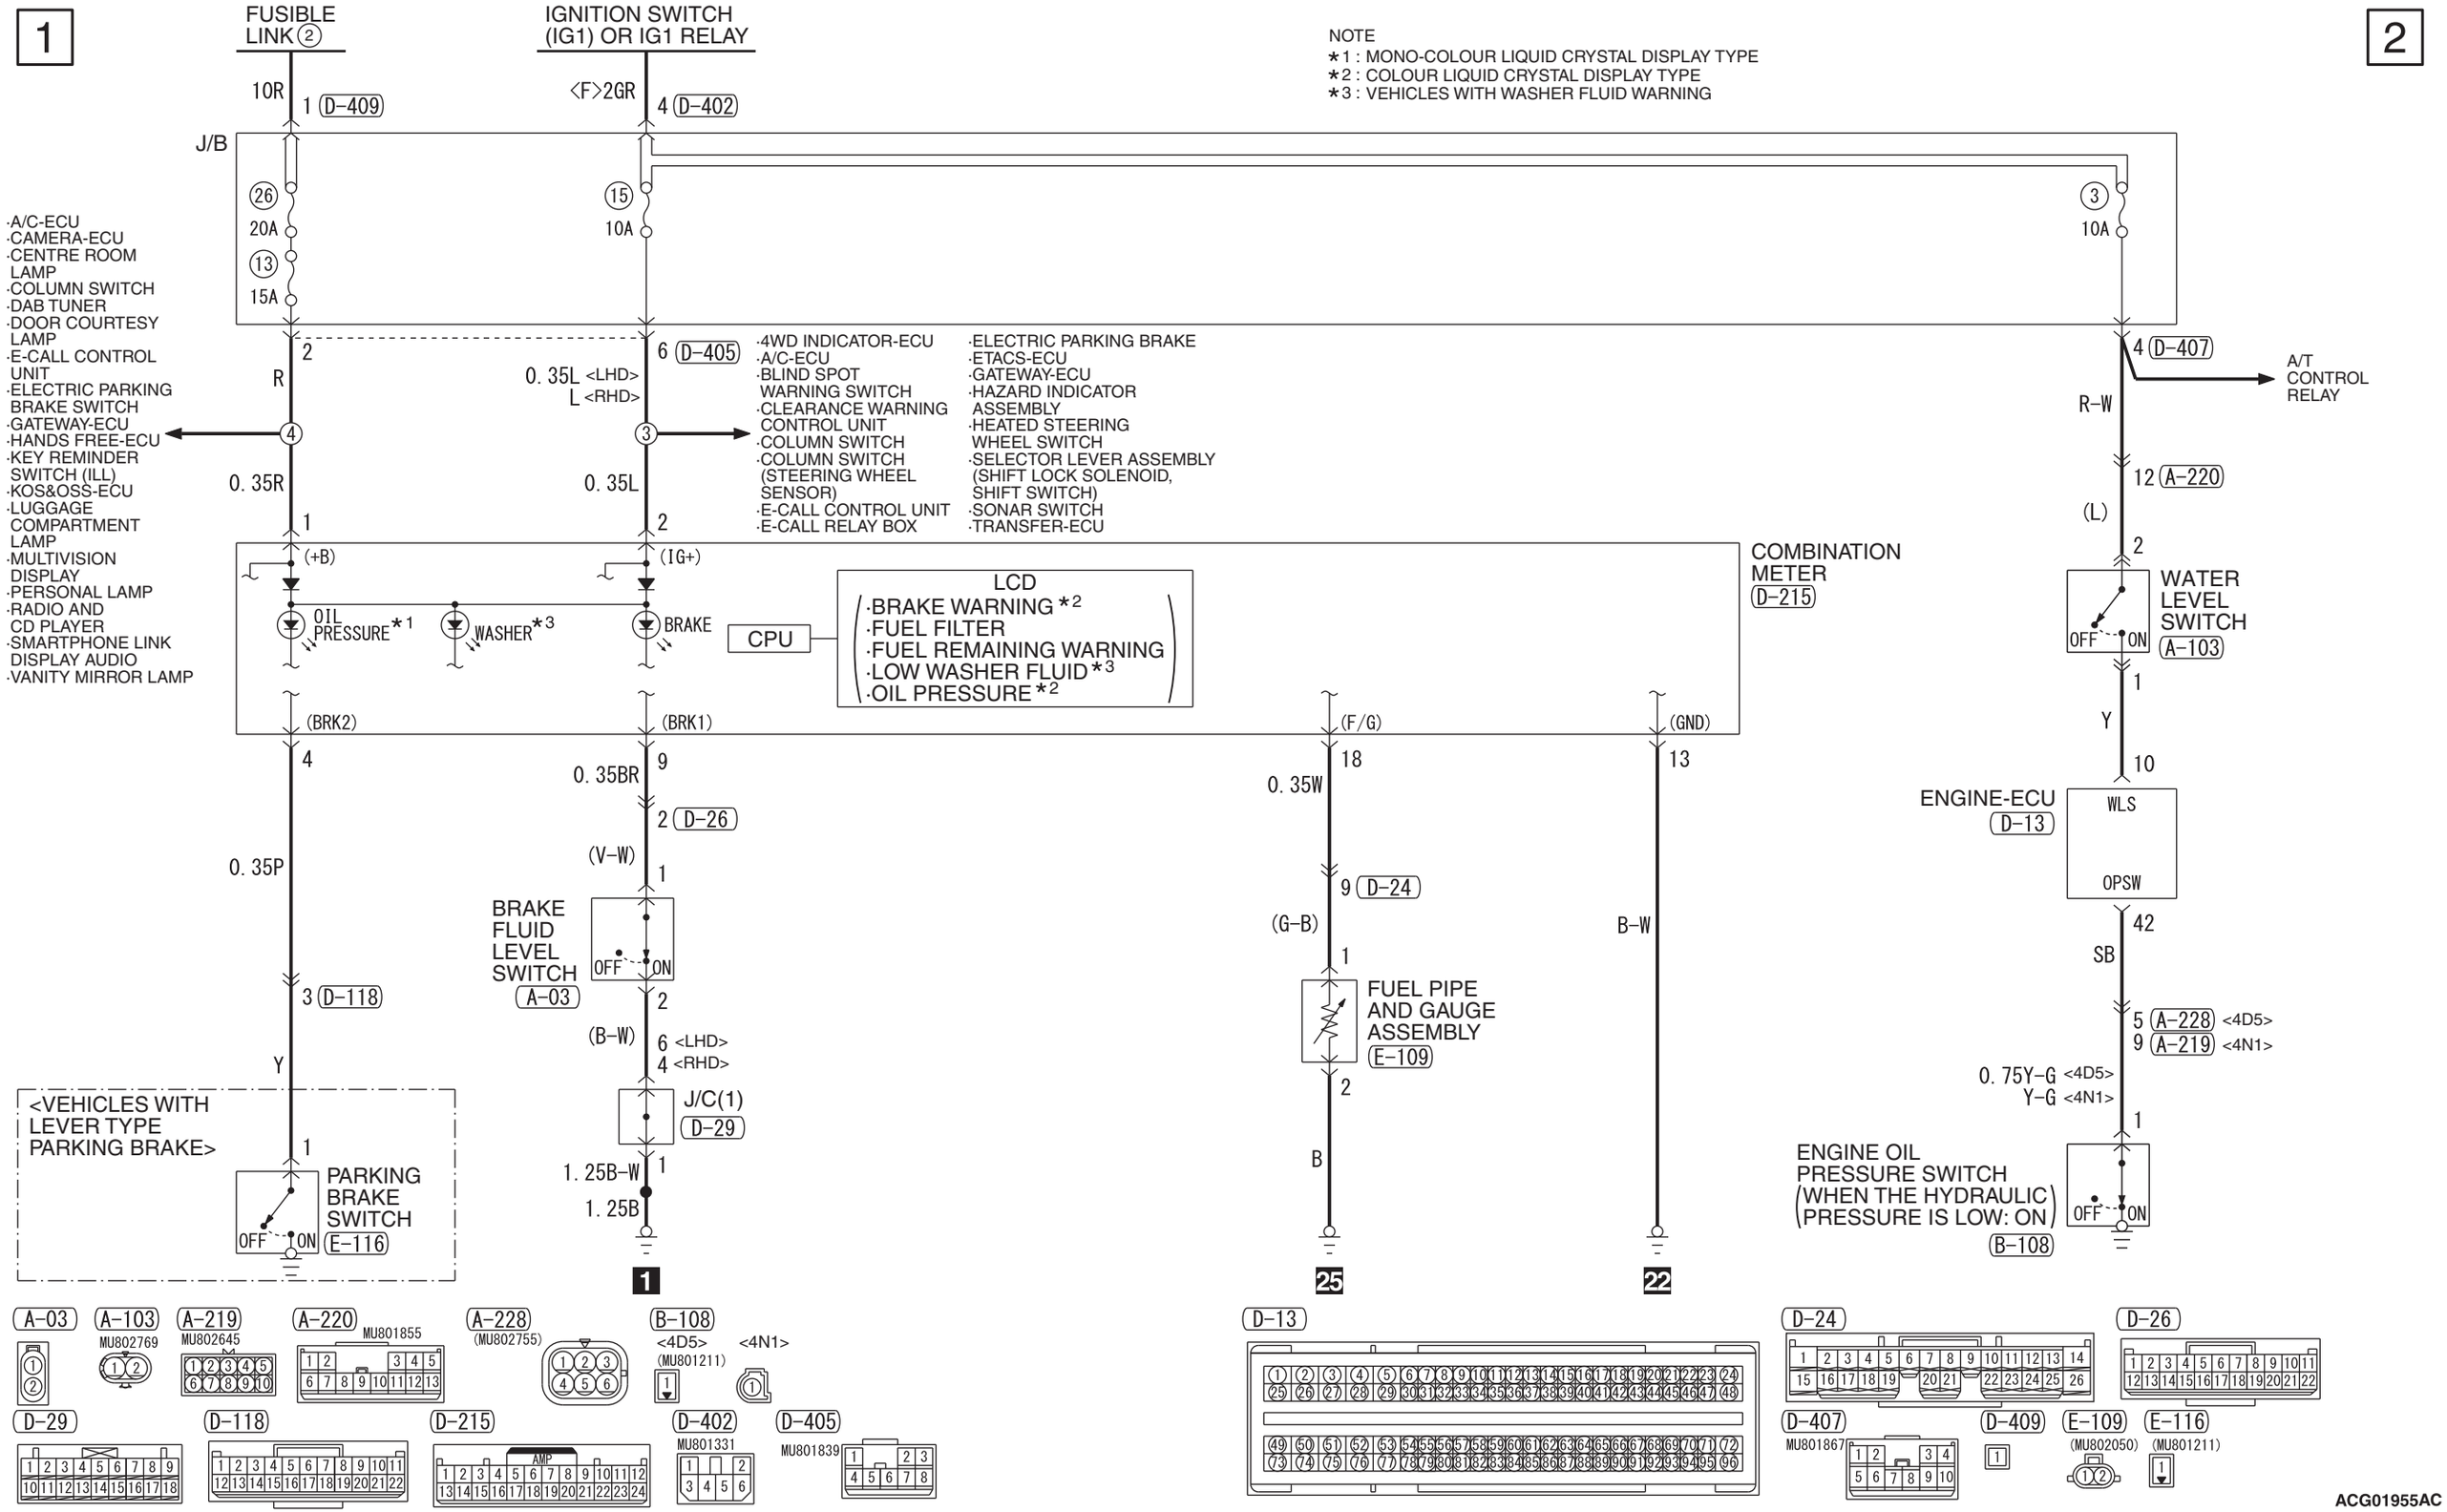
1
2
FUSIBLE LINK 2
IGNITION SWITCH (IG1) OR IG1 RELAY
NOTE
*1 : MONO-COLOUR LIQUID CRYSTAL DISPLAY TYPE
*2 : COLOUR LIQUID CRYSTAL DISPLAY TYPE
*3 : VEHICLES WITH WASHER FLUID WARNING
10R
1 D-409
<F>2GR
4 D-402
J/B
26
20A
13
15A
15
10A
3
10A
·A/C-ECU
·CAMERA-ECU
·CENTRE ROOM LAMP
·COLUMN SWITCH
·DAB TUNER
·DOOR COURTESY LAMP
·E-CALL CONTROL UNIT
·ELECTRIC PARKING BRAKE SWITCH
·GATEWAY-ECU
·HANDS FREE-ECU
·KEY REMINDER SWITCH (ILL)
·KOS&OSS-ECU
·LUGGAGE COMPARTMENT LAMP
·MULTIVISION DISPLAY
·PERSONAL LAMP
·RADIO AND CD PLAYER
·SMARTPHONE LINK DISPLAY AUDIO
·VANITY MIRROR LAMP
2
R
4
0. 35R
1
6 D-405
0. 35L <LHD>
L <RHD>
3
0. 35L
2
·4WD INDICATOR-ECU
·A/C-ECU
·BLIND SPOT WARNING SWITCH
·CLEARANCE WARNING CONTROL UNIT
·COLUMN SWITCH
·COLUMN SWITCH (STEERING WHEEL SENSOR)
·E-CALL CONTROL UNIT
·E-CALL RELAY BOX
·ELECTRIC PARKING BRAKE
·ETACS-ECU
·GATEWAY-ECU
·HAZARD INDICATOR ASSEMBLY
·HEATED STEERING WHEEL SWITCH
·SELECTOR LEVER ASSEMBLY (SHIFT LOCK SOLENOID, SHIFT SWITCH)
·SONAR SWITCH
·TRANSFER-ECU
4 D-407
A/T CONTROL RELAY
R-W
12 A-220
(L)
2
(+B)
(IG+)
OIL PRESSURE *1
WASHER *3
BRAKE
CPU
LCD
·BRAKE WARNING *2
·FUEL FILTER
·FUEL REMAINING WARNING
·LOW WASHER FLUID *3
·OIL PRESSURE *2
COMBINATION METER D-215
WATER LEVEL SWITCH A-103
OFF ON
1
Y
10
(BRK2)
(BRK1)
(F/G)
(GND)
4
0. 35P
3 D-118
Y
<VEHICLES WITH LEVER TYPE PARKING BRAKE>
1
PARKING BRAKE SWITCH E-116
OFF ON
9
0. 35BR
2 D-26
(V-W)
1
BRAKE FLUID LEVEL SWITCH A-03
OFF ON
2
(B-W)
6 <LHD>
4 <RHD>
J/C(1) D-29
1. 25B-W
1
1. 25B
18
0. 35W
9 D-24
(G-B)
1
FUEL PIPE AND GAUGE ASSEMBLY E-109
2
B
13
B-W
25
22
ENGINE-ECU D-13
WLS
OPSW
42
SB
5 A-228 <4D5>
9 A-219 <4N1>
0. 75Y-G <4D5>
Y-G <4N1>
1
ENGINE OIL PRESSURE SWITCH (WHEN THE HYDRAULIC PRESSURE IS LOW: ON) B-108
OFF ON
A-03
A-103
MU802769
A-219
MU802645
A-220
MU801855
A-228
(MU802755)
B-108
<4D5>
(MU801211)
<4N1>
D-29
D-118
D-215
AMP
D-402
MU801331
D-405
MU801839
D-13
D-24
D-26
D-407
MU801867
D-409
E-109
(MU802050)
E-116
(MU801211)
ACG01955AC