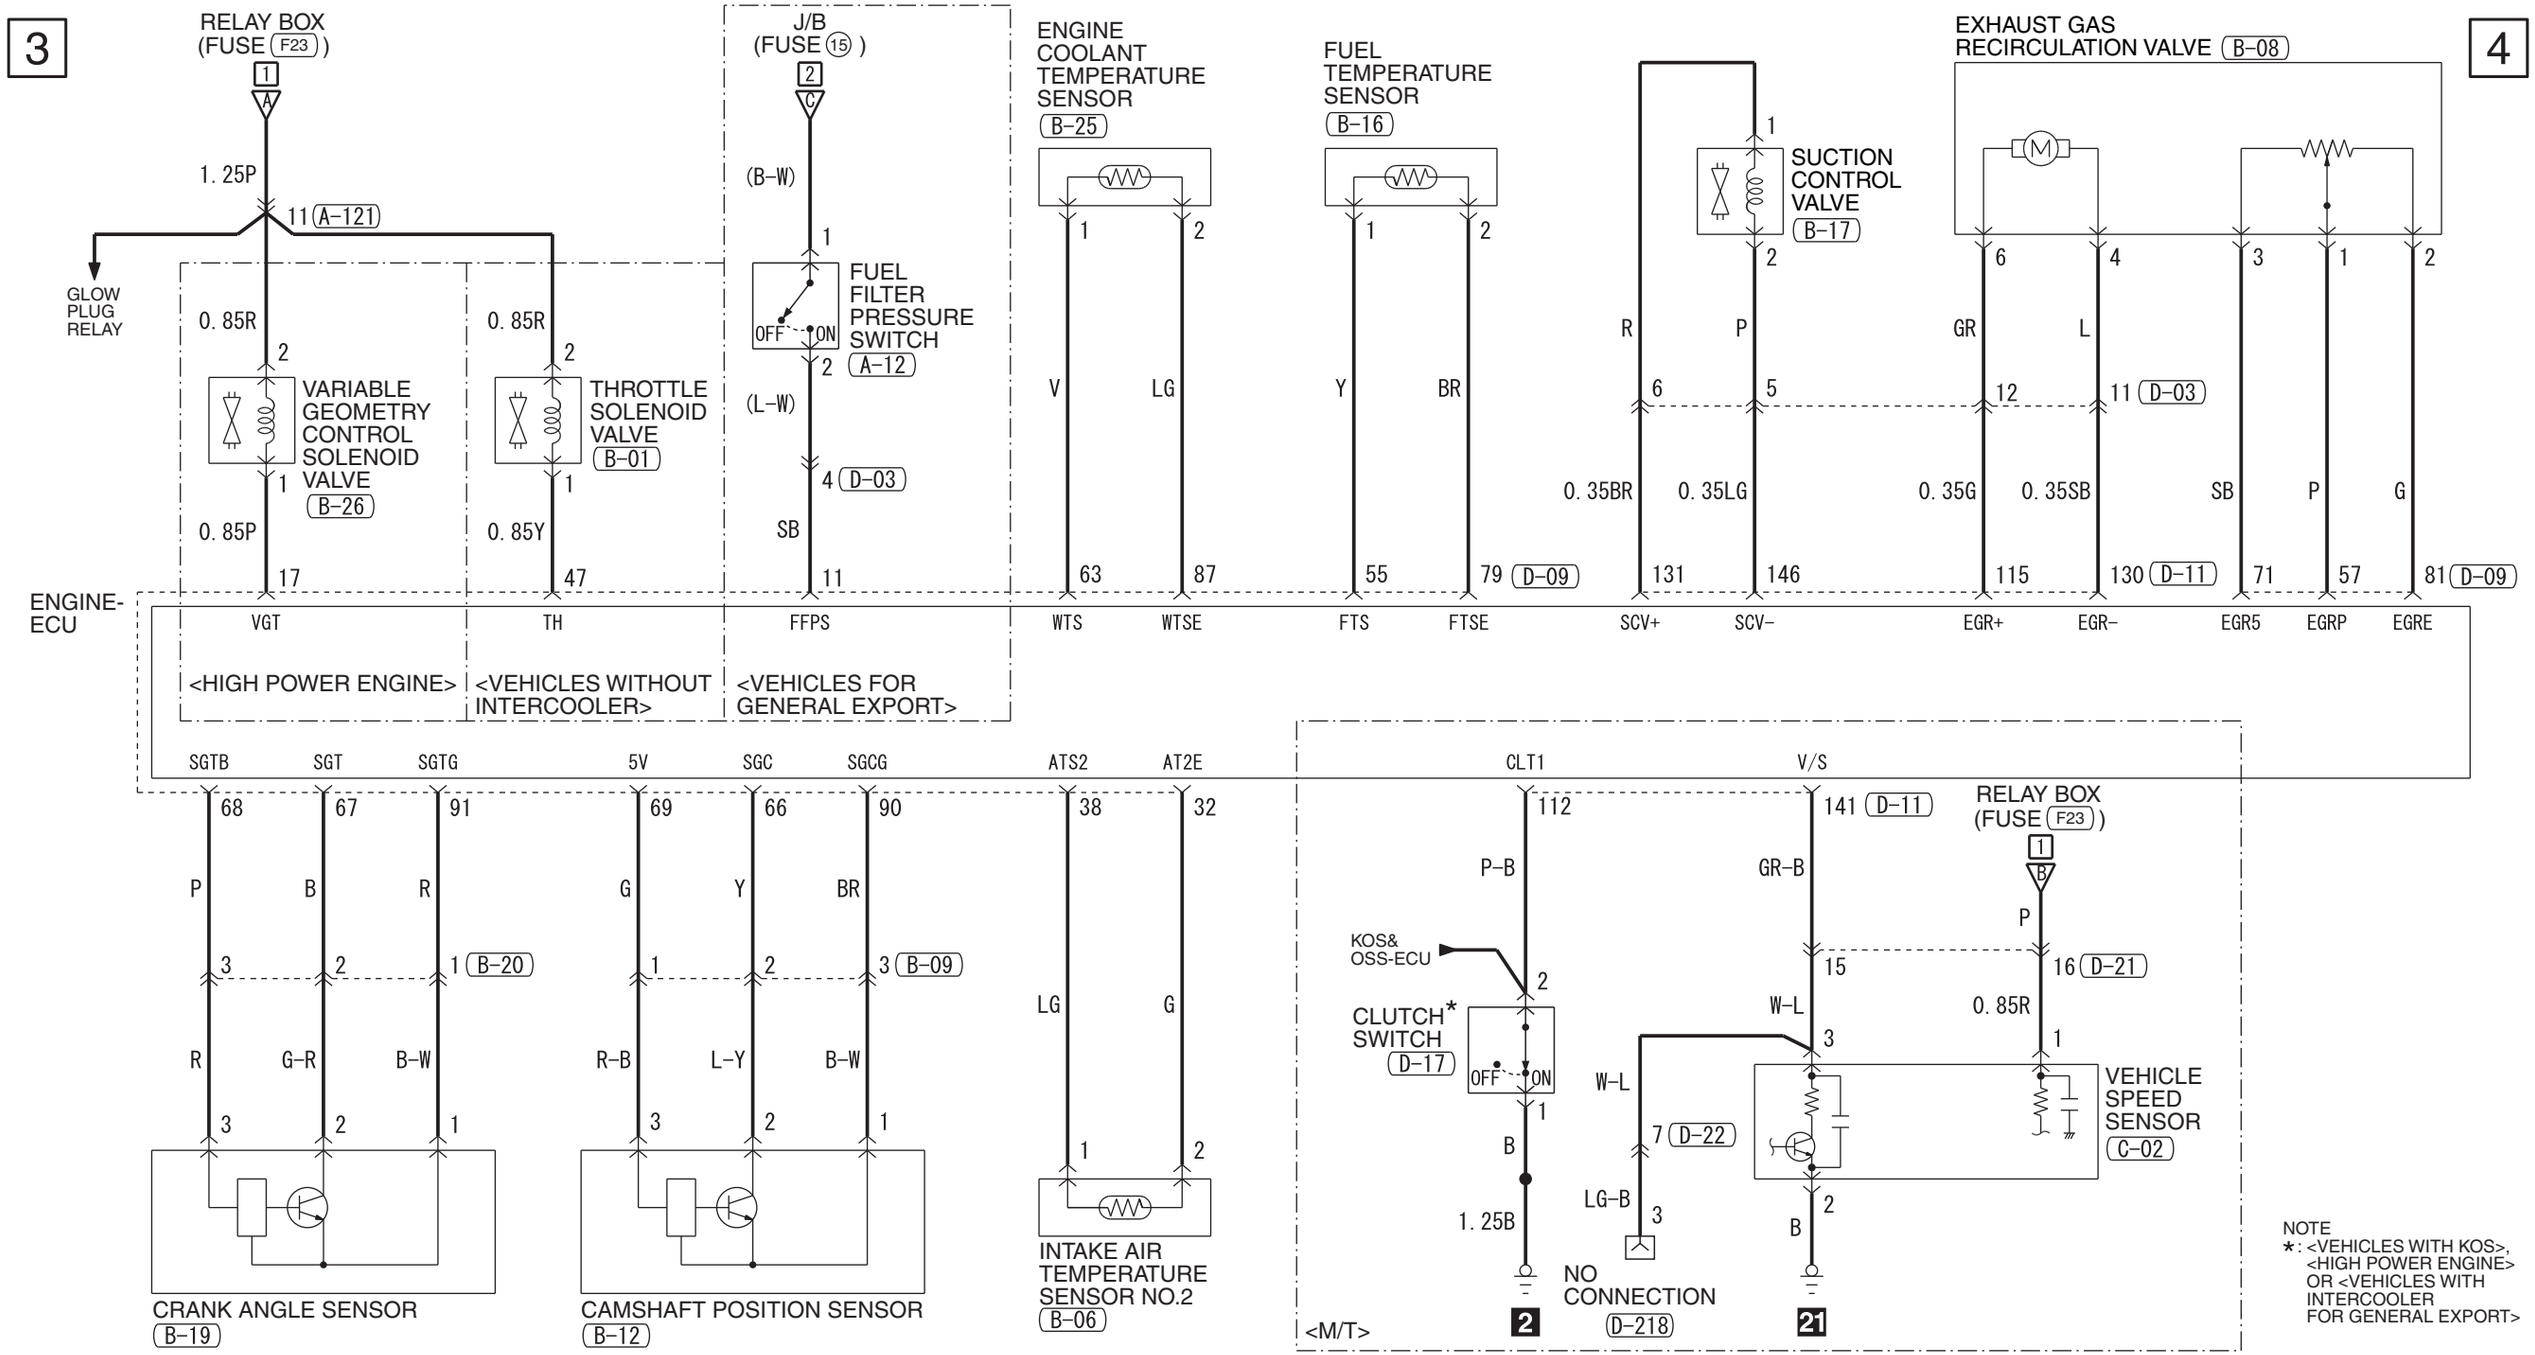
3
4
RELAY BOX
(FUSE F23)
J/B
(FUSE 15)
GLOW PLUG RELAY
1.25P
11 A-121
0.85R
VARIABLE GEOMETRY CONTROL SOLENOID VALVE B-26
0.85P
THROTTLE SOLENOID VALVE B-01
0.85Y
(B-W)
FUEL FILTER PRESSURE SWITCH A-12
OFF
ON
(L-W)
4 D-03
SB
ENGINE COOLANT TEMPERATURE SENSOR B-25
V
LG
FUEL TEMPERATURE SENSOR B-16
Y
BR
SUCTION CONTROL VALVE B-17
R
P
0.35BR
0.35LG
EXHAUST GAS RECIRCULATION VALVE B-08
GR
L
0.35G
0.35SB
SB
P
G
11 D-03
ENGINE-ECU
VGT
TH
FFPS
WTS
WTSE
FTS
FTSE
SCV+
SCV-
EGR+
EGR-
EGR5
EGRP
EGRE
17
47
11
63
87
55
79 D-09
131
146
115
130 D-11
71
57
81 D-09
<HIGH POWER ENGINE>
<VEHICLES WITHOUT INTERCOOLER>
<VEHICLES FOR GENERAL EXPORT>
SGTB
SGT
SGTG
5V
SGC
SGCG
ATS2
AT2E
CLT1
V/S
68
67
91
69
66
90
38
32
112
141 D-11
P
B
R
G
Y
BR
LG
G
3
2
1 B-20
1
2
3 B-09
CRANK ANGLE SENSOR B-19
CAMSHAFT POSITION SENSOR B-12
INTAKE AIR TEMPERATURE SENSOR NO.2 B-06
P-B
KOS& OSS-ECU
CLUTCH* SWITCH D-17
B
1.25B
2
<M/T>
GR-B
W-L
W-L
7 D-22
LG-B
NO CONNECTION D-218
21
RELAY BOX
(FUSE F23)
P
15
16 D-21
0.85R
VEHICLE SPEED SENSOR C-02
NOTE
*: <VEHICLES WITH KOS>, <HIGH POWER ENGINE> OR <VEHICLES WITH INTERCOOLER FOR GENERAL EXPORT>
A-12
A-121
MU801855
B-01
MU802779
B-06
(MU802409)
B-08
(MU802056)
B-09
MU802607
D-03
D-09
D-11
B-12
MU802337
B-16
(MU802406)
B-17
(MU802768)
B-19
MU802337
B-20
MU802603
B-25
(MU802406)
B-26
(MU802034)
C-02
(MU802723)
D-17
MU801669
D-21
D-22
D-218
MU801452
HGC05X04BC